
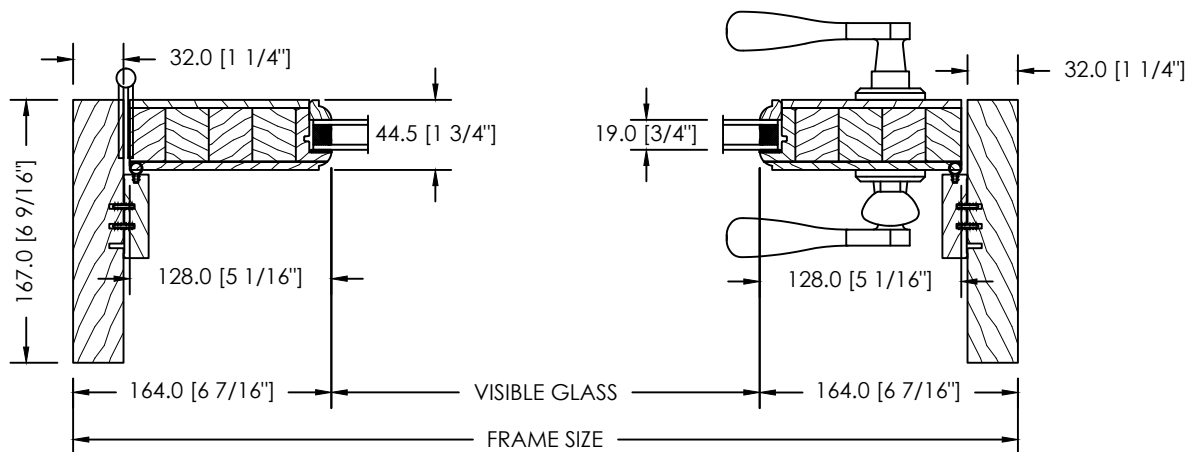
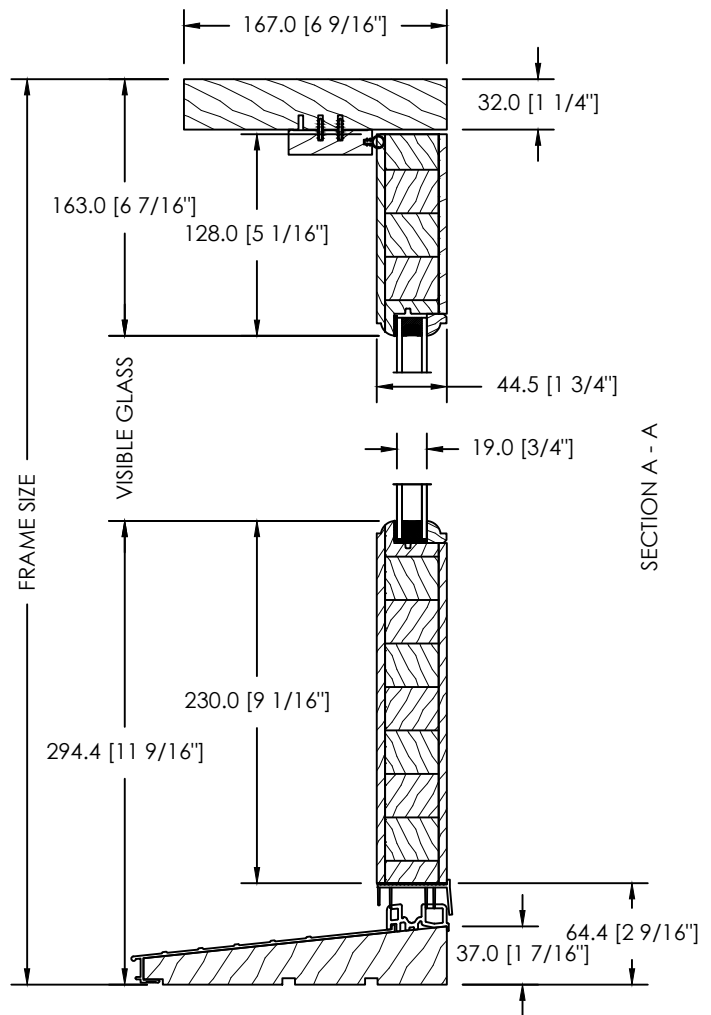





6 $\frac{9}{16}$ " FRAME - 5" x 1 $\frac{3}{4}$ " SASH

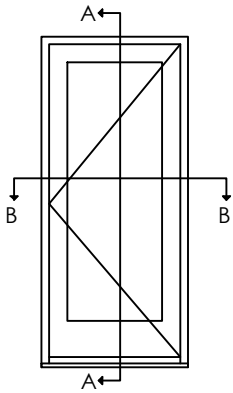

SECTION B - B

WOOD INSWING FRENCH DOOR




6 $\frac{9}{16}$ " FRAME - 5" x 1 $\frac{3}{4}$ " SASH

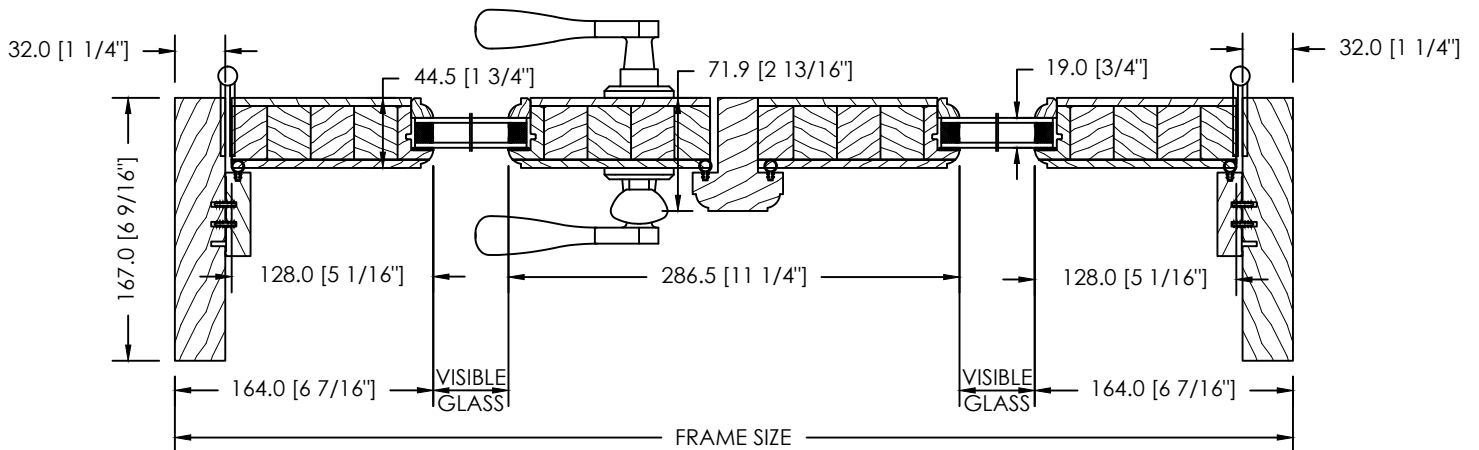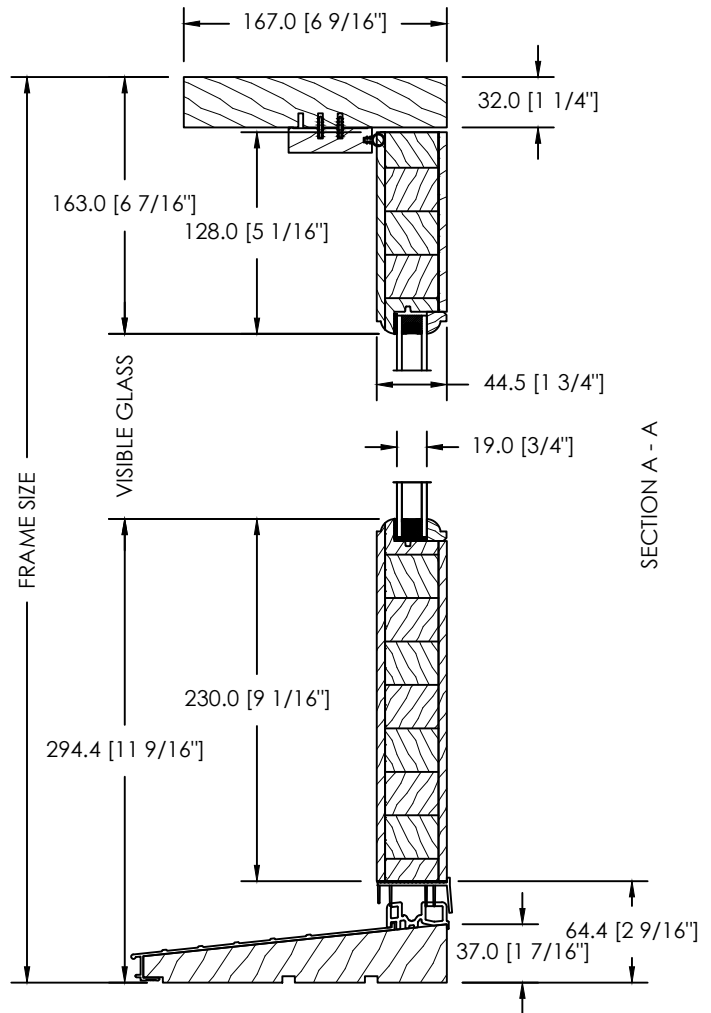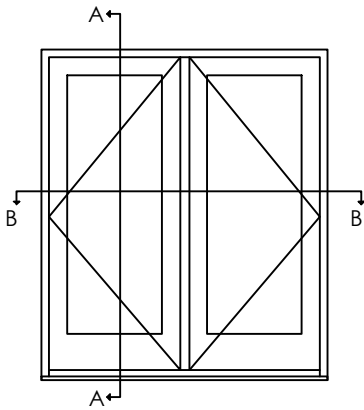

SECTION B - B




WOOD INSWING FRENCH DOOR

6 $\frac{2}{16}$ " FRAME - 3 $\frac{5}{8}$ " x 1 $\frac{3}{4}$ " SASH

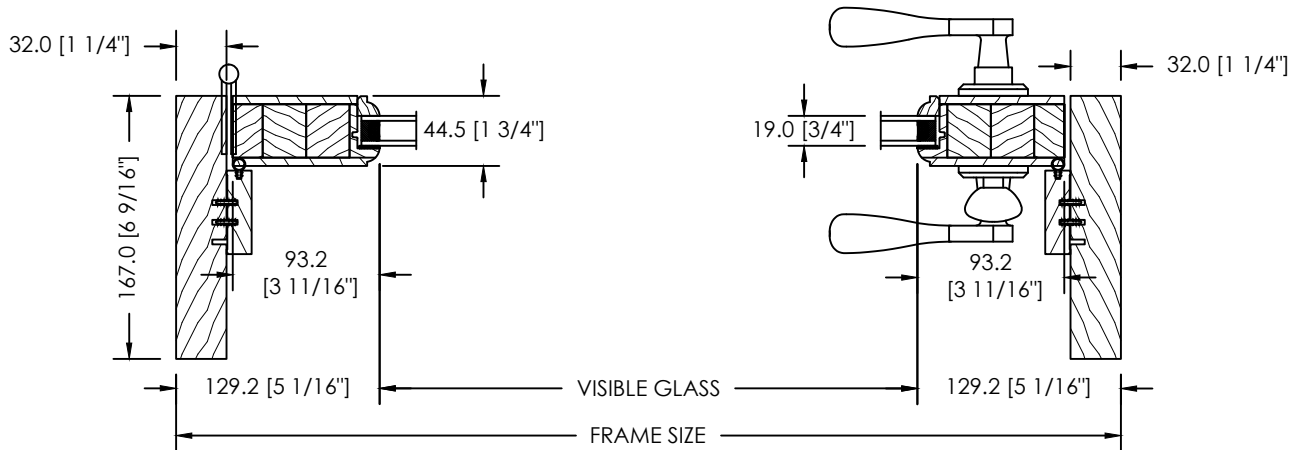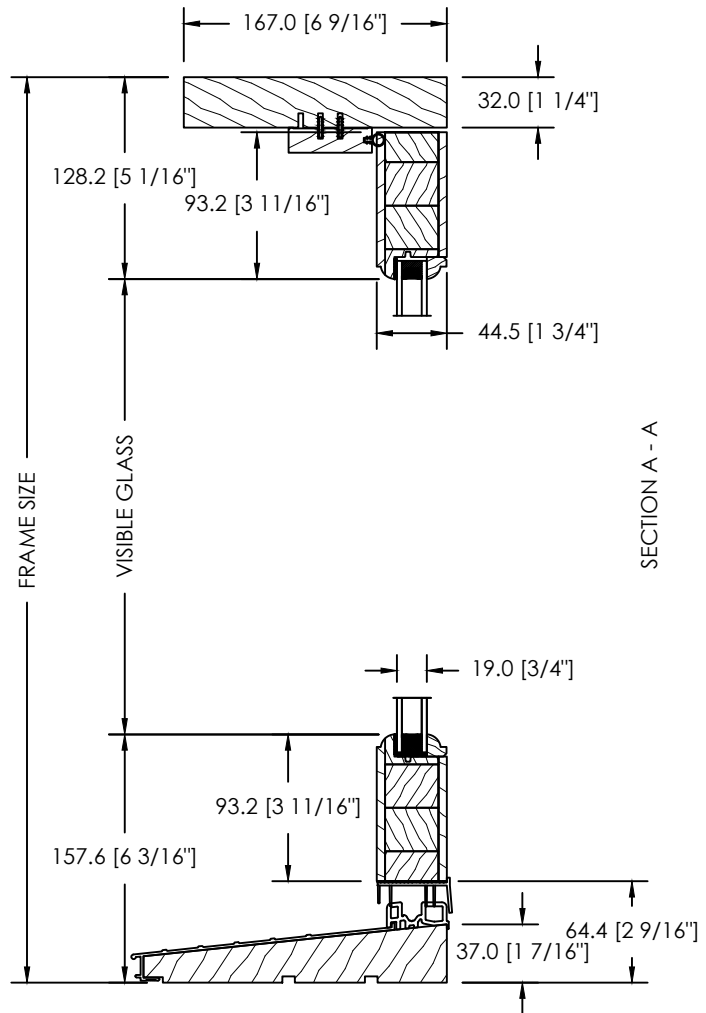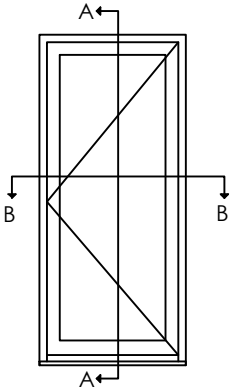




WOOD INSWING FRENCH DOOR

6 $\frac{9}{16}$ " FRAME - 5" x 2 $\frac{1}{4}$ " SASH

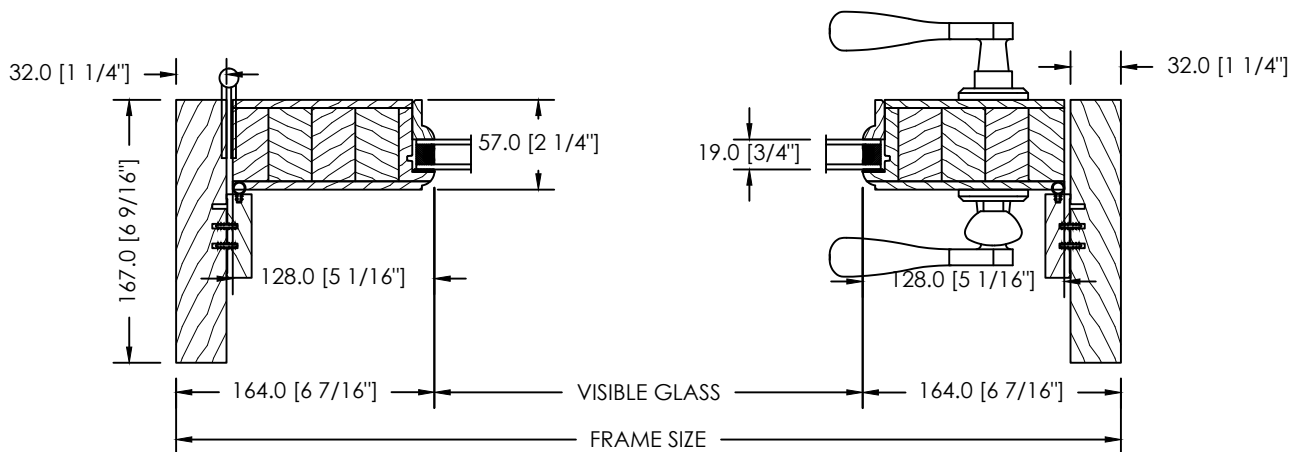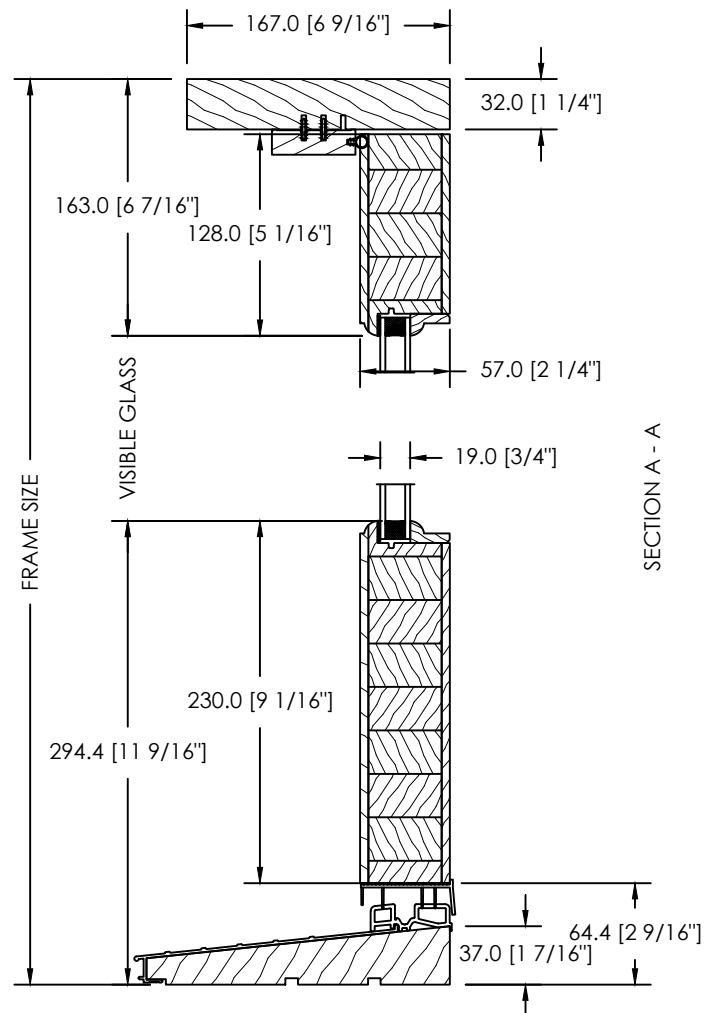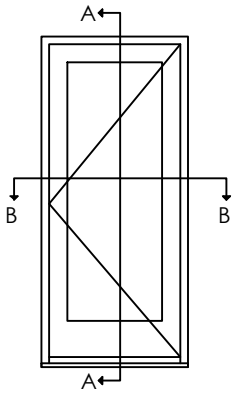




WOOD INSWING FRENCH DOOR

6 ⁹/₁₆" FRAME - 5" x 2 ¹/₄" SASH

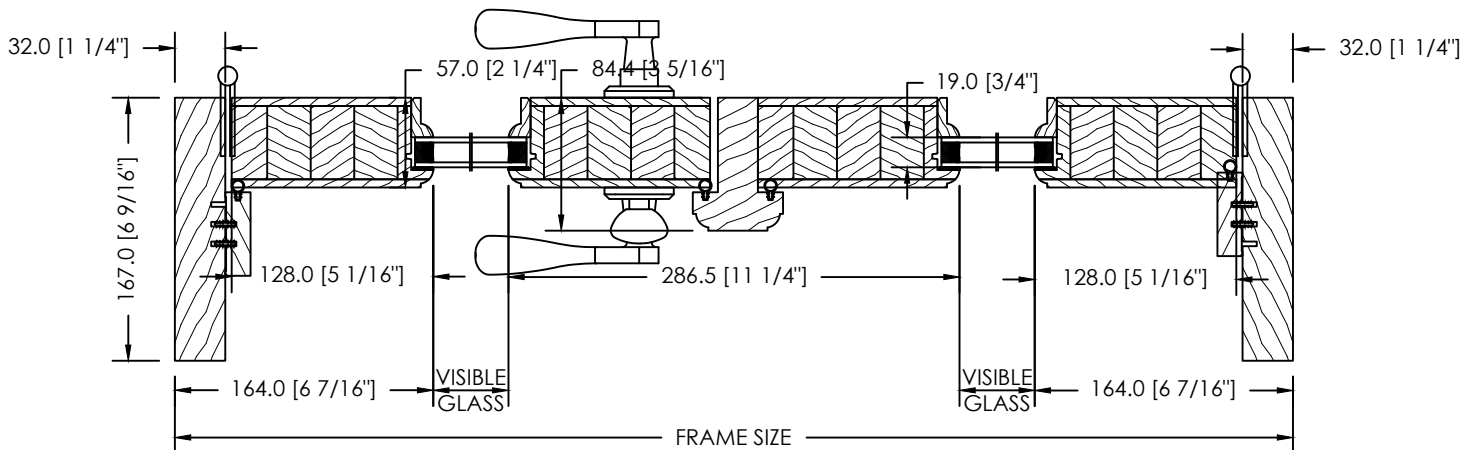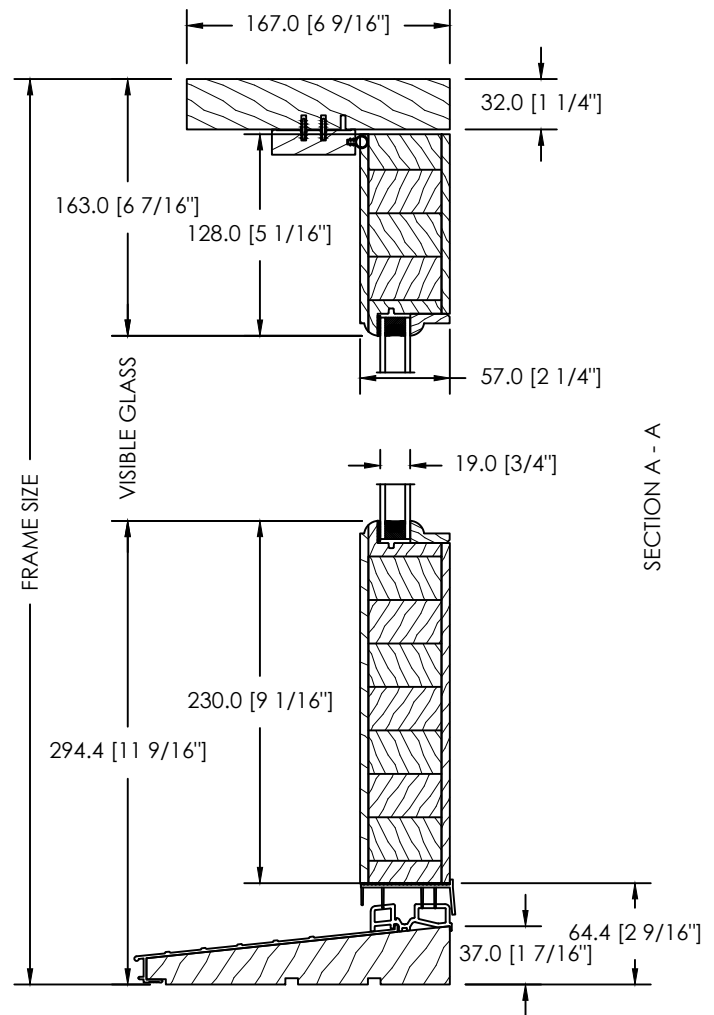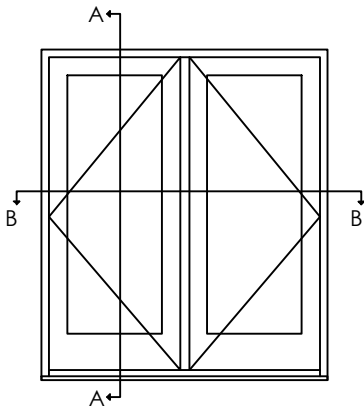

SECTION B - B



WOOD INSWING FRENCH DOOR
 $6\frac{9}{16}$ " FRAME - $5" \times 2\frac{1}{4}"$ SASH - OPTION TRIPLE I.G.

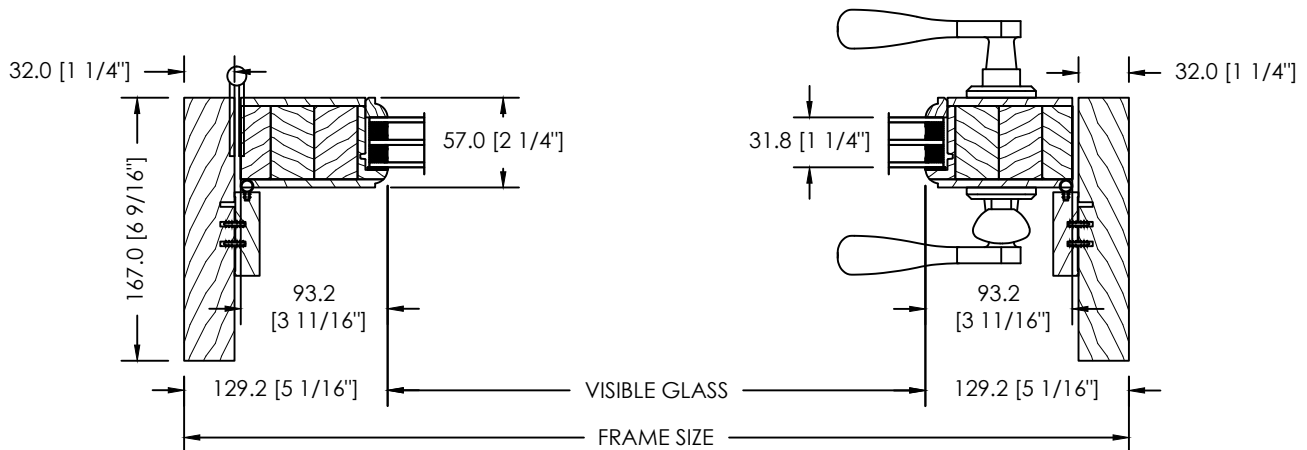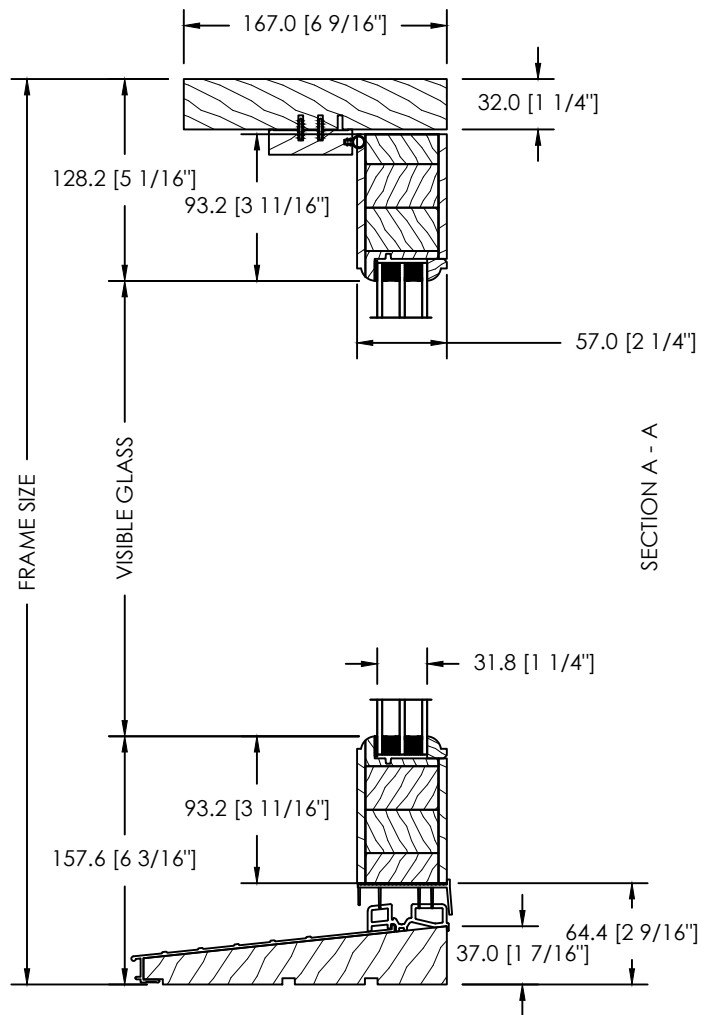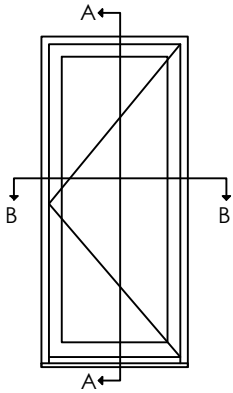


SECTION B - B

WOOD OUTSWING FRENCH DOOR

6 $\frac{9}{16}$ " FRAME - 5" x 1 $\frac{3}{4}$ " SASH

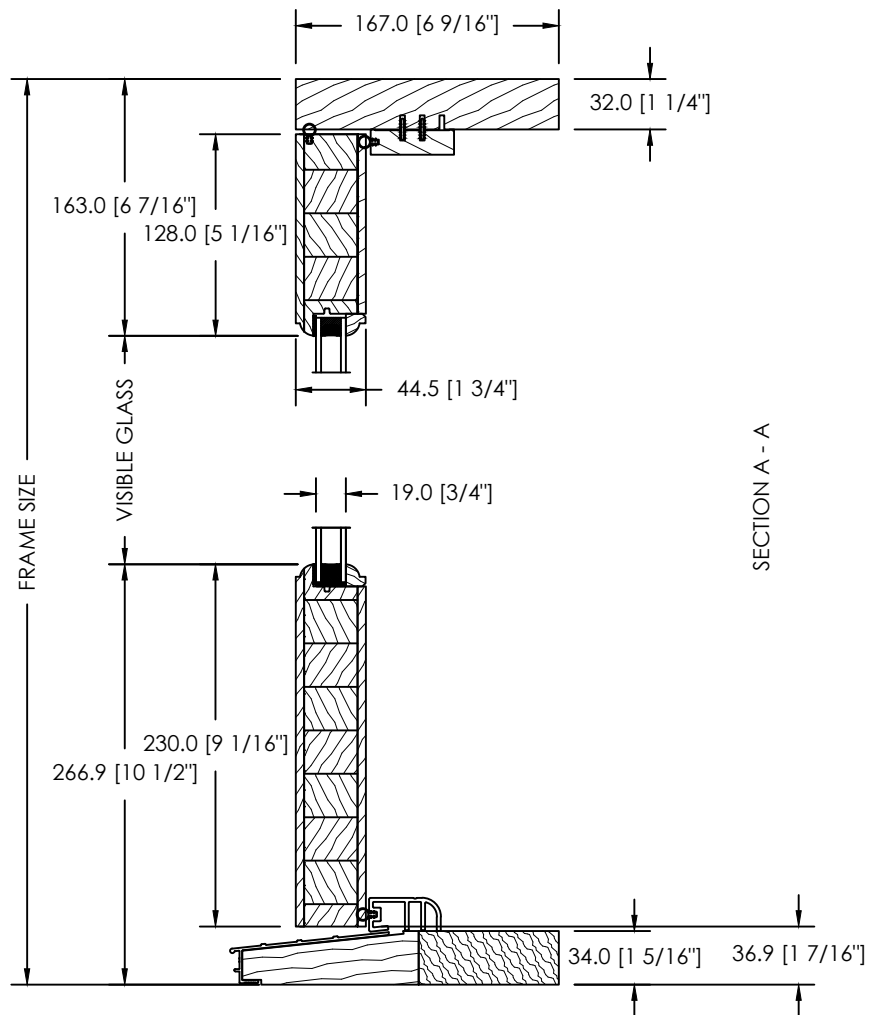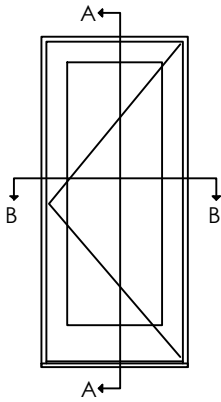




SECTION A - A

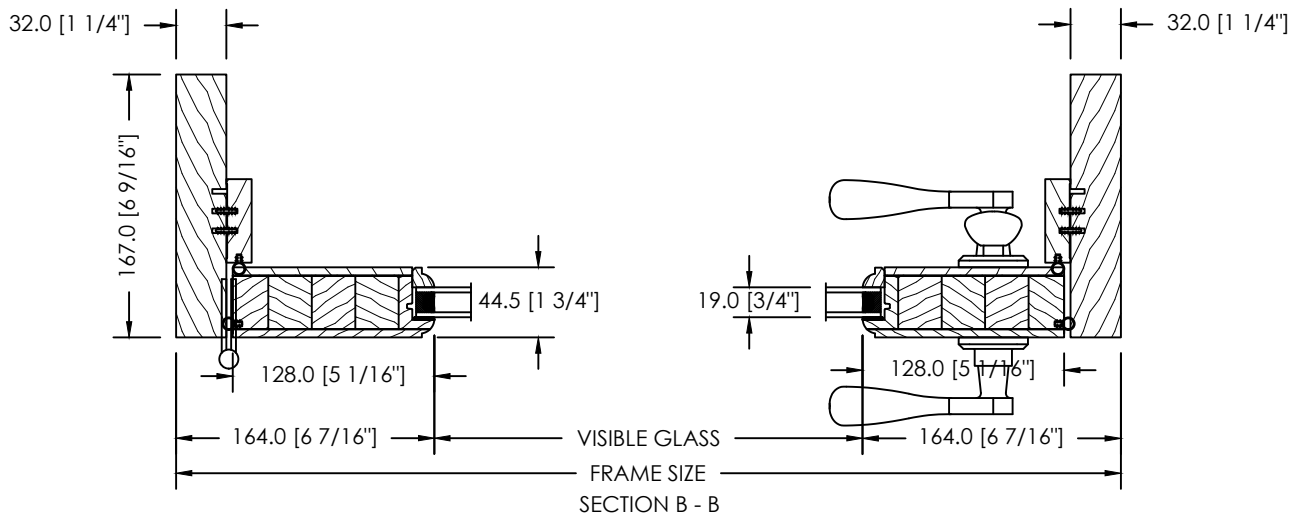

SECTION B - B



WOOD OUTSWING FRENCH DOOR

6 ⁹/₁₆" FRAME - 5" x 1 ³/₄" SASH

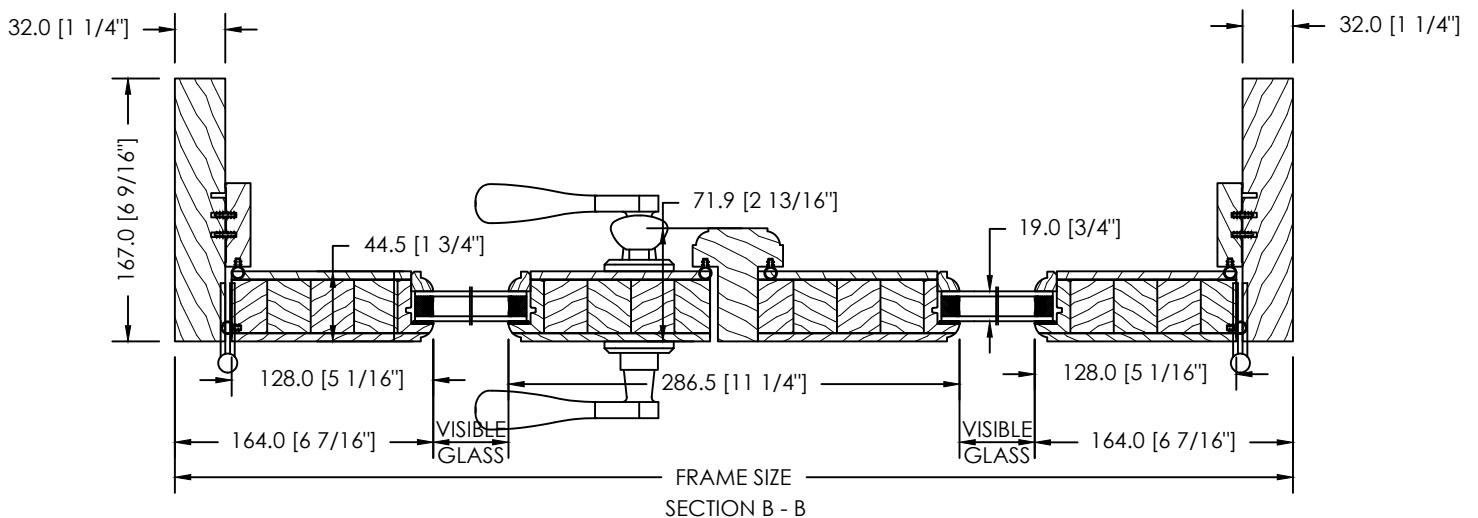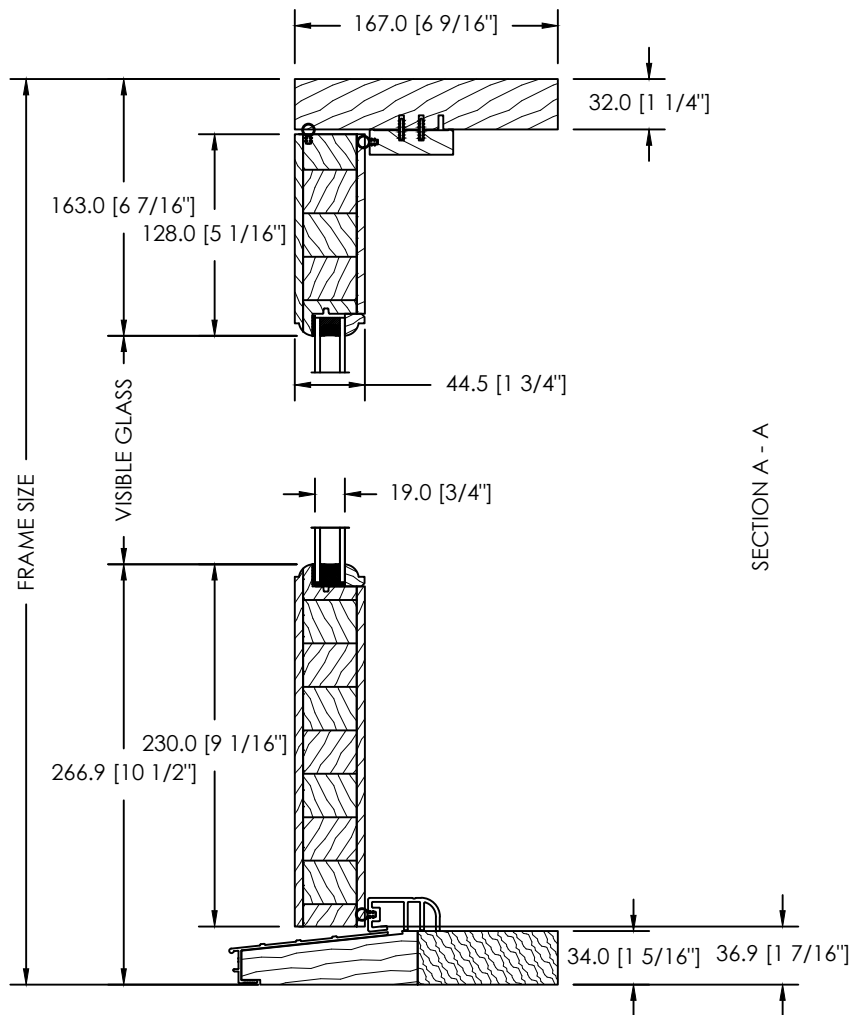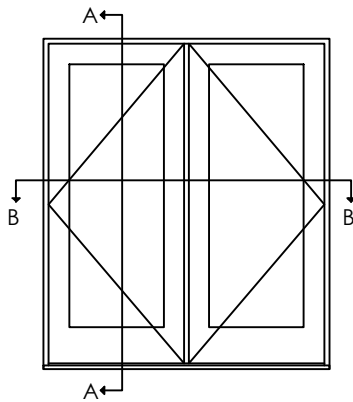


WOOD OUTSWING FRENCH DOOR

6 $\frac{2}{16}$ " FRAME - 3 $\frac{5}{8}$ " x 1 $\frac{3}{4}$ " SASH

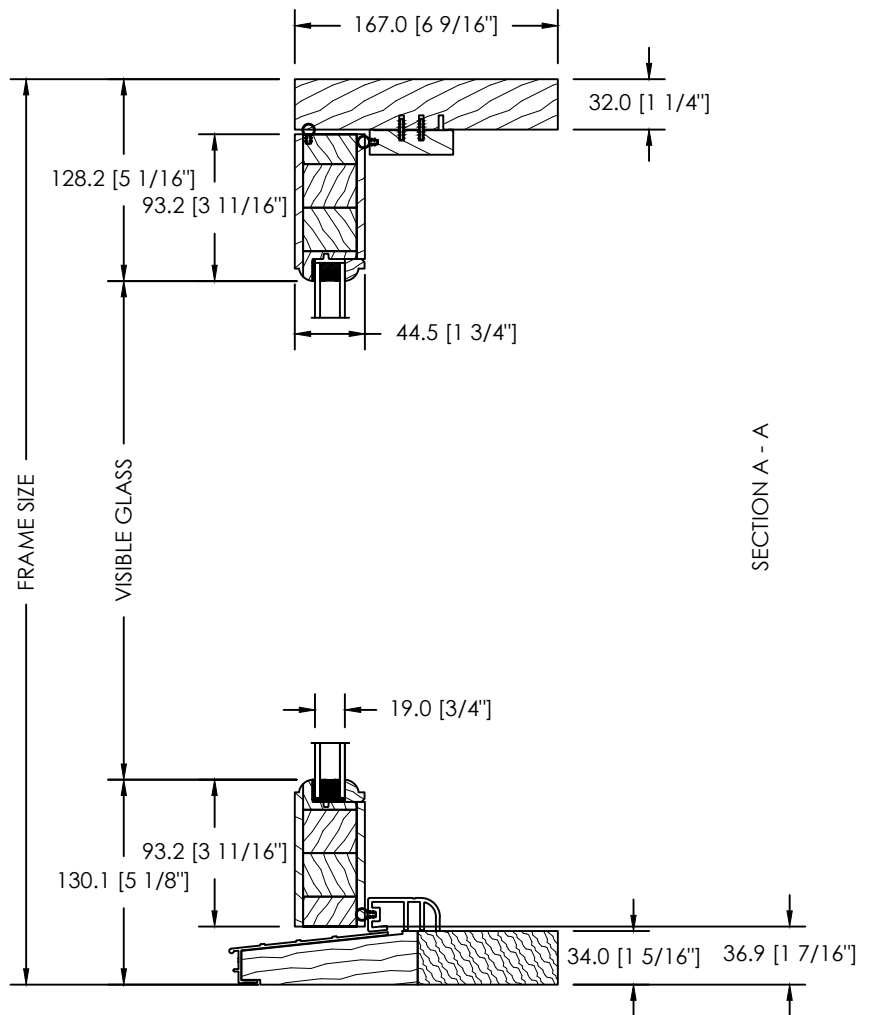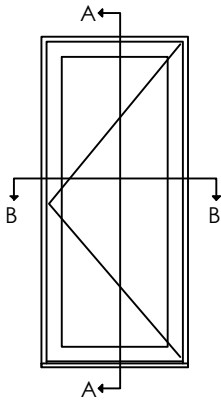



SECTION A - A

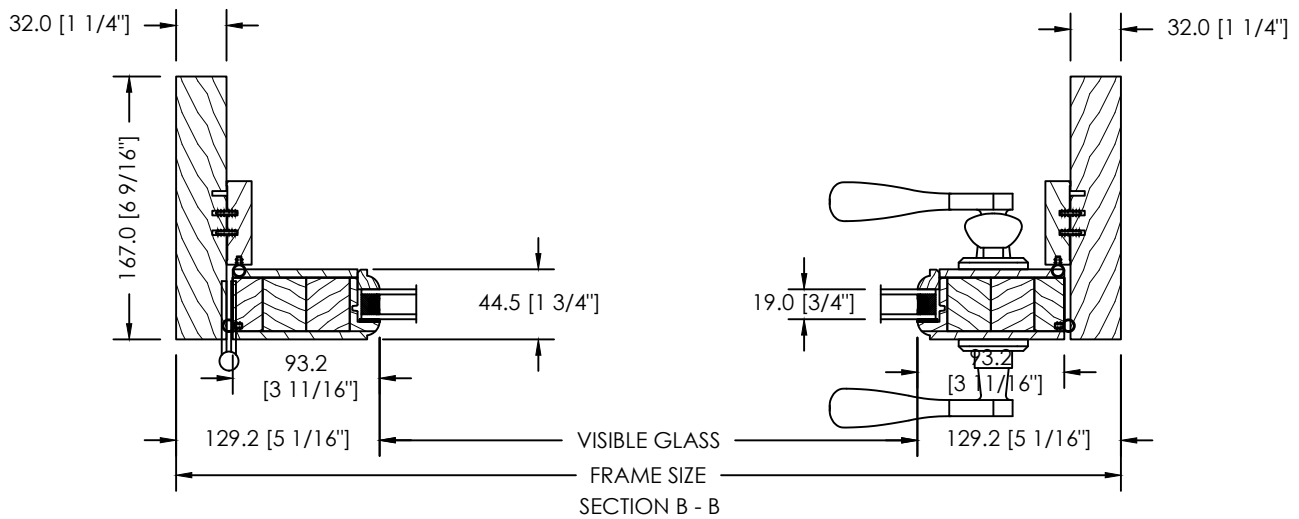


VISIBLE GLASS
FRAME SIZE
SECTION B - B

WOOD OUTSWING FRENCH DOOR

6 $\frac{9}{16}$ " FRAME - 5" x 2 $\frac{1}{4}$ " SASH

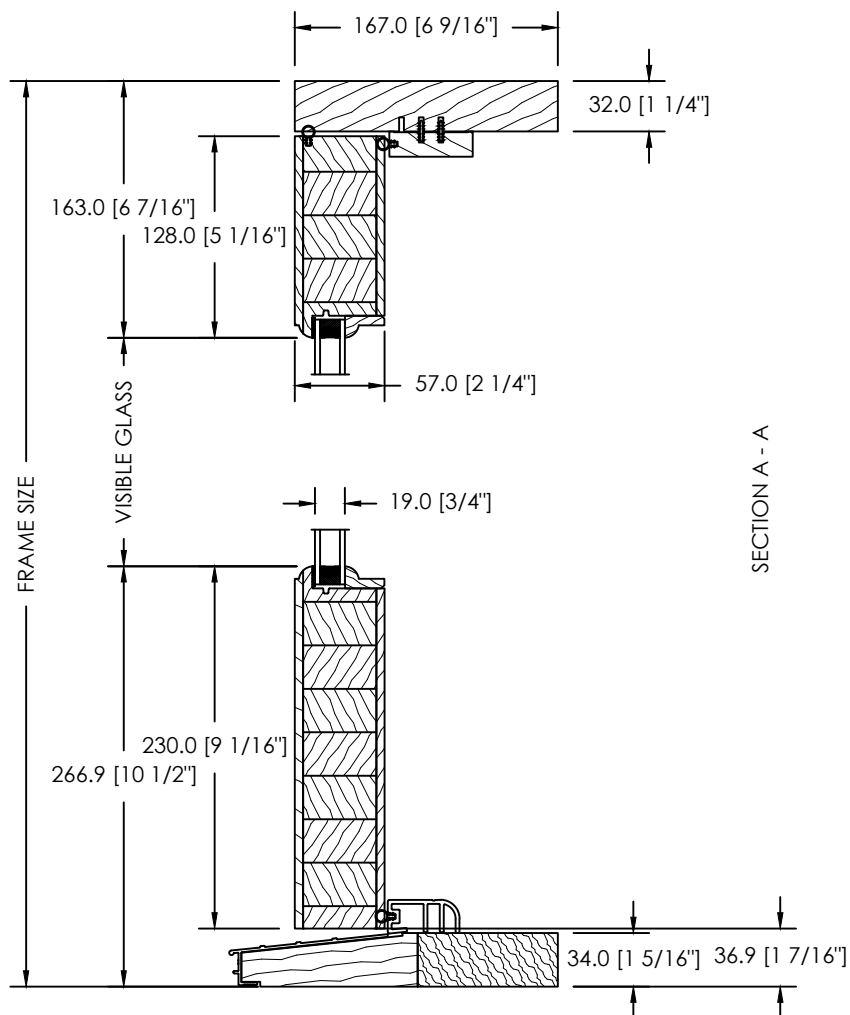
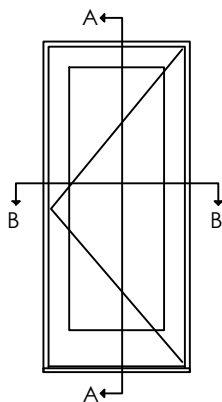


SECTION A - A

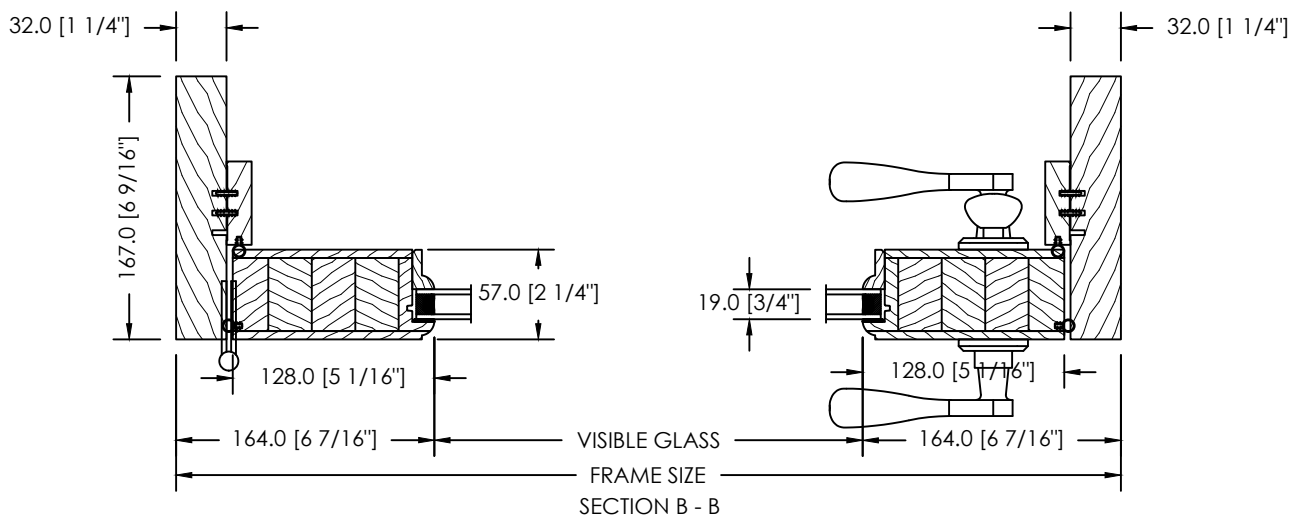


WOOD OUTSWING FRENCH DOOR

6 $\frac{9}{16}$ " FRAME - 5" x 2 $\frac{1}{4}$ " SASH


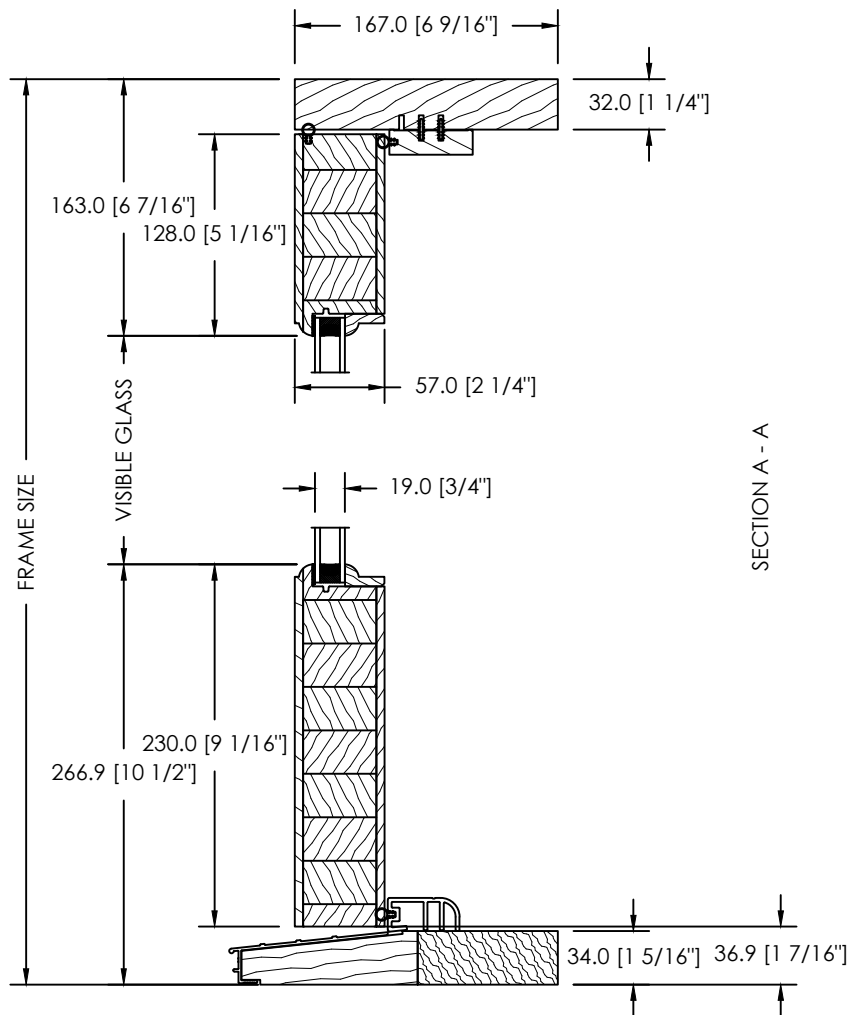
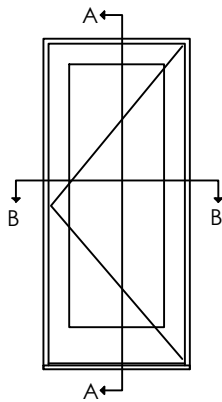


SECTION A - A









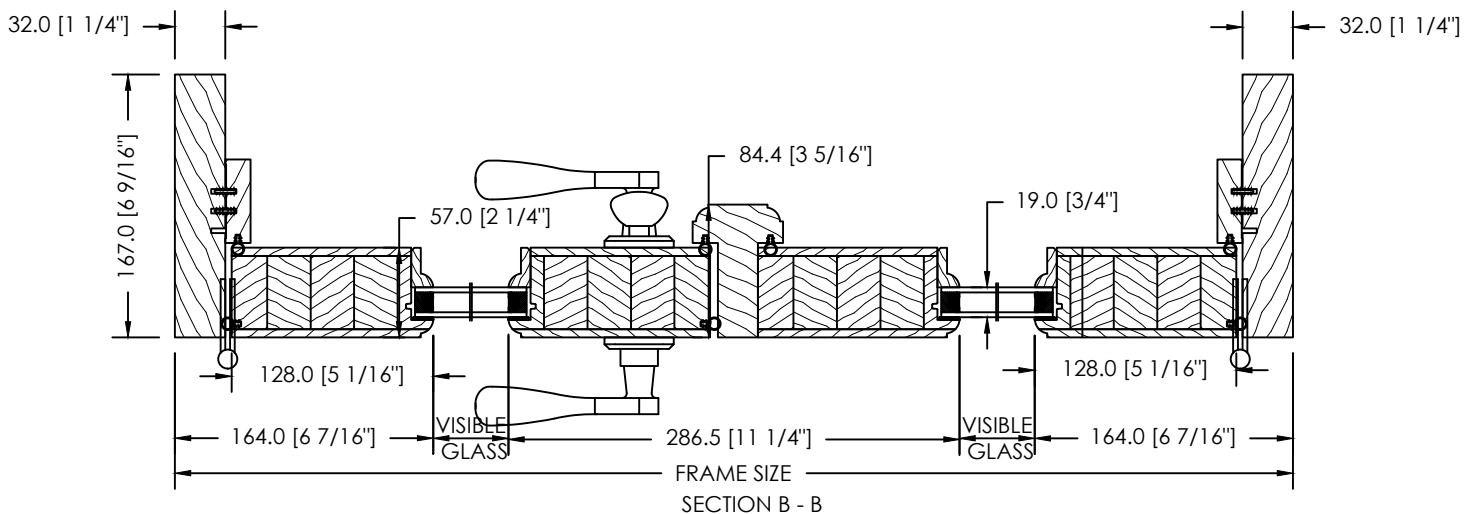


SECTION B - B

WOOD OUTSWING FRENCH DOOR
 $6\frac{2}{12}$ " FRAME - $3\frac{5}{8}$ " x $2\frac{1}{4}$ " SASH - OPTION TRIPLE I.G.

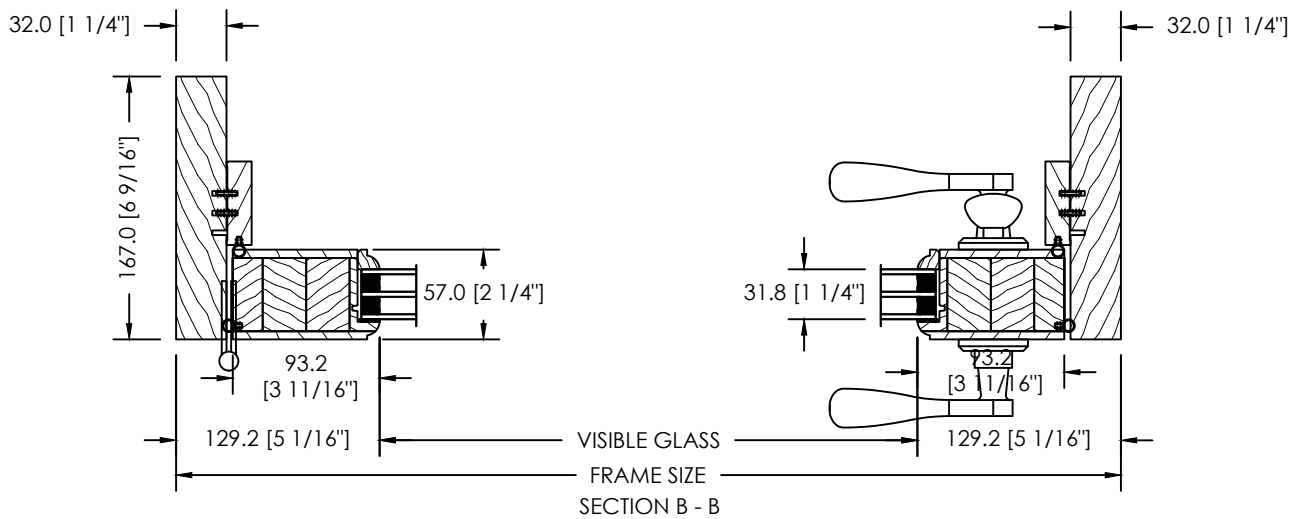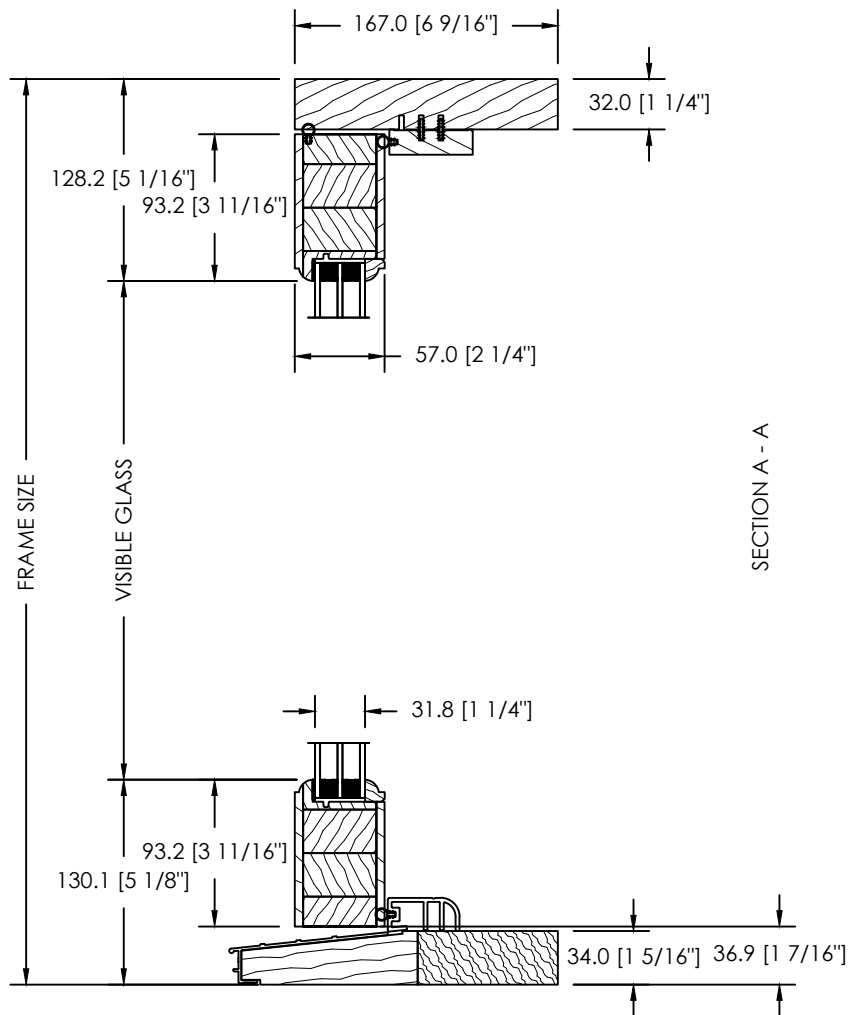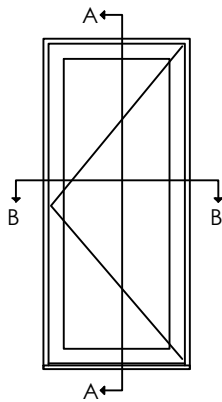


WOOD INSWING FRENCH DOOR
DEPTHS STANDARD FRAME

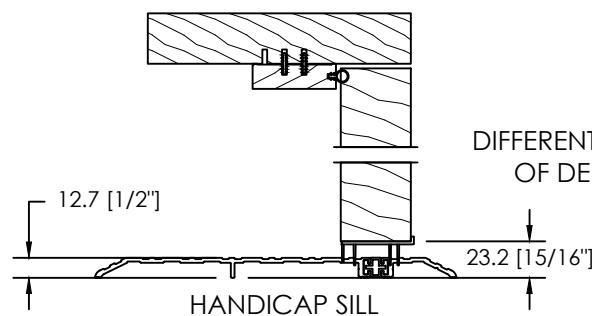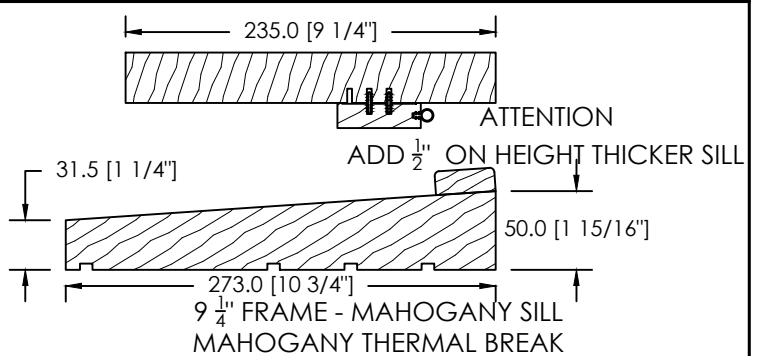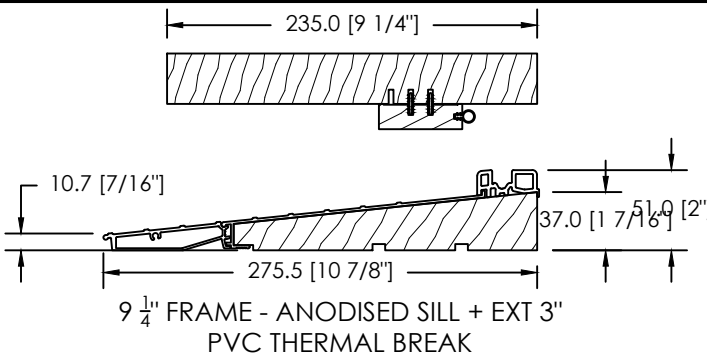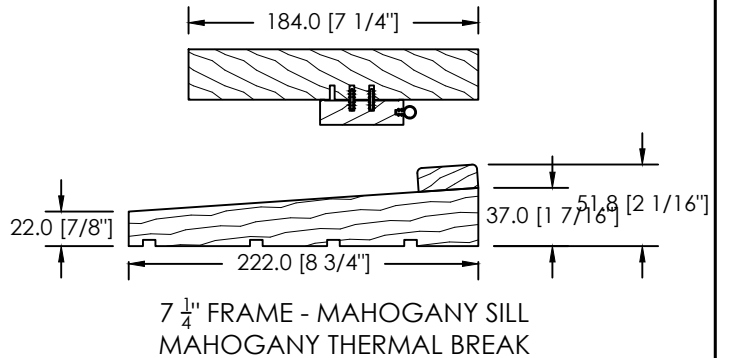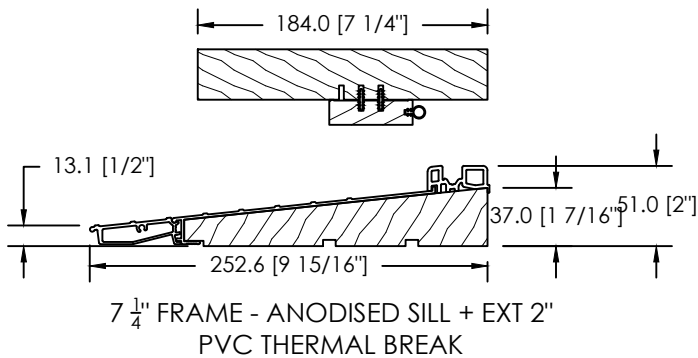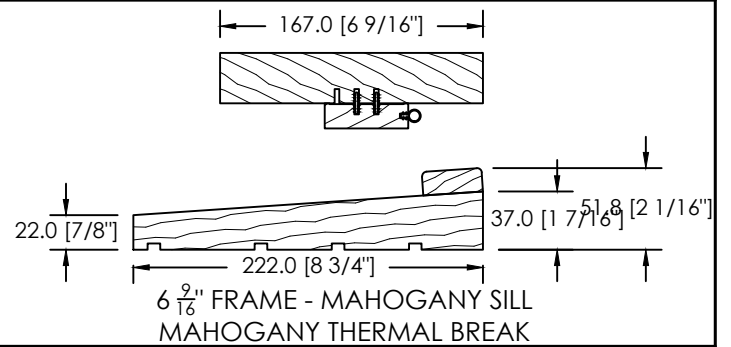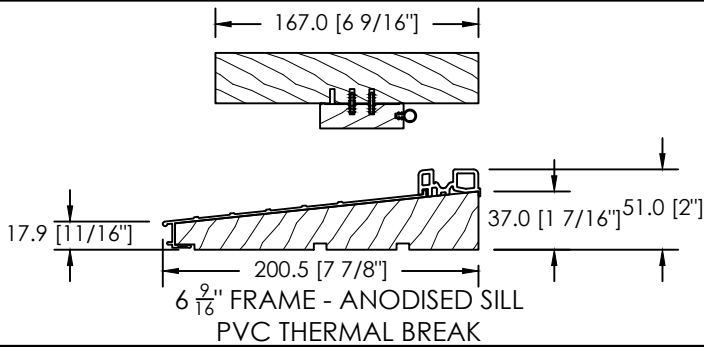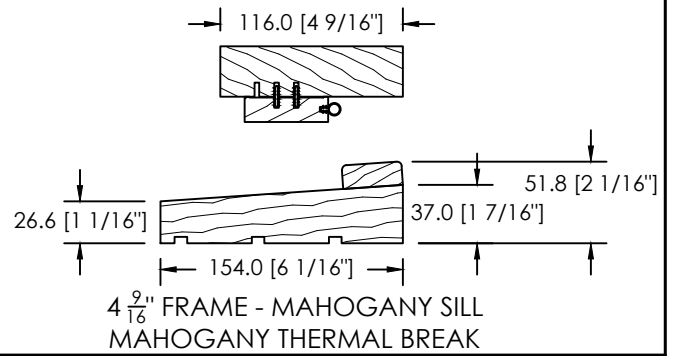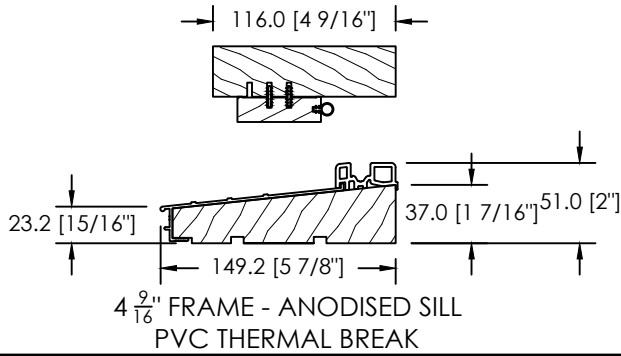


DIFFERENT COMBINAISONS DEPENDING
OF DEPTHS AND FRAME OPTIONS


WOOD OUTSWING FRENCH DOOR
DEPTHS STANDARD FRAME

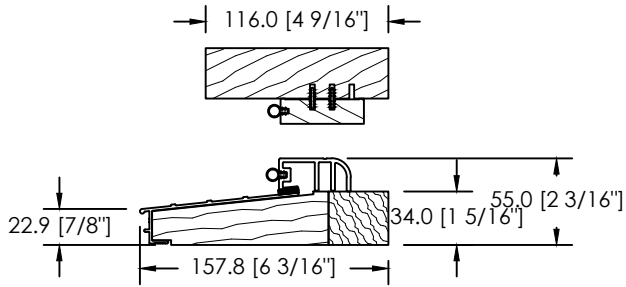


4 $\frac{9}{16}$ " FRAME - ANODISED SILL

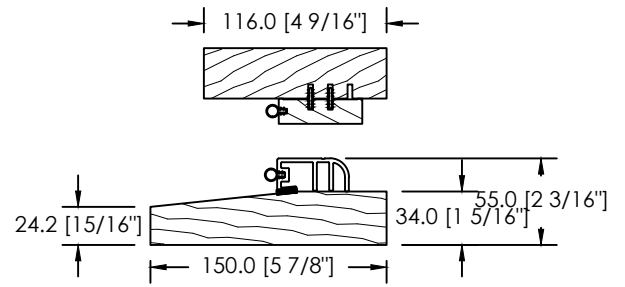


4 $\frac{9}{16}$ " FRAME - MAHOGANY SILL

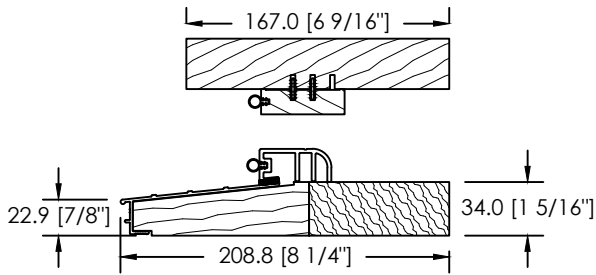


6 $\frac{9}{16}$ " FRAME - ANODISED SILL

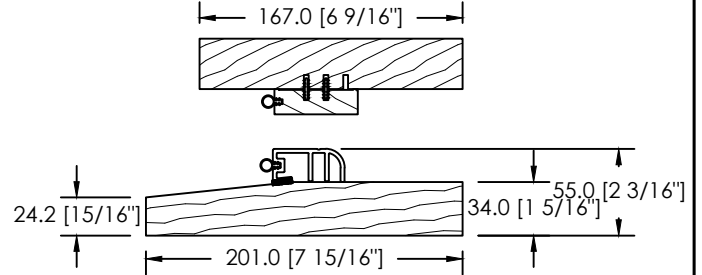


6 $\frac{9}{16}$ " FRAME - MAHOGANY SILL

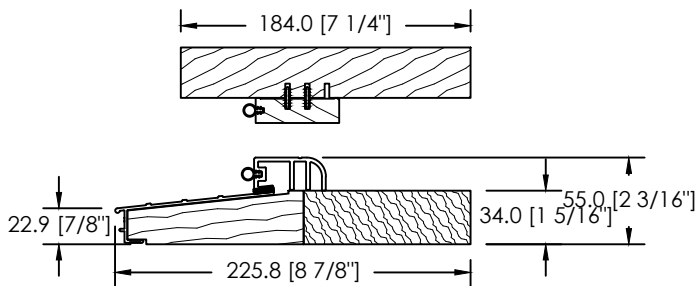


7 $\frac{1}{4}$ " FRAME - ANODISED SILL

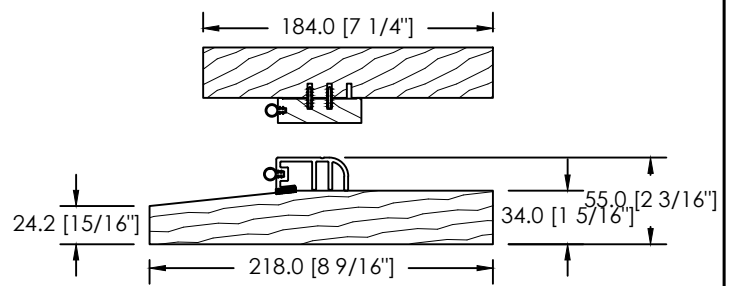


7 $\frac{1}{4}$ " FRAME - MAHOGANY SILL

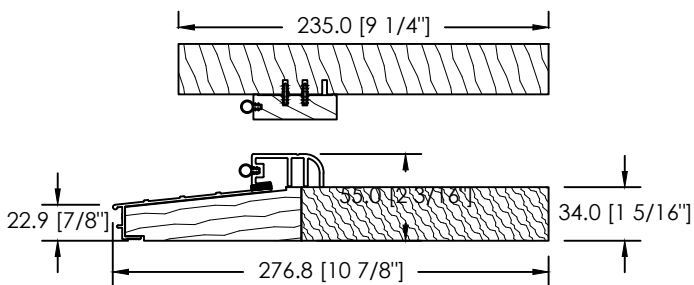

9 $\frac{1}{4}$ " FRAME - ANODISED SILL

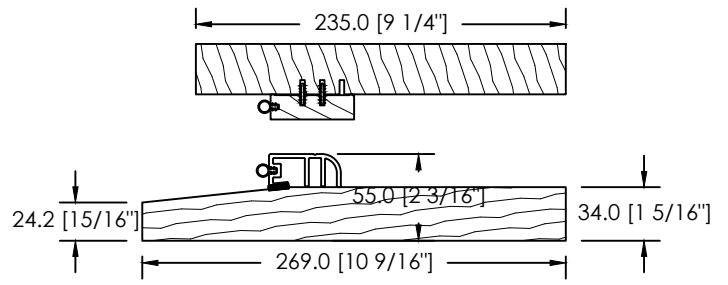


9 $\frac{1}{4}$ " FRAME - MAHOGANY SILL

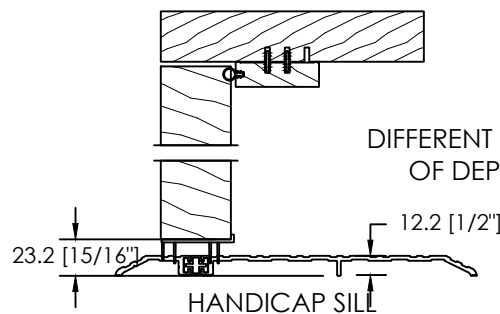


DIFFERENT COMBINAISONS DEPENDING
OF DEPTHS AND FRAME OPTIONS

HANDICAP SILL


WOOD FRENCH DOOR BRICKMOULD OPTIONS

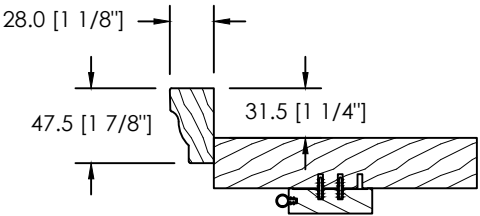


COLONIAL EXTERIOR BRICKMOULD

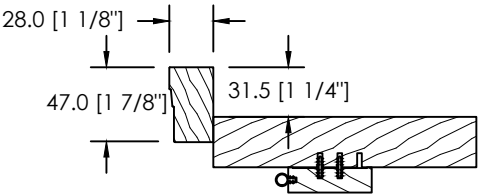


908 BRICKMOULD

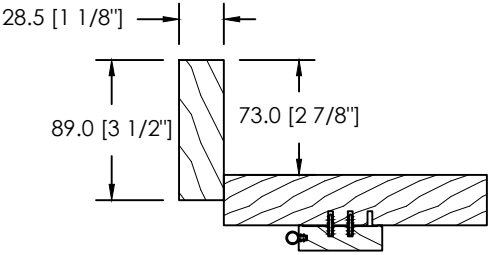

5/4 X 3 1/2" FLAT CASING

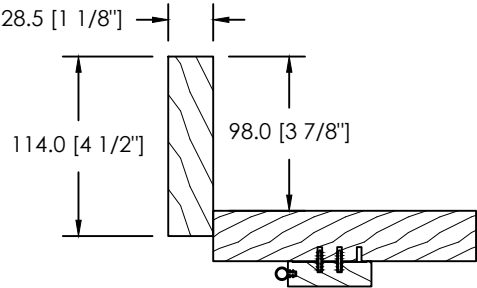


5/4 X 4 1/2" FLAT CASING

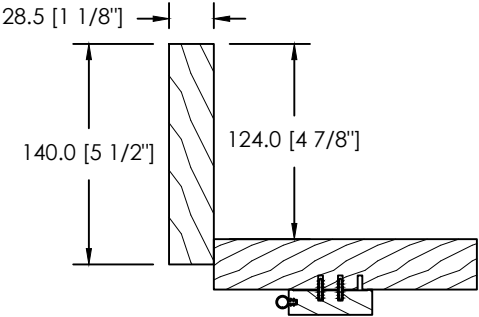


5/4 X 5 1/2" FLAT CASING


WOOD FRENCH DOOR BRICKMOULD OPTIONS

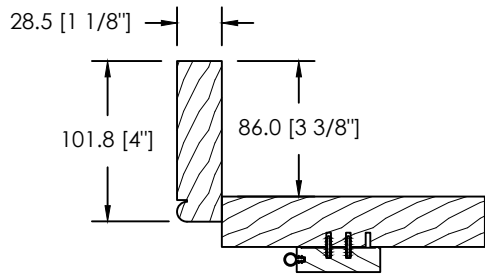


DS-001 BRICKMOULD

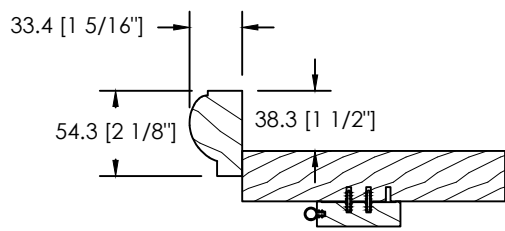


DS-017 BRICKMOULD

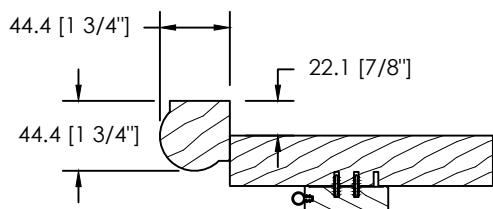


DS-030 BRICKMOULD

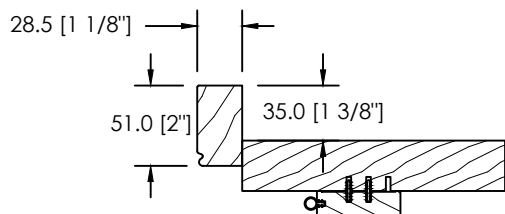


DS-031 BRICKMOULD

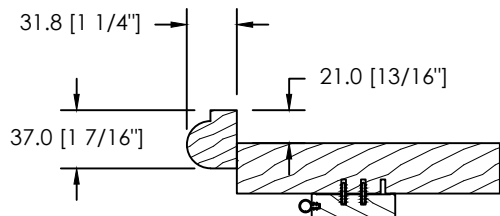

DS-034 BRICKMOULD

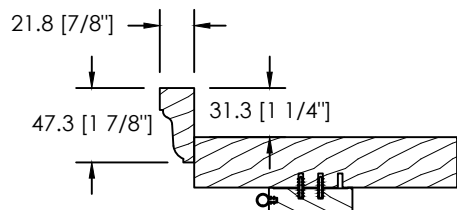


DS-061 BRICKMOULD

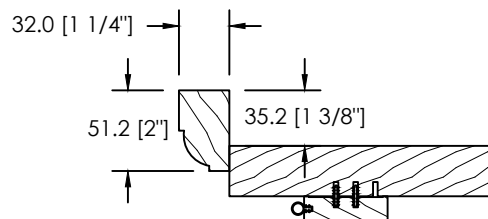


DS-065 BRICKMOULD


WOOD FRENCH DOOR
SASH AND GLASS STOP MODELS




1 $\frac{3}{4}$ " SASH &
COLONIAL SASH STOP




1 $\frac{3}{4}$ " COLONIAL SASH &
SQUARE SASH STOP




1 $\frac{3}{4}$ " PUTTY GLAZE SASH &
COLONIAL SASH STOP




1 $\frac{3}{4}$ " PUTTY GLAZE SASH &
SQUARE SASH STOP




2 $\frac{1}{4}$ " SASH &
COLONIAL SASH STOP




2 $\frac{1}{4}$ " COLONIAL SASH &
SQUARE GLASS STOP




2 $\frac{1}{4}$ " COLONIAL SASH &
DAVIS GLASS STOP




2 $\frac{1}{4}$ " PUTTY GLAZE SASH &
COLONIAL SASH STOP




2 $\frac{1}{4}$ " PUTTY GLAZE SASH &
SQUARE GLASS STOP



2 $\frac{1}{4}$ " PUTTY GLAZE SASH &
DAVIS GLASS STOP




2 $\frac{1}{4}$ " SASH - TRIPLE I.G. &
COLONIAL GLASS STOP




2 $\frac{1}{4}$ " PUTTY GLAZE SASH - TRIPLE I.G. &
SQUARE GLASS STOP


WOOD FRENCH DOOR
PANELS MODELS




RAISED PANEL
2 SIDES




EXTERIOR RAISED PANEL
INTERIOR FLAT




EXTERIOR FLAT PANEL
INTERIOR RAISED




DIAMOND PANEL
2 SIDES




EXTERIOR DIAMOND PANEL
INTERIOR FLAT




EXTERIOR FLAT PANEL
INTERIOR DIAMOND




FRENCH PANEL
2 SIDES



EXTERIOR FRENCH PANEL
INTERIOR FLAT




EXTERIOR FLAT PANEL
INTERIOR FRENCH




FLAT PANEL
2 SIDES


WOOD FRENCH DOOR
BOLECTION MOULDING

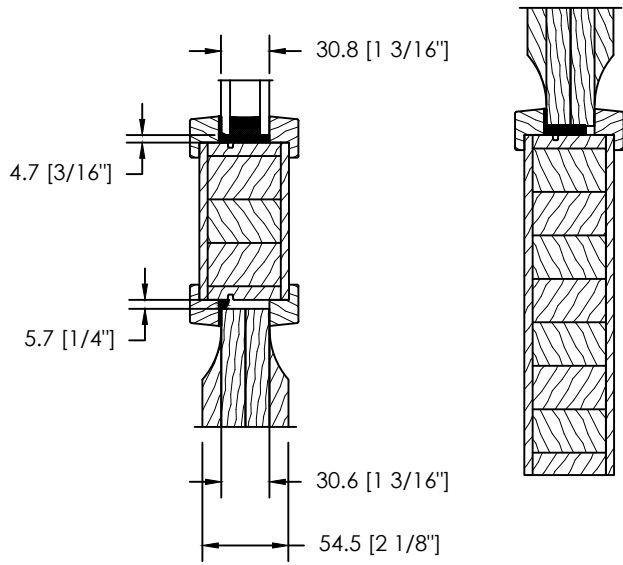


D-181 CONTEMPORARY BOLECTION MOULDING
WITH RAISED PANEL

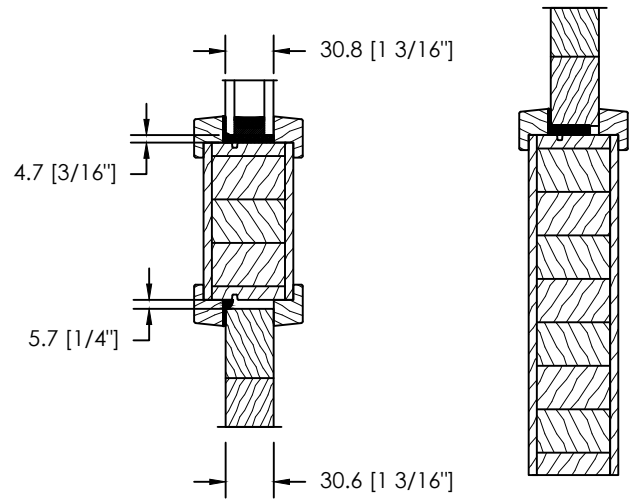

D-181 CONTEMPORARY BOLECTION MOULDING
WITH FLAT PANEL


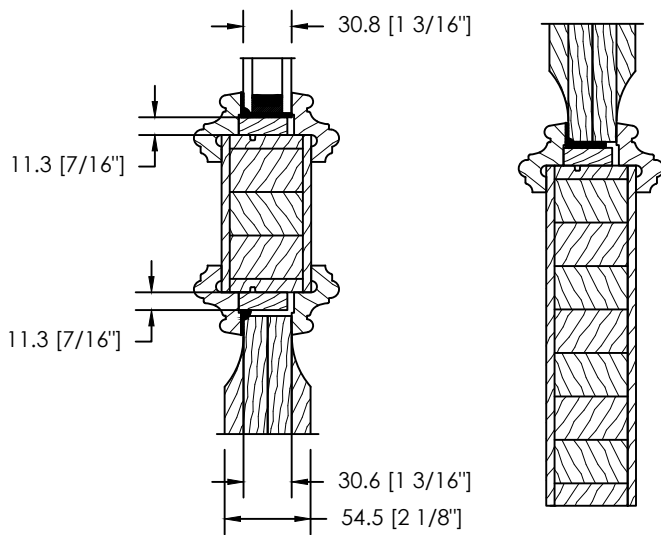


D-180 COLONIAL BOLECTION MOLDING
WITH RAISED PANEL

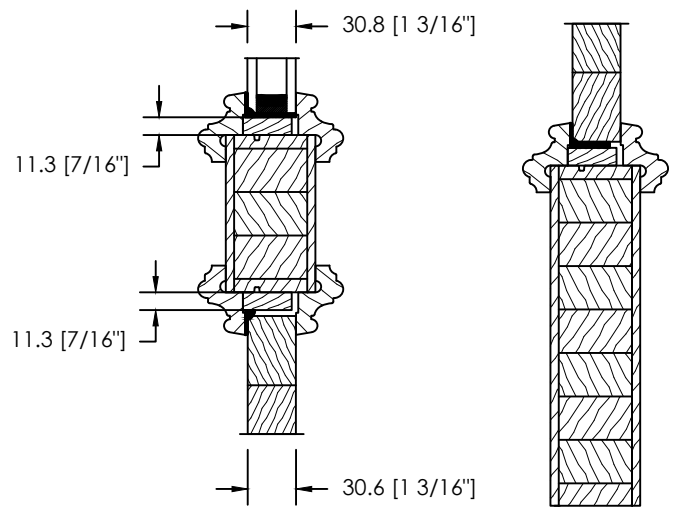


D-180 COLONIAL BOLECTION MOLDING
WITH FLAT PANEL


WOOD FRENCH DOOR
WOOD SCREN DOOR WS

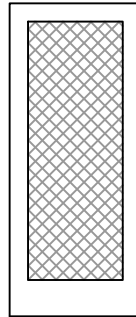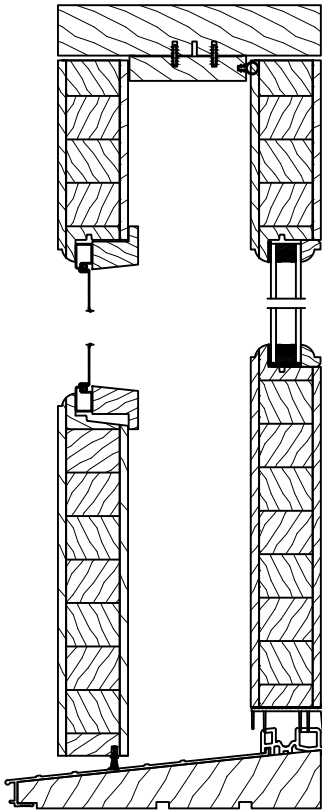


WS-01

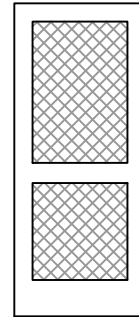


WS-02

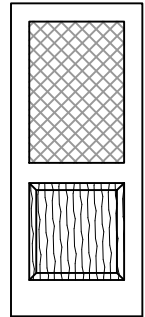

WS-05

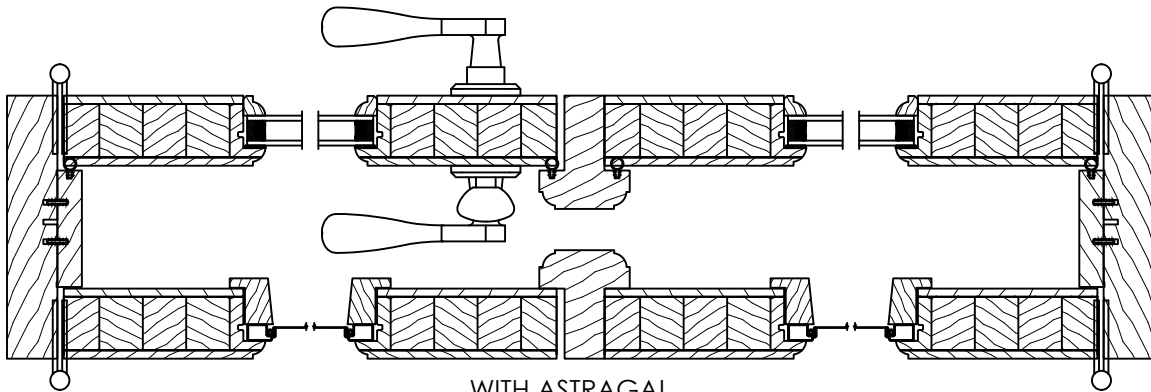


WITH ASTRAGAL

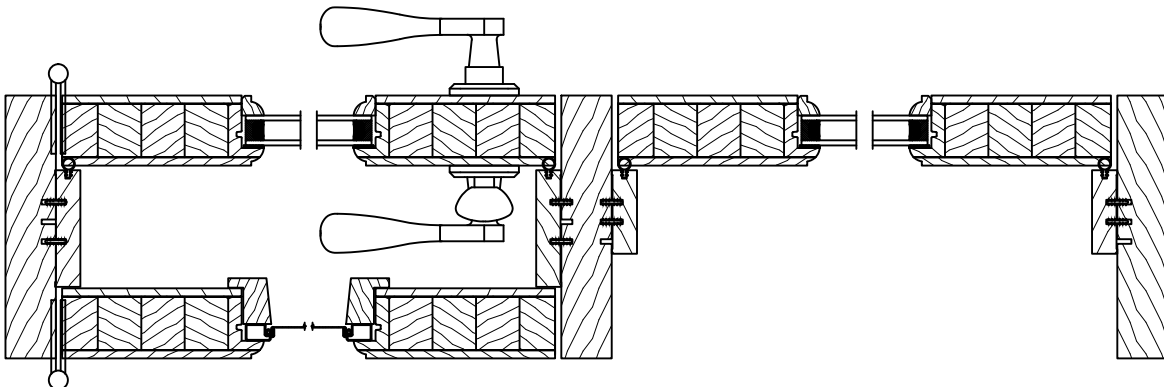


WITH MULLION

WOOD FRENCH DOOR
SCREEN ALUMINIUM DOOR

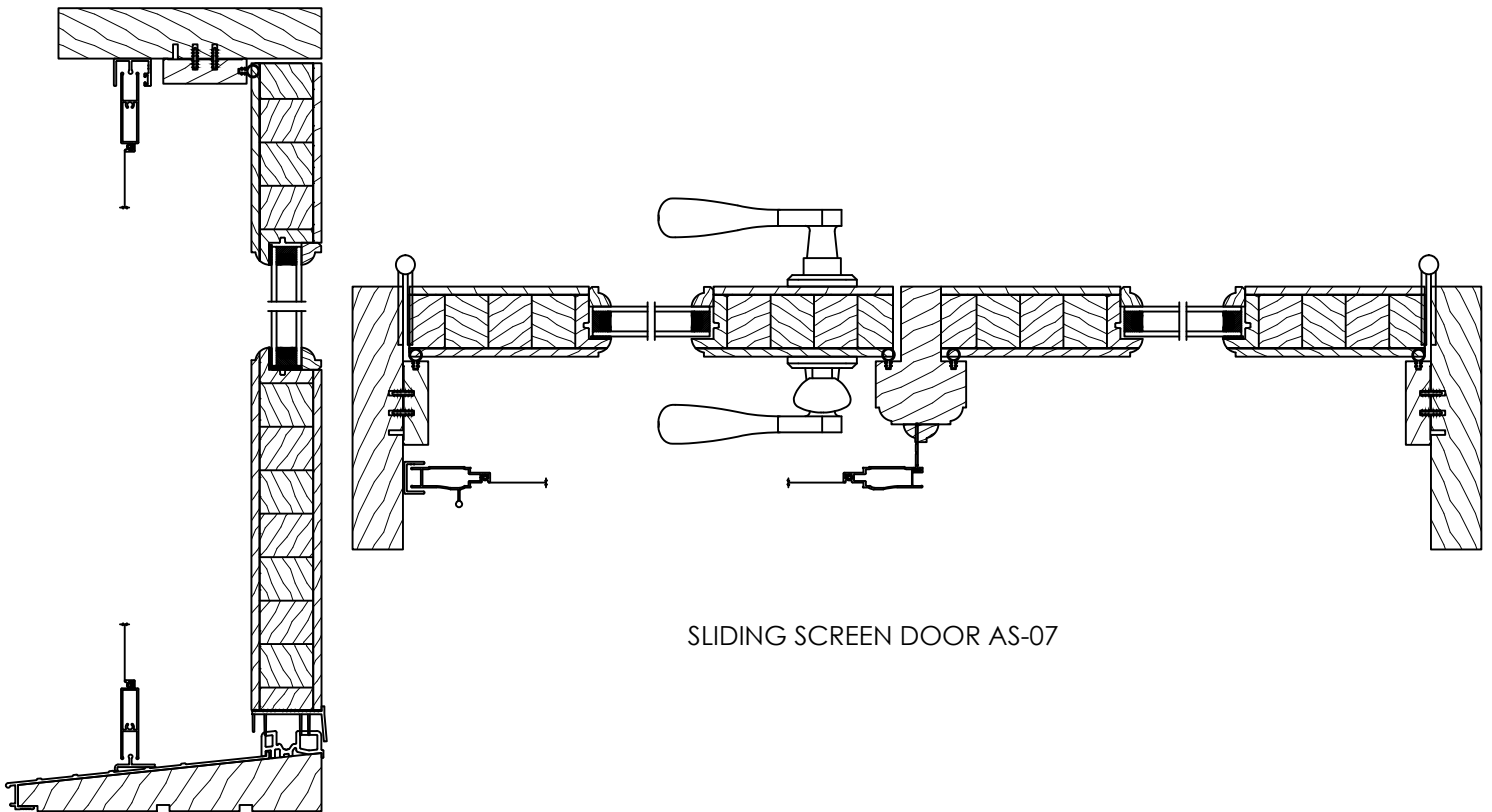


SLIDING SCREEN DOOR AS-07

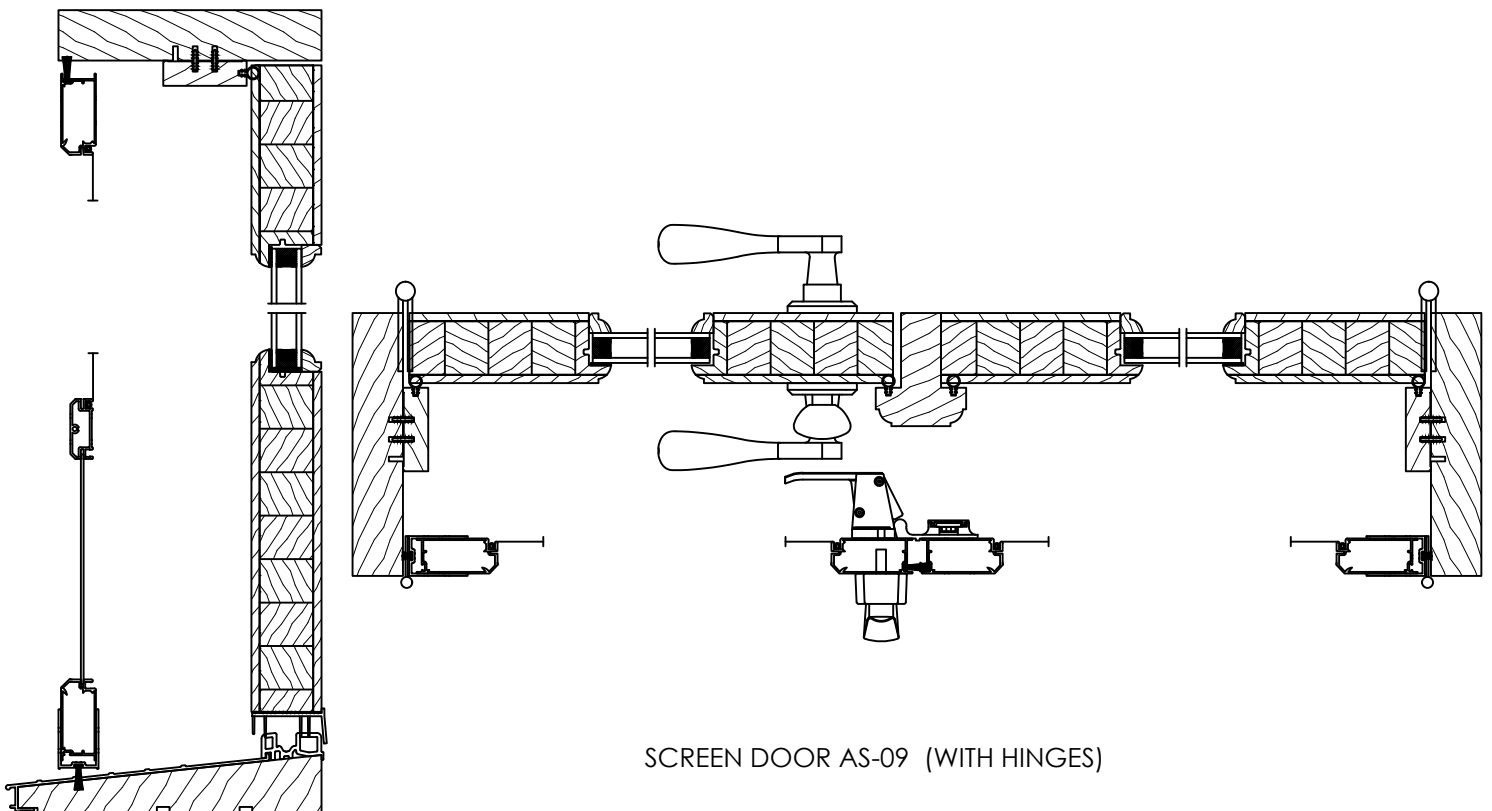


SCREEN DOOR AS-09 (WITH HINGES)

WOOD FRENCH DOOR
TRANSOM AND SIDELIGHT MODELS



TR-1
(WITHOUT
SASH)




TR-2
5" UP
5" BOTTOM
5" SIDES




TR-3
1 $\frac{3}{4}$ " UP
1 $\frac{3}{4}$ " BOTTOM
5" SIDES




TR-4
1 $\frac{3}{4}$ " UP
1 $\frac{3}{4}$ " BOTTOM
1 $\frac{3}{4}$ " SIDES




TR-5
1 $\frac{3}{4}$ " UP
1 $\frac{3}{4}$ " BOTTOM
3 $\frac{5}{8}$ " SIDES




TR-6
3 $\frac{5}{8}$ " UP
3 $\frac{5}{8}$ " BOTTOM
3 $\frac{5}{8}$ " SIDES




SL-1
(WITHOUT
SASH)




SL-2
5" UP
5" BOTTOM
1 $\frac{3}{4}$ " SIDES



SL-3
5" UP
9" BOTTOM
1 $\frac{3}{4}$ " SIDES




SL-4
1 $\frac{3}{4}$ " UP
1 $\frac{3}{4}$ " BOTTOM
1 $\frac{3}{4}$ " SIDES




SL-5
5" UP
5" BOTTOM
5" SIDES




SL-6
5" UP
9" BOTTOM
5" SIDES




SL-7
3 $\frac{5}{8}$ " UP
3 $\frac{5}{8}$ " BOTTOM
1 $\frac{3}{4}$ " SIDES



SL-8
3 $\frac{5}{8}$ " UP
5" BOTTOM
1 $\frac{3}{4}$ " SIDES



SL-9
3 $\frac{5}{8}$ " UP
3 $\frac{5}{8}$ " BOTTOM
3 $\frac{5}{8}$ " SIDES



SL-10
3 $\frac{5}{8}$ " UP
5" BOTTOM
3 $\frac{5}{8}$ " SIDES




SL-11
3 $\frac{5}{8}$ " UP
9" BOTTOM
1 $\frac{3}{4}$ " SIDES




SL-12
3 $\frac{5}{8}$ " UP
9" BOTTOM
3 $\frac{5}{8}$ " SIDES


WOOD FRENCH DOOR
INSWING DOOR HORIZONTAL ASSEMBLY

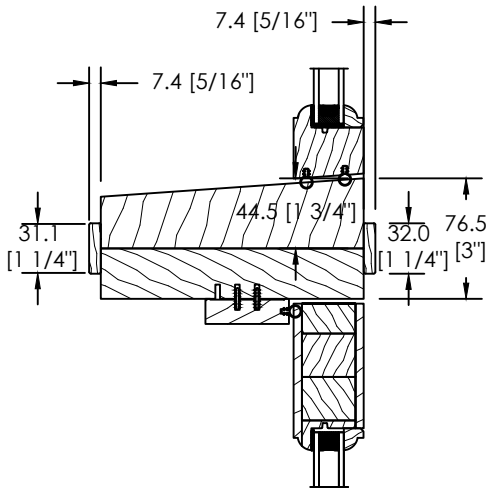


TRANSOM WITH SASH
MODULAR ASSEMBLY

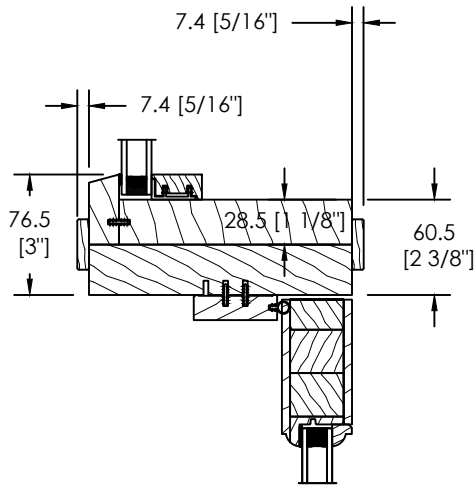


DIRECT SET (TR-1) TRANSOM
MODULAR ASSEMBLY

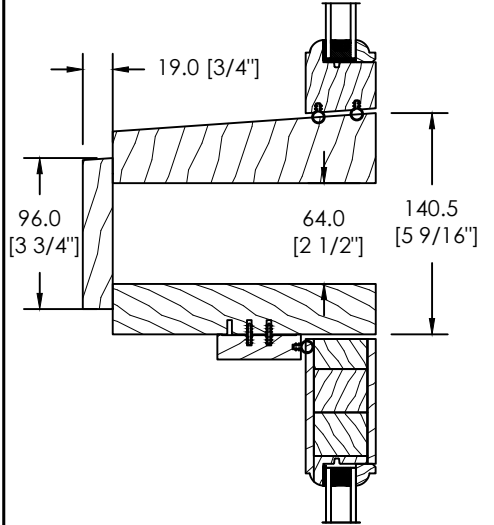


SPACE MULL & STUD POCKET
STANDARD 2 1/2"

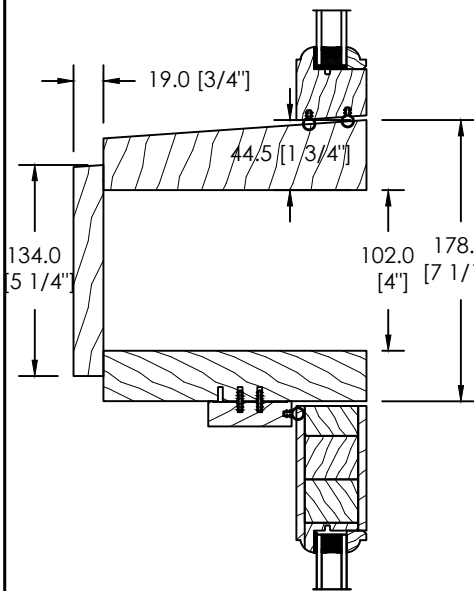

SPACE MULL & STUD POCKET
STANDARD 4"

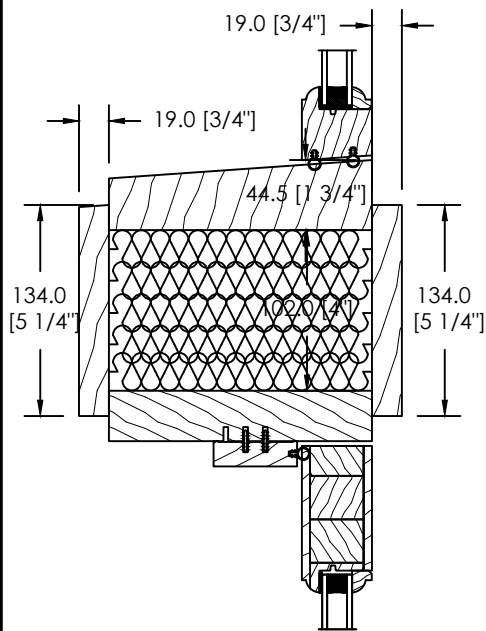


SPACE MULL & STUD POCKET
INSULATED - STANDARD 4"

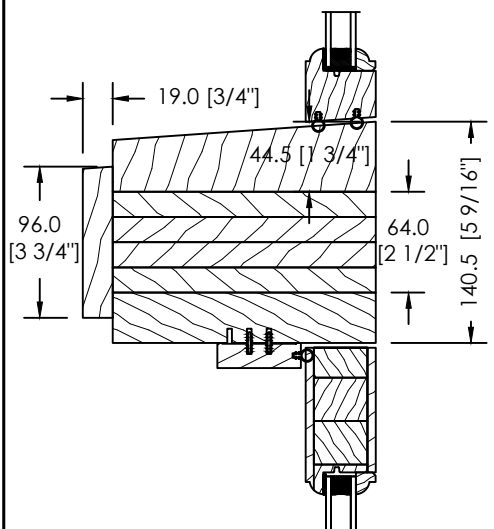


SPACE MULL & STUD POCKET
SOLID - STANDARD 2 1/2"


WOOD FRENCH DOOR
INSWING DOOR VERTICAL ASSEMBLY

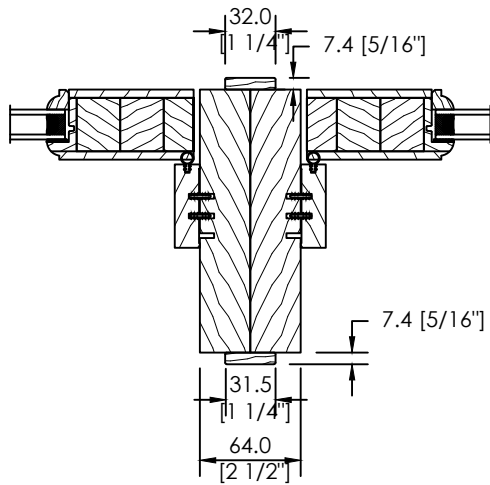


VERTICAL MODULAR ASSEMBLY

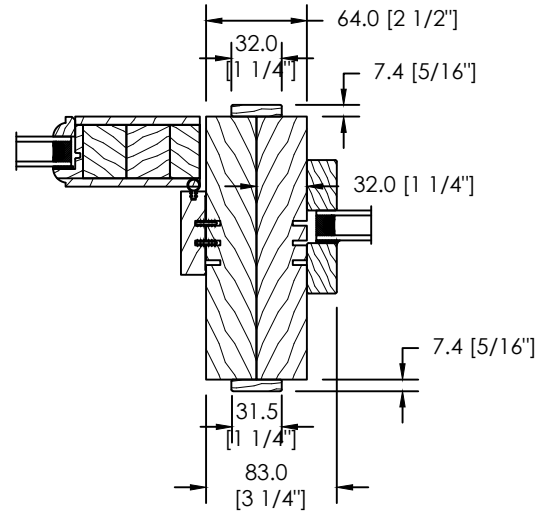


VERTICAL MODULAR ASSEMBLY
WITH DIRECT SET (SL-1)

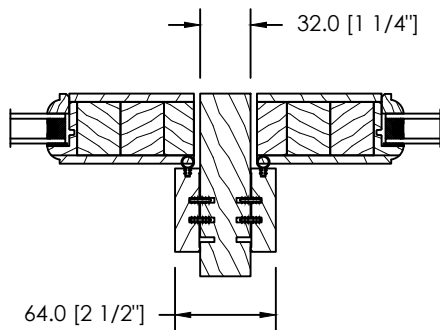


VERTICAL STRUCTURAL ASSEMBLY

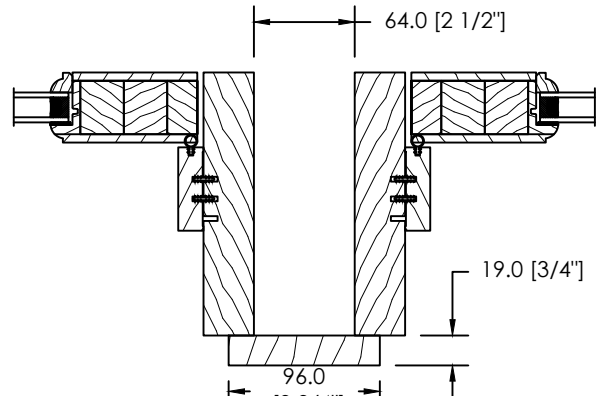

SPACE MULL & STUD POCKET
STANDARD 2 1/2"

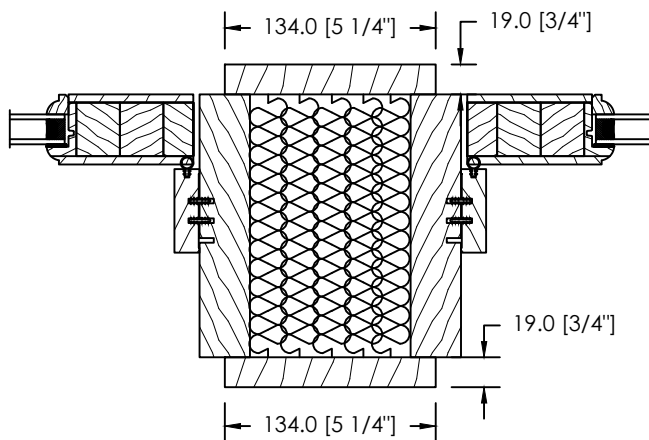


SPACE MULL & STUD POCKET
INSULATED - STANDARD 4"

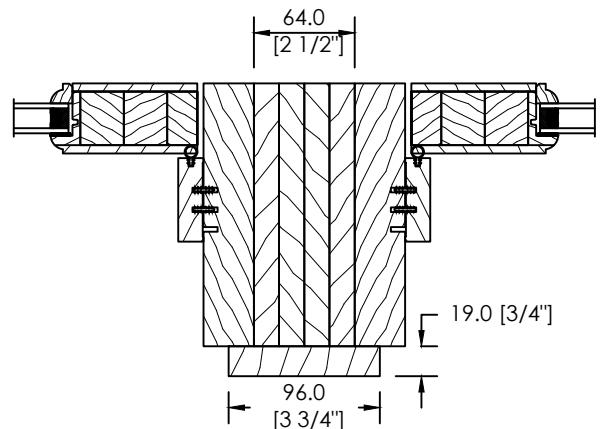


SPACE MULL & STUD POCKET
SOLID - STANDARD 2 1/2"


WOOD FRENCH DOOR
OUTSWING DOOR HORIZONTAL ASSEMBLY

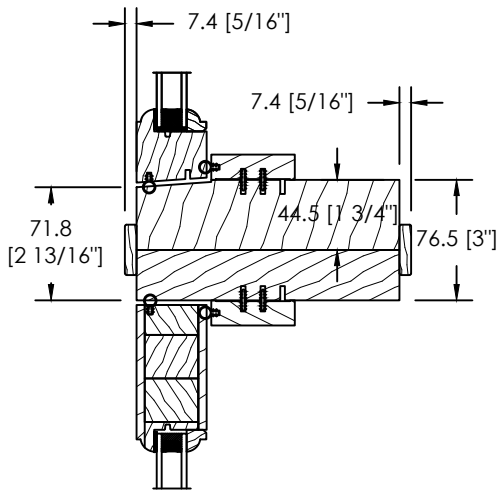


TRANSOM WITH SASH
MODULAR ASSEMBLY

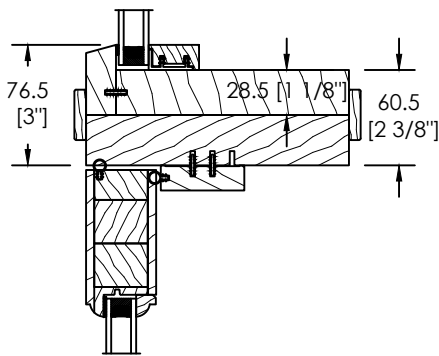


DIRECT SET (TR-1) TRANSOM
MODULAR ASSEMBLY

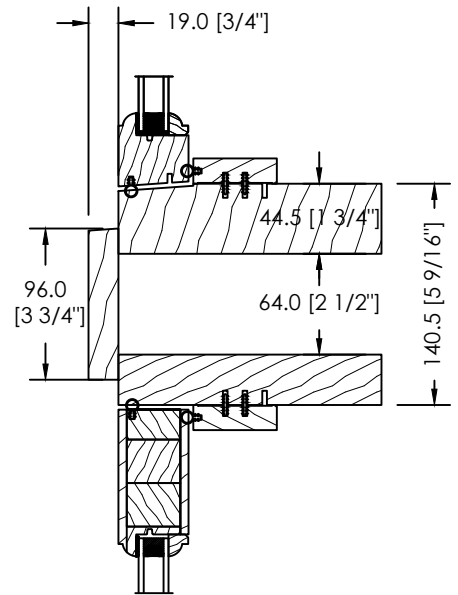


SPACE MULL & STUD POCKET
STANDARD 2 1/2"

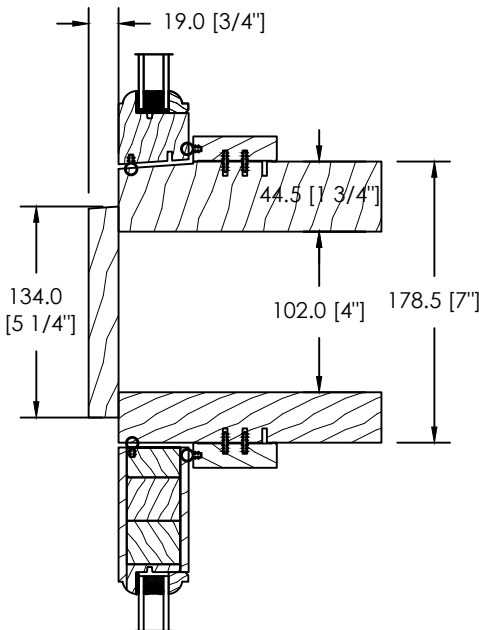

SPACE MULL & STUD POCKET
STANDARD 4"

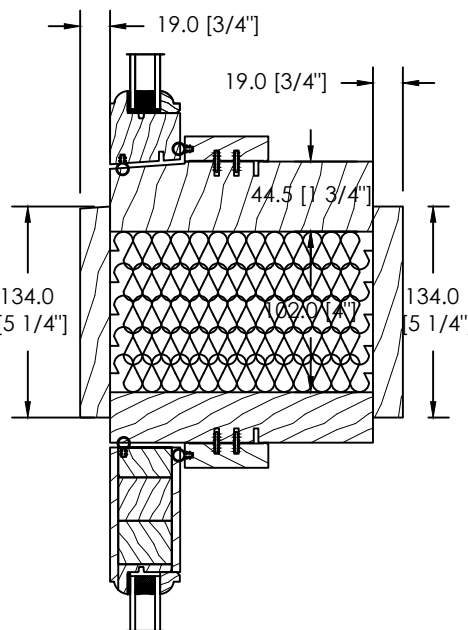


SPACE MULL & STUD POCKET
INSULATED - STANDARD 4"

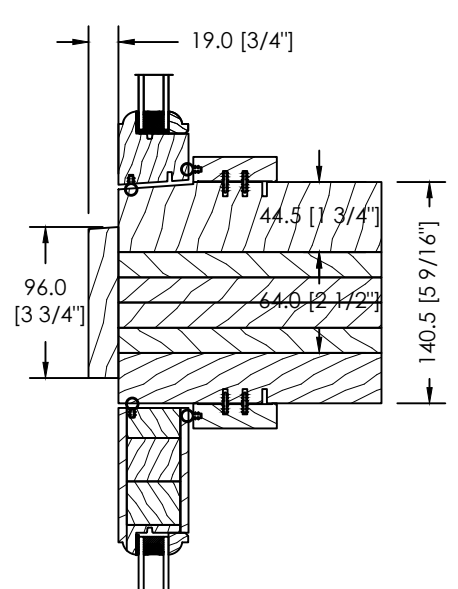


SPACE MULL & STUD POCKET
SOLID - STANDARD 2 1/2"


WOOD FRENCH DOOR
OUTSWING DOOR VERTICAL ASSEMBLY

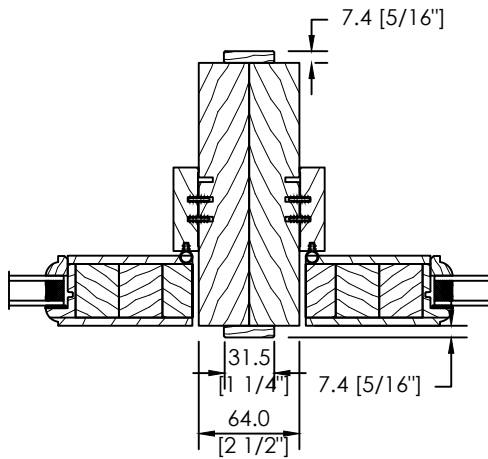


VERTICAL MODULAR ASSEMBLY

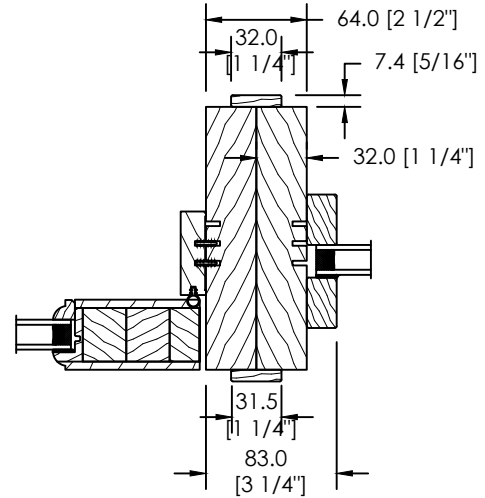


VERTICAL MODULAR ASSEMBLY
WITH DIRECT SET (SL-1)

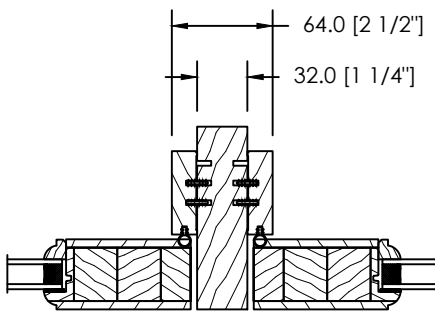


VERTICAL STRUCTURAL ASSEMBLY

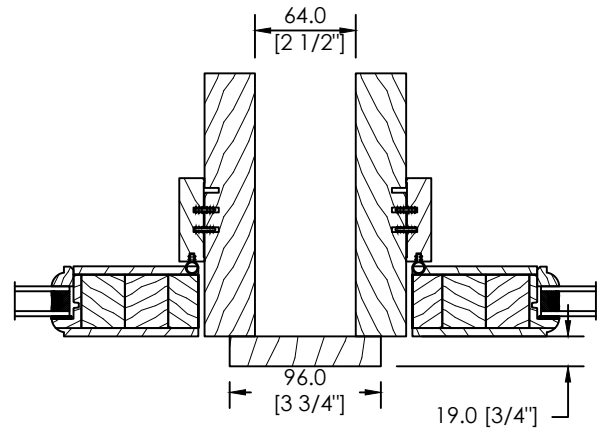

SPACE MULL & STUD POCKET
STANDARD 2 1/2"

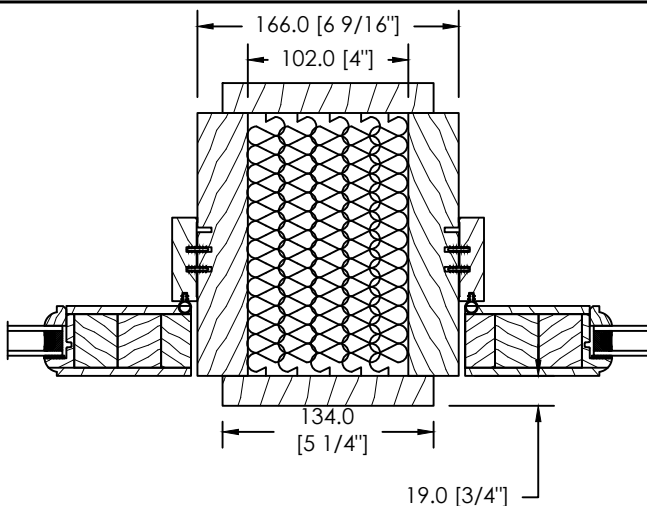

SPACE MULL & STUD POCKET
INSULATED - STANDARD 4"

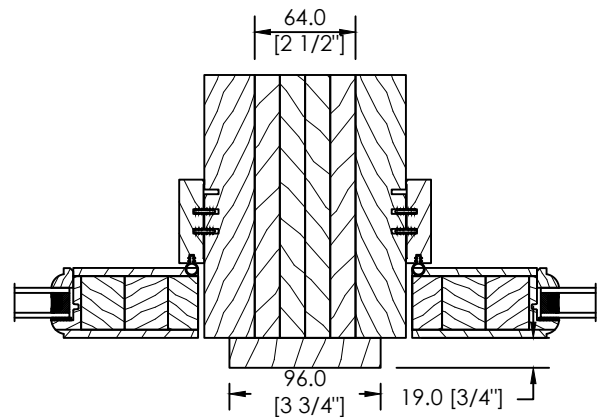

SPACE MULL & STUD POCKET
SOLID - STANDARD 2 1/2"

WOOD FRENCH DOOR
GRIDS OPTIONS

SEE LINK BELOW FOR GRIDS :

CAD FILE http://www.lepagemillwork.com/download/Info-Tech_Grid_Options.dwg

PDF FILE http://www.lepagemillwork.com/download/Info-Tech_Grid_Options.pdf