

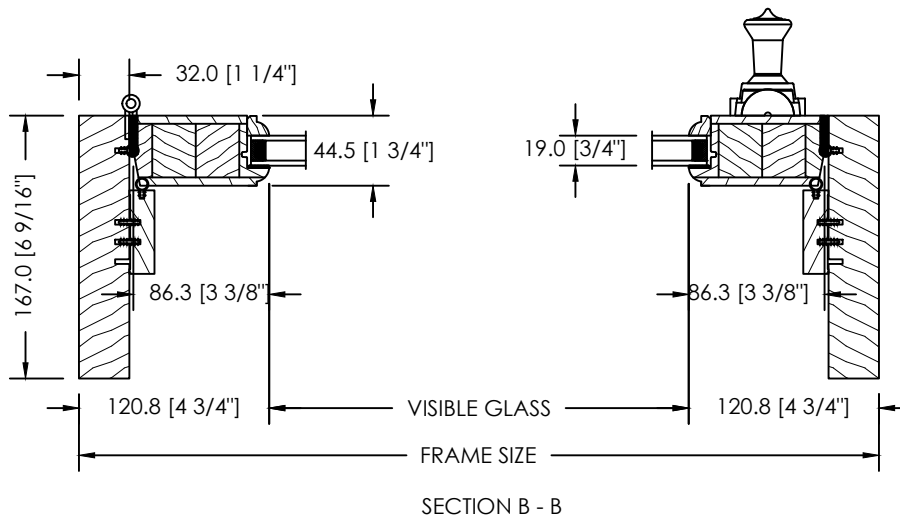
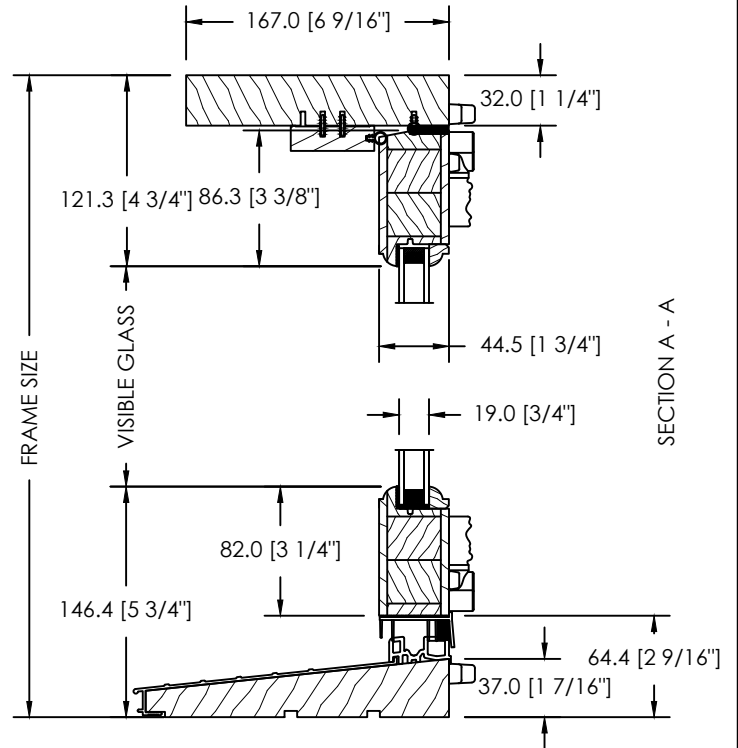
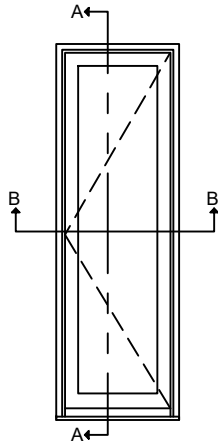


WOOD BALCONY DOOR

6 $\frac{9}{16}$ " FRAME - 1 $\frac{3}{4}$ " SASH



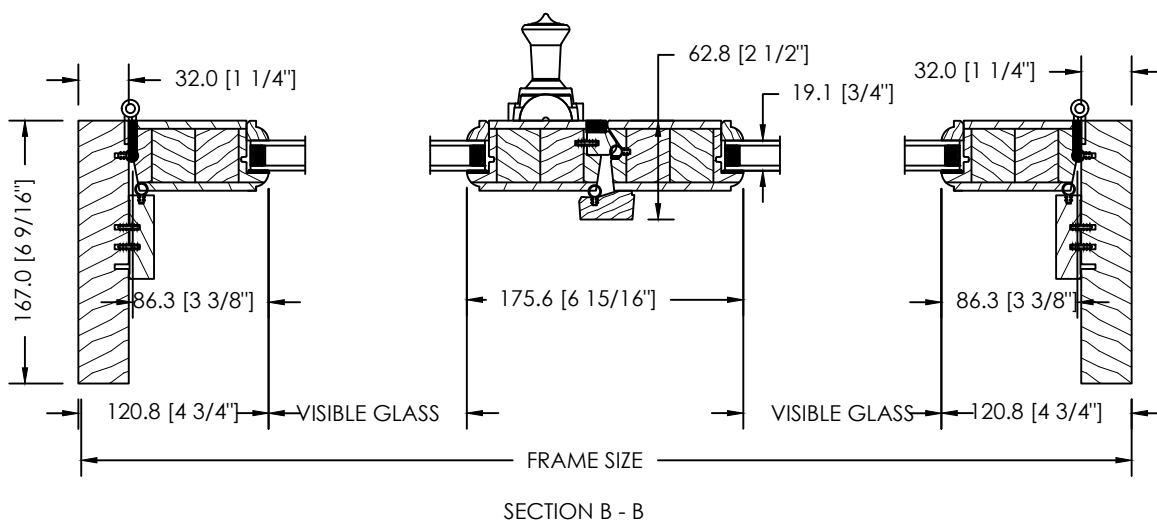


6 $\frac{9}{16}$ " FRAME - 1 $\frac{3}{4}$ " SASH

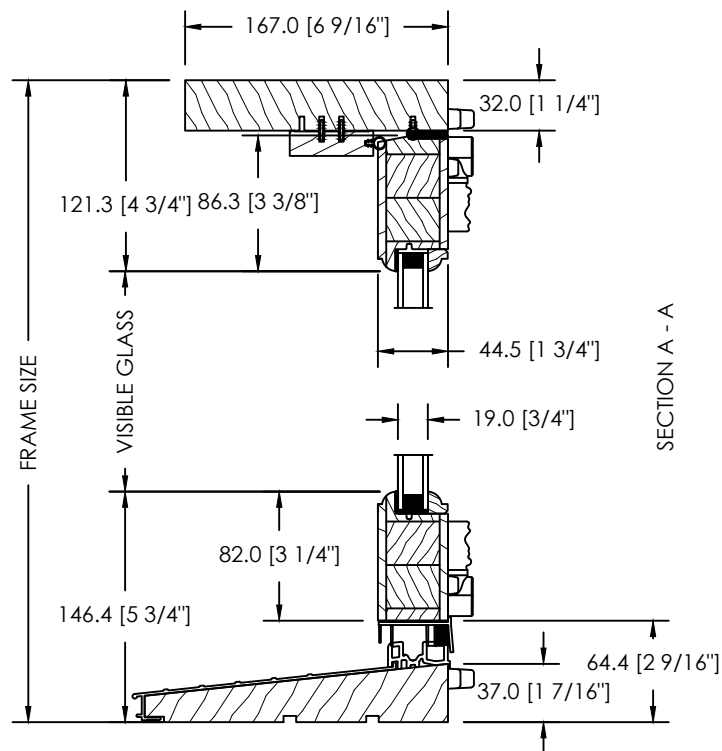




WOOD BALCONY DOOR

6 $\frac{9}{16}$ " FRAME - 1 $\frac{3}{4}$ " SASH






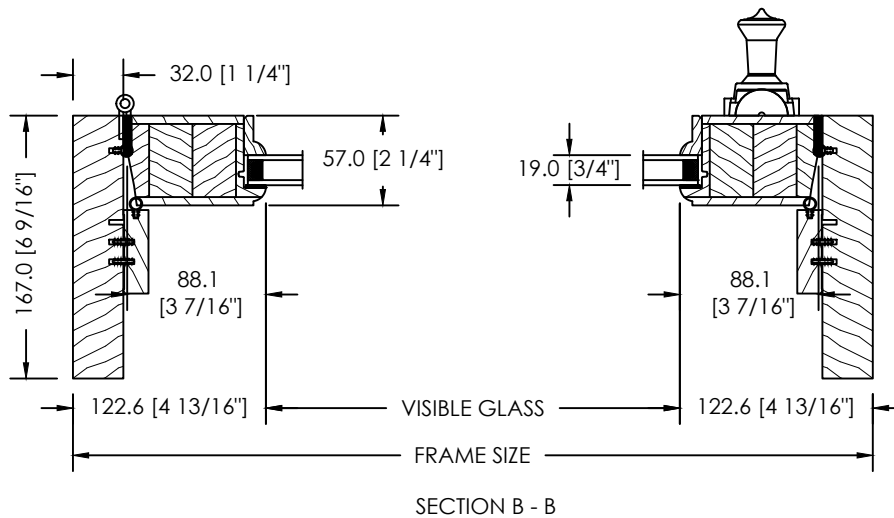
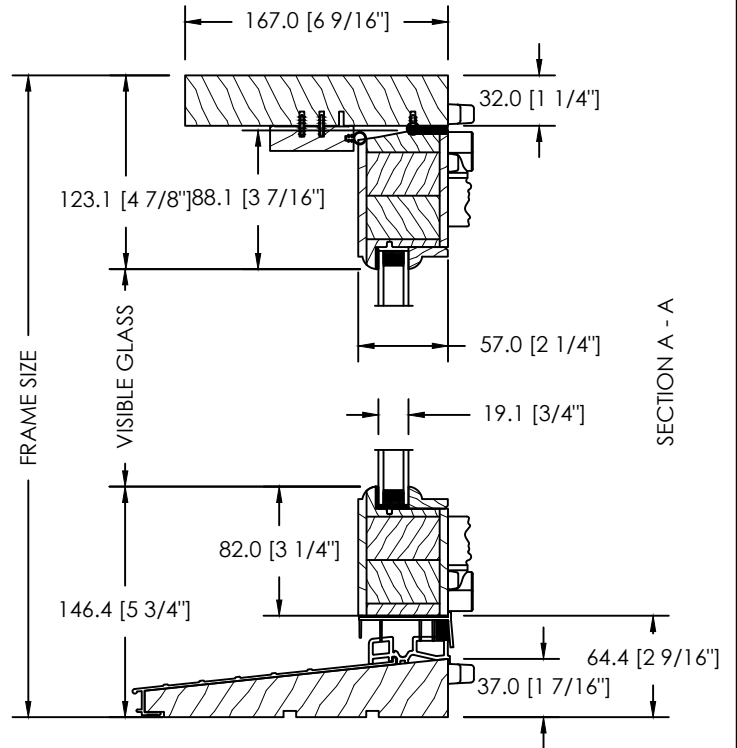
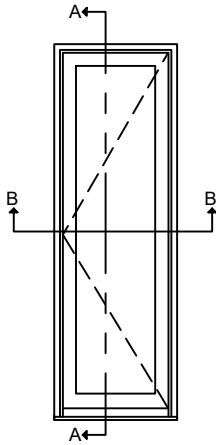


WOOD BALCONY DOOR


6 $\frac{9}{16}$ " FRAME - 1 $\frac{3}{4}$ " SASH

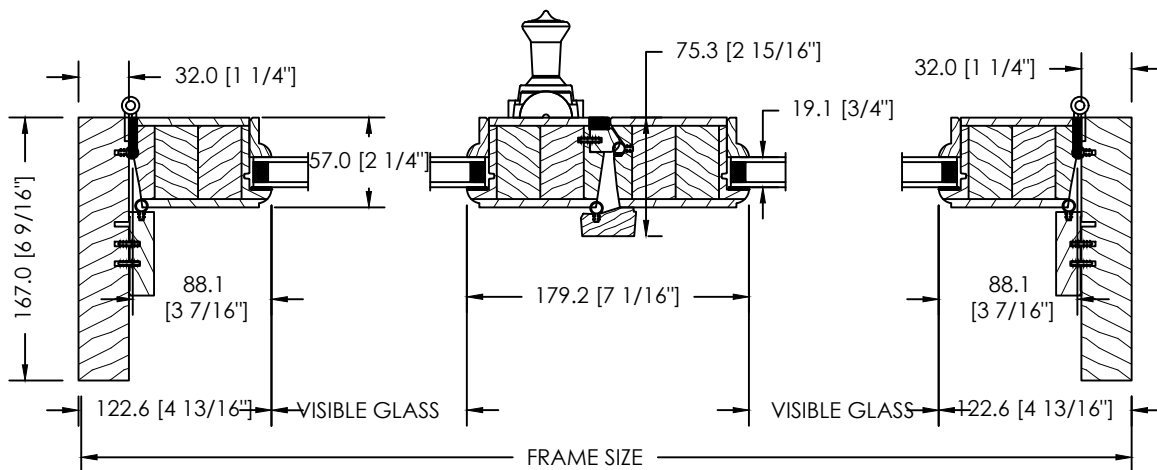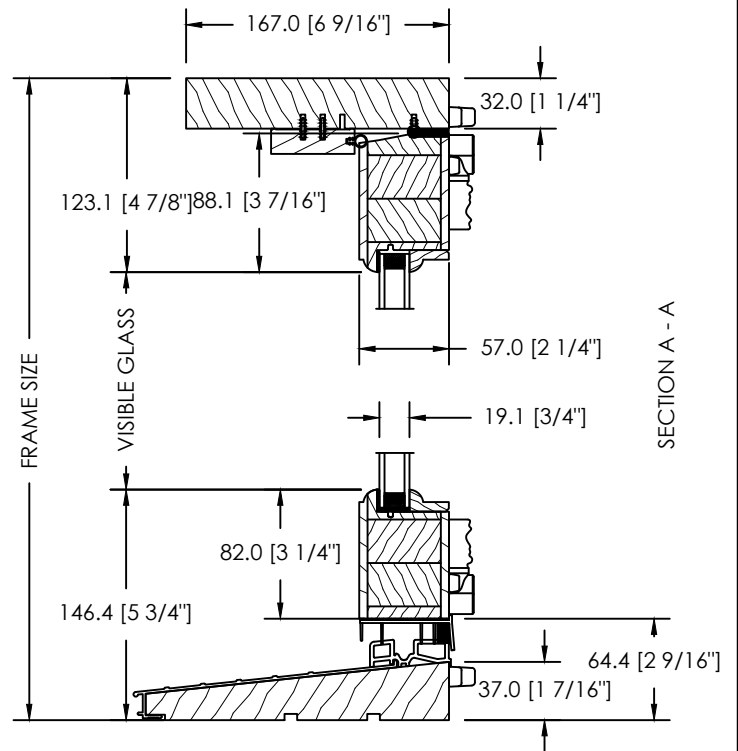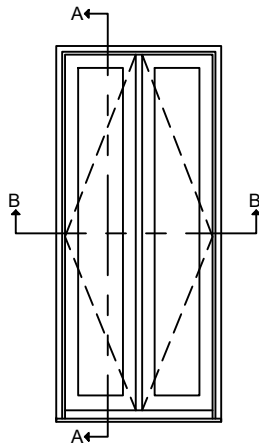


WOOD BALCONY DOOR
DEPTHS STANDARD FRAME

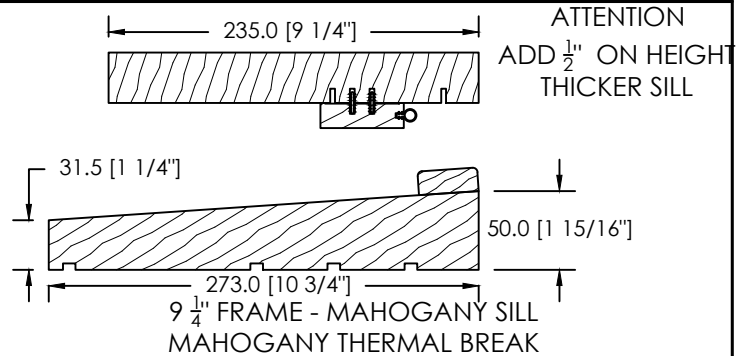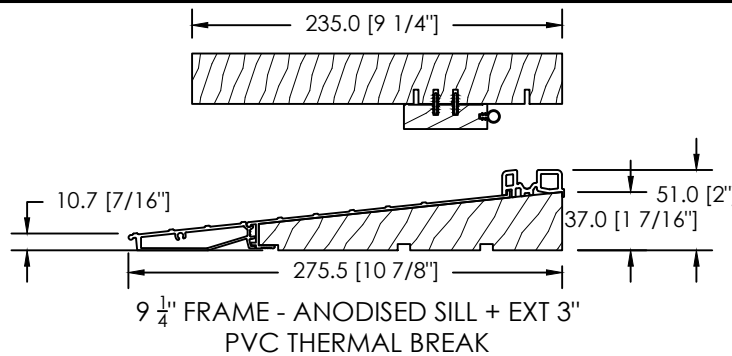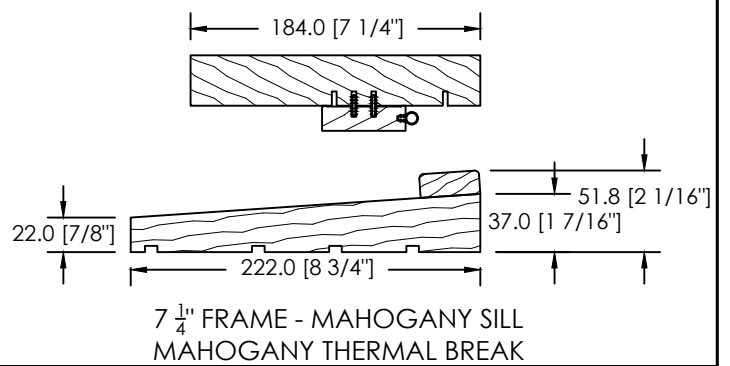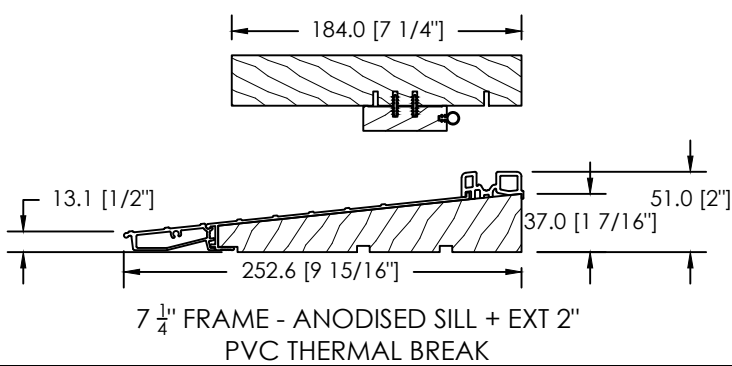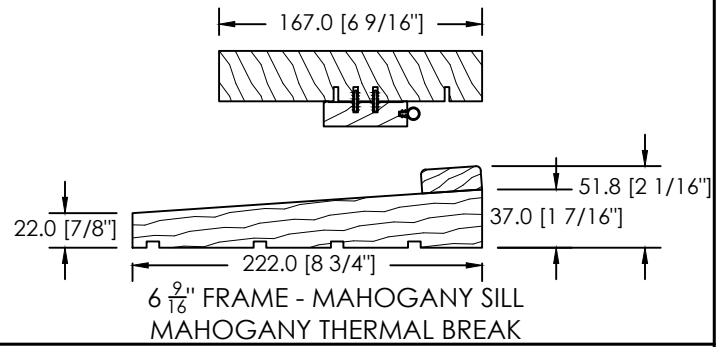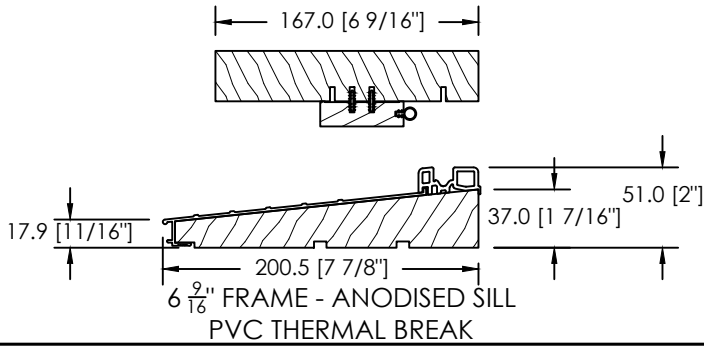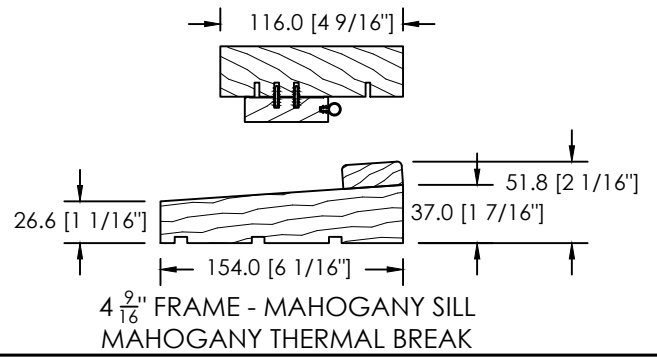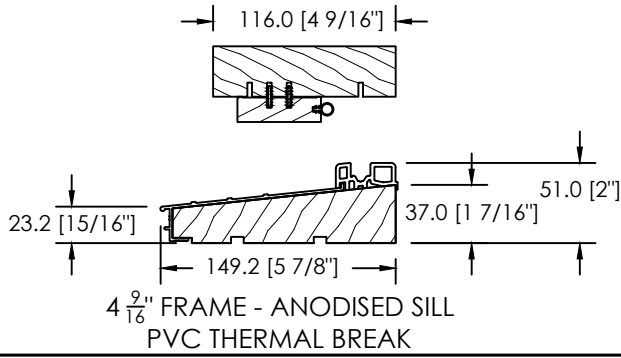


WOOD BALCONY DOOR BRICKMOULD OPTIONS

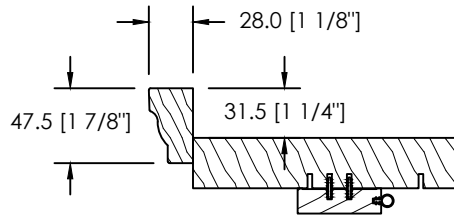


COLONIAL EXTERIOR BRICKMOULD

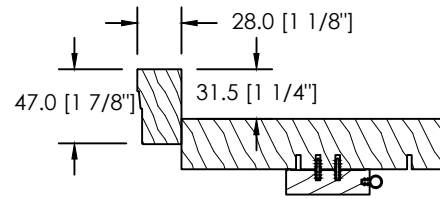


908 BRICKMOULD

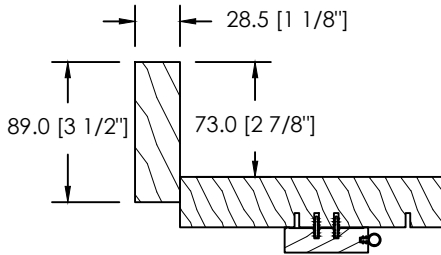

5/4 X 3 1/2" FLAT CASING

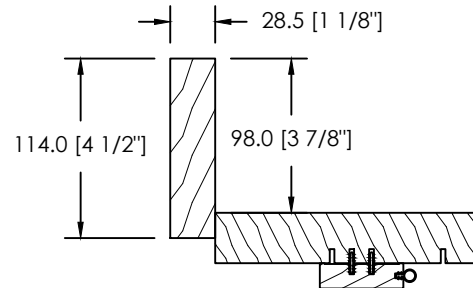


5/4 X 4 1/2" FLAT CASING

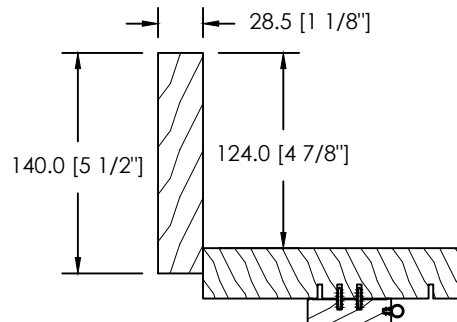


5/4 X 5 1/2" FLAT CASING


WOOD BALCONY DOOR
BRICKMOULD OPTIONS

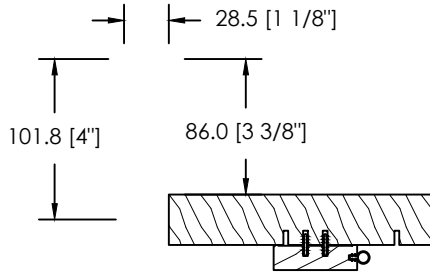


DS-001 BRICKMOULD

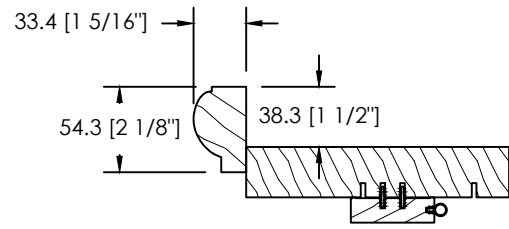


DS-017 BRICKMOULD

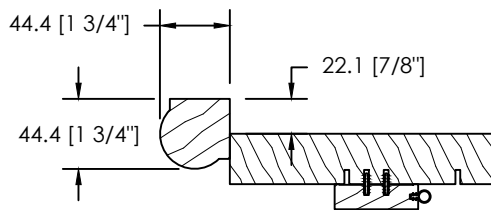


DS-030 BRICKMOULD

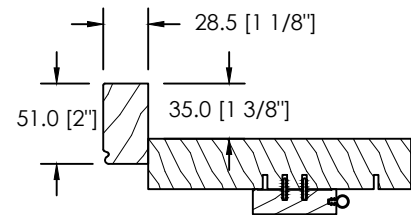


DS-031 BRICKMOULD

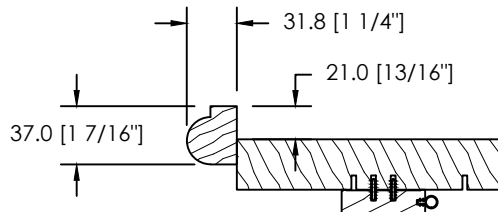

DS-034 BRICKMOULD

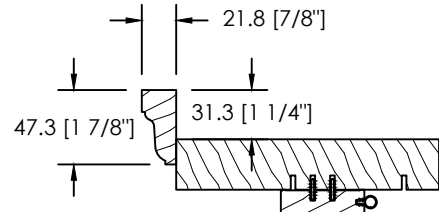


DS-061 BRICKMOULD

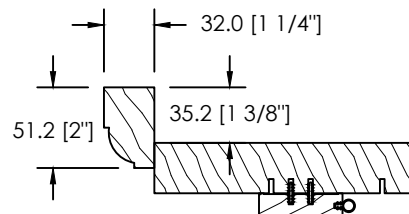


DS-065 BRICKMOULD

WOOD BALCONY DOOR
SASH AND GLASS STOP MODELS



1 $\frac{3}{4}$ " SASH &
COLONIAL SASH STOP




1 $\frac{3}{4}$ " COLONIAL SASH &
SQUARE SASH STOP




1 $\frac{3}{4}$ " PUTTY GLAZE SASH &
COLONIAL SASH STOP




1 $\frac{3}{4}$ " PUTTY GLAZE SASH
& SQUARE SASH STOP




2 $\frac{1}{4}$ " SASH &
COLONIAL SASH STOP




2 $\frac{1}{4}$ " COLONIAL SASH &
SQUARE GLASS STOP




2 $\frac{1}{4}$ " COLONIAL SASH &
DAVIS GLASS STOP




2 $\frac{1}{4}$ " PUTTY GLAZE SASH &
COLONIAL SASH STOP




2 $\frac{1}{4}$ " PUTTY GLAZE SASH &
SQUARE GLASS STOP



2 $\frac{1}{4}$ " PUTTY GLAZE SASH &
DAVIS GLASS STOP



2 $\frac{1}{4}$ " SASH - TRIPLE I.G. &
COLONIAL GLASS STOP



2 $\frac{1}{4}$ " PUTTY GLAZE SASH - TRIPLE I.G. &
SQUARE GLASS STOP

WOOD BALCONY DOOR PANELS MODELS



RAISED PANEL
2 SIDES



EXTERIOR RAISED PANEL
INTERIOR FLAT



EXTERIOR FLAT PANEL
INTERIOR RAISED




DIAMOND PANEL
2 SIDES



EXTERIOR DIAMOND PANEL
INTERIOR FLAT




EXTERIOR FLAT PANEL
INTERIOR DIAMOND




FRENCH PANEL
2 SIDES



EXTERIOR FRENCH PANEL
INTERIOR FLAT





EXTERIOR FLAT PANEL
INTERIOR FRENCH




FLAT PANEL
2 SIDES


WOOD BALCONY DOOR
WOOD SCREN DOOR WS

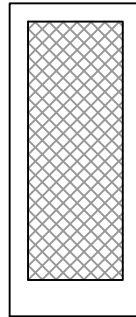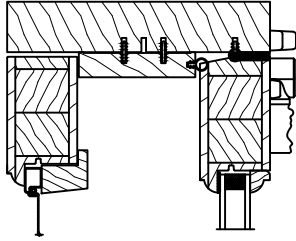





WS-01

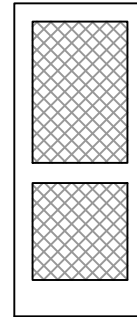




WS-02

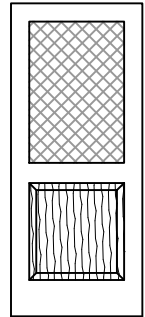

WS-05

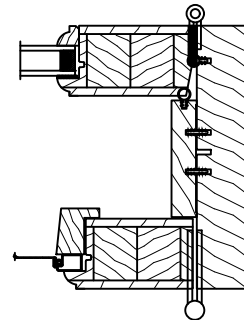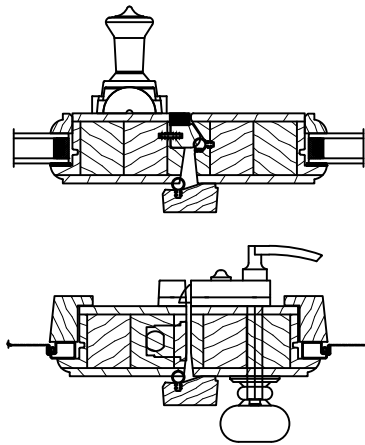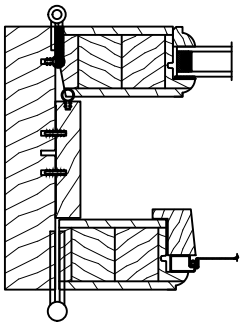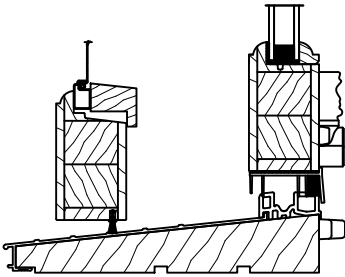


WOOD BALCONY DOOR
SCREEN ALUMINIUM DOOR

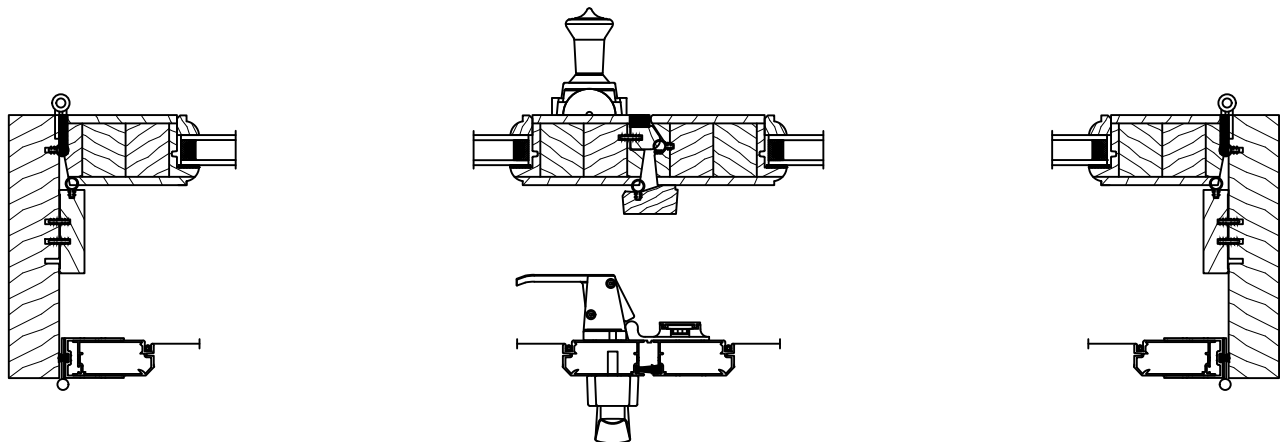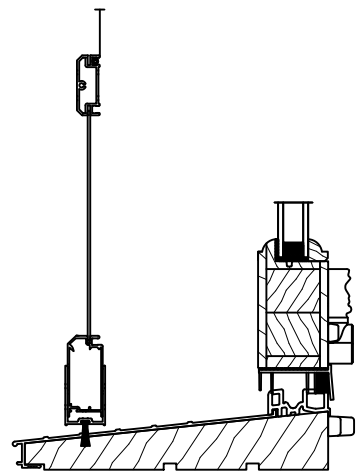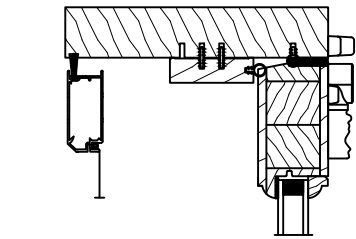


SCREEN DOOR AS-09 (WITH HINGES)


WOOD BALCONY DOOR
HORIZONTAL ASSEMBLY

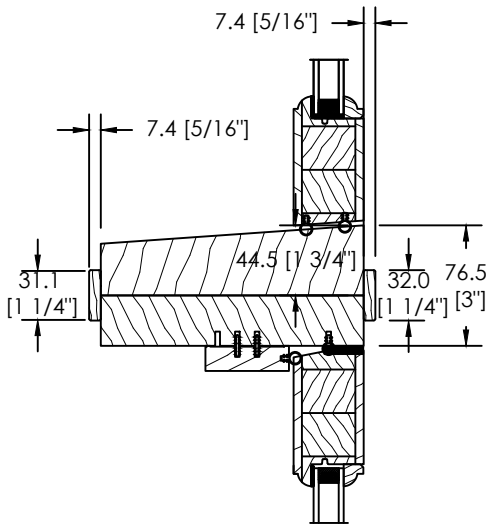


TRANSOM WITH SASH
MODULAR ASSEMBLY

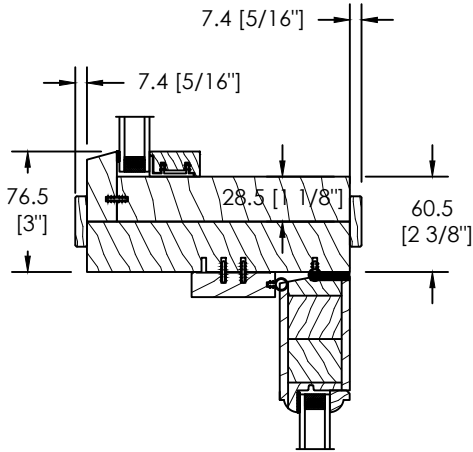


DIRECT SET (TR-1) TRANSOM
MODULAR ASSEMBLY

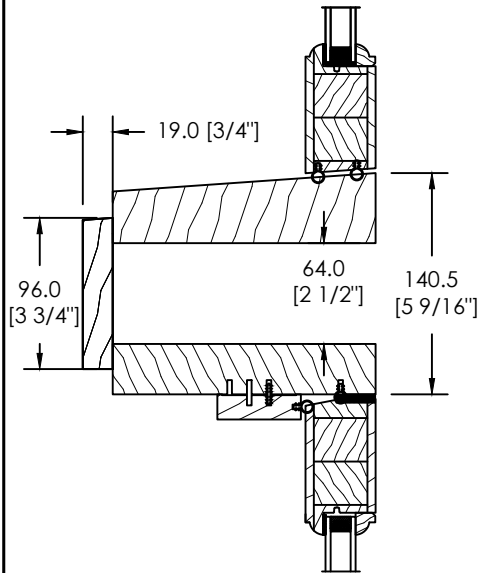


SPACE MULL & STUD POCKET
STANDARD 2 1/2"

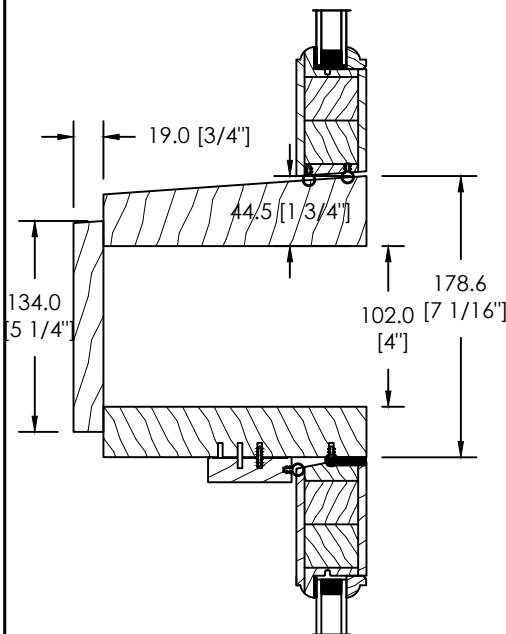

SPACE MULL & STUD POCKET
STANDARD 4"

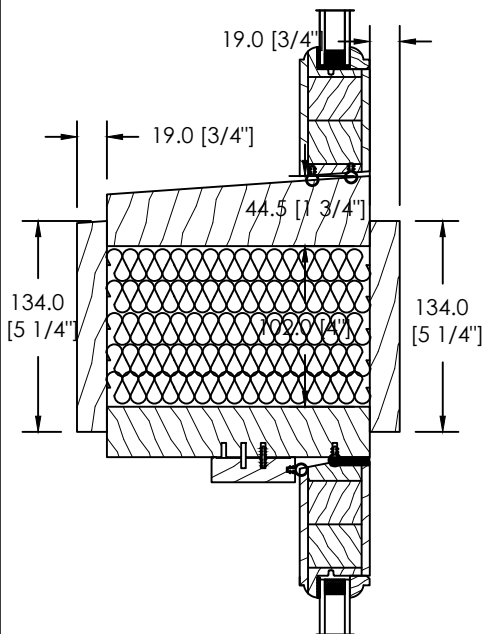


SPACE MULL & STUD POCKET
INSULATED - STANDARD 4"

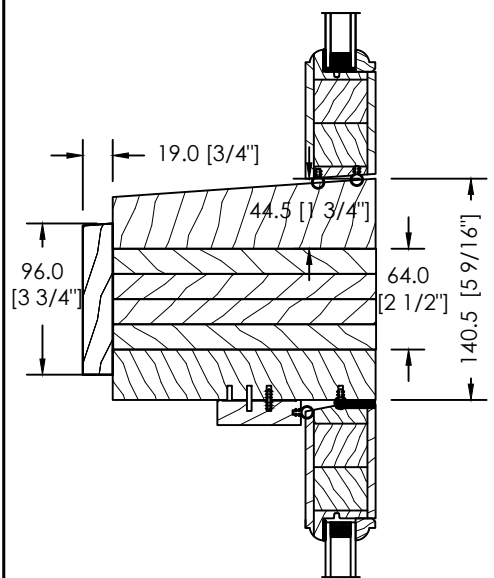


SPACE MULL & STUD POCKET
SOLID - STANDARD 2"


WOOD BALCONY DOOR VERTICAL ASSEMBLY

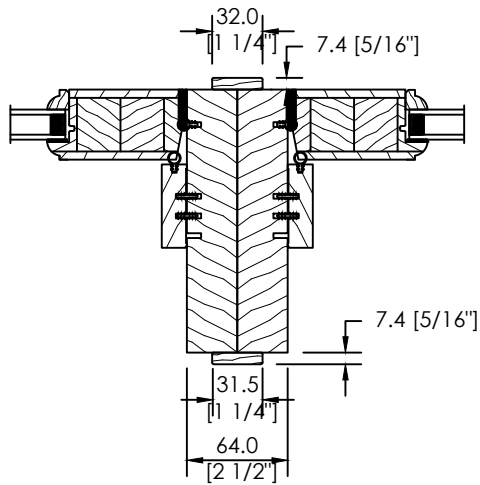


VERTICAL MODULAR ASSEMBLY

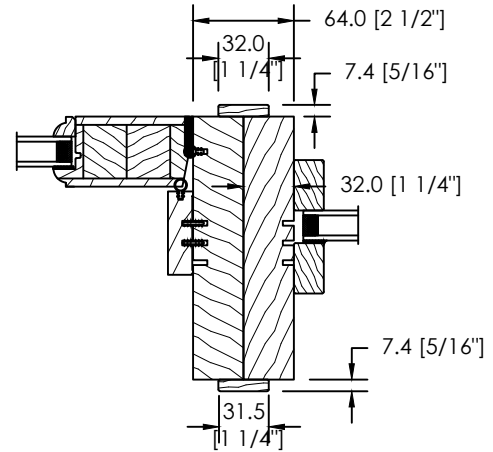


VERTICAL MODULAR ASSEMBLY
WITH DIRECT SET (SL-1)

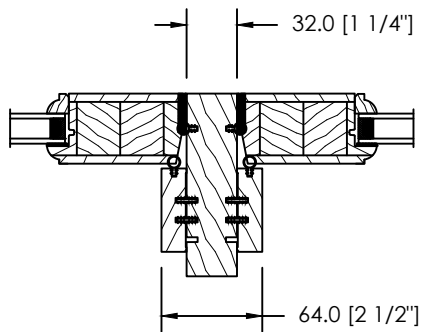


VERTICAL STRUCTURAL ASSEMBLY

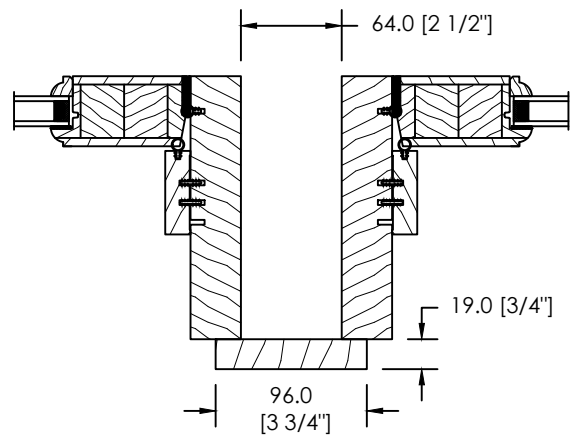

SPACE MULL & STUD POCKET
STANDARD 2 1/2"

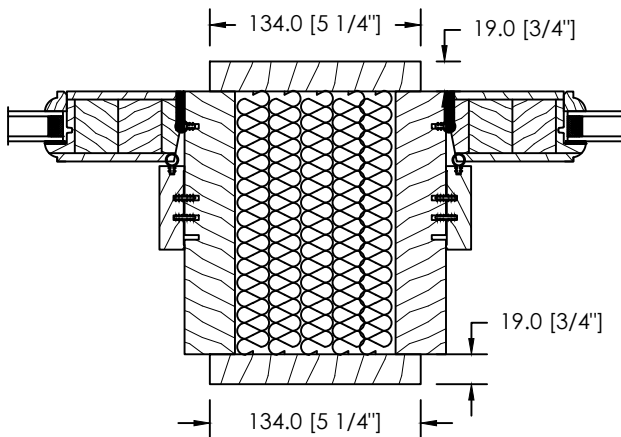




SPACE MULL & STUD POCKET
INSULATED - STANDARD 4"

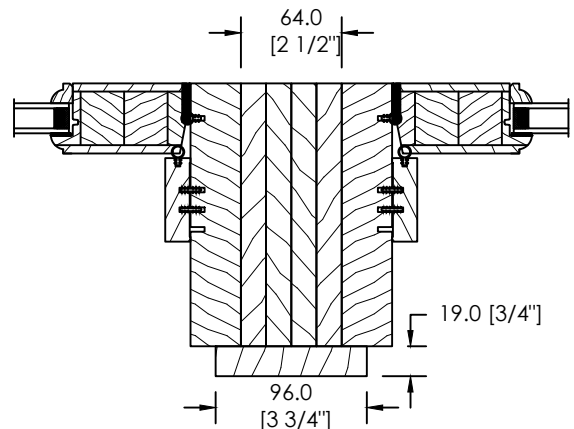

SPACE MULL & STUD POCKET
SOLID - STANDARD 2 1/2"

ALUMINIUM CLAD BALCONY DOOR




6 $\frac{9}{16}$ " FRAME - 1 $\frac{3}{4}$ " SASH

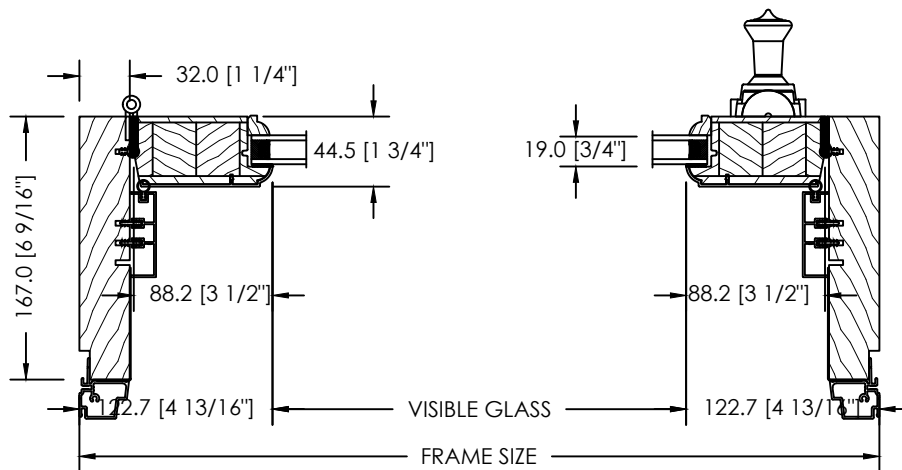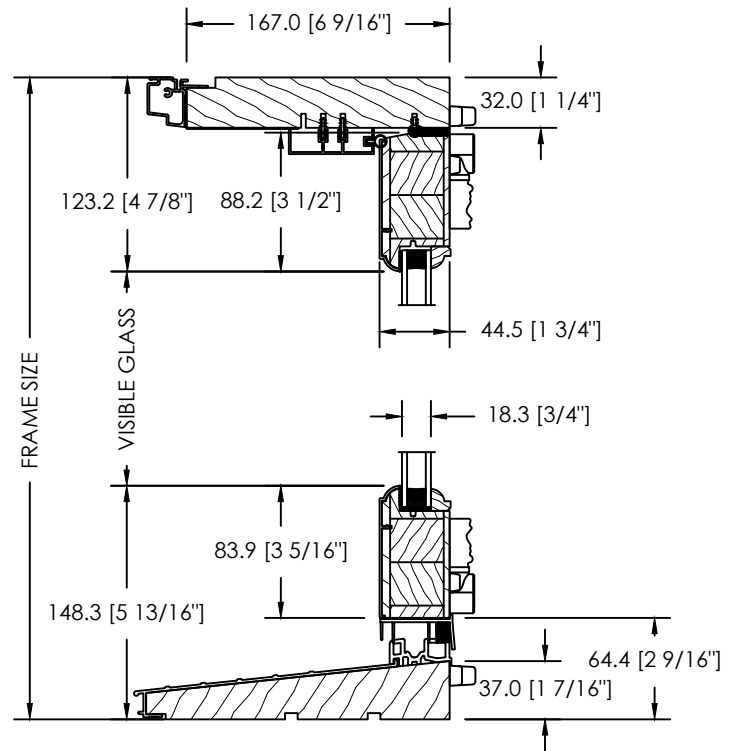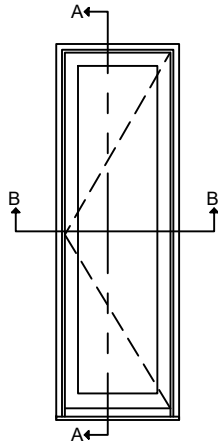

SECTION B - B

ALUMINIUM CLAD BALCONY DOOR




6 ⁹/₁₆" FRAME - 1 ³/₄" SASH

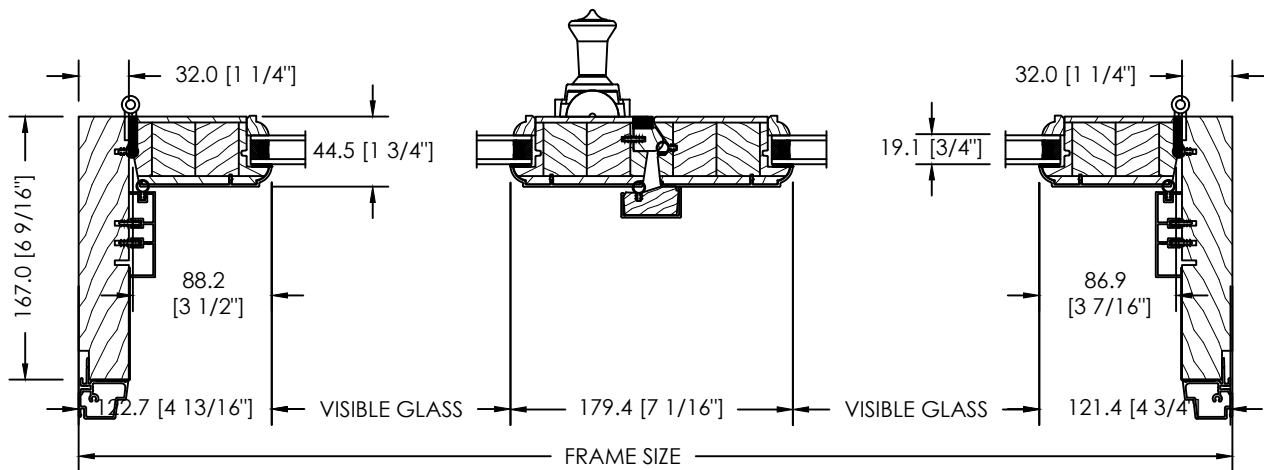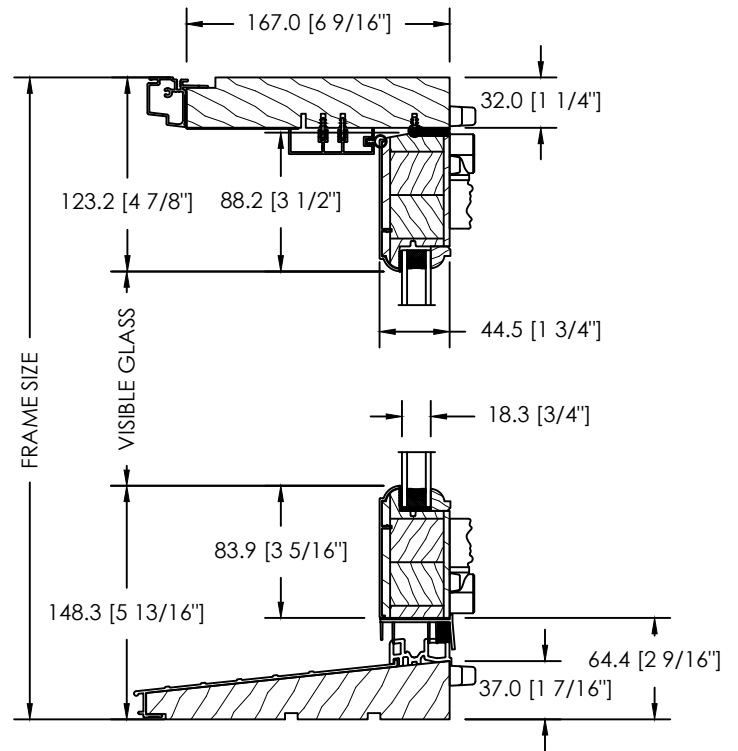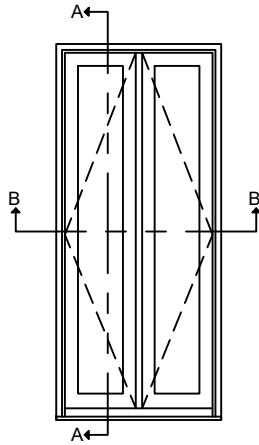

SECTION B - B




ALUMINIUM CLAD BALCONY DOOR

6 ⁹/₁₆" FRAME - 2 ¹/₄" SASH






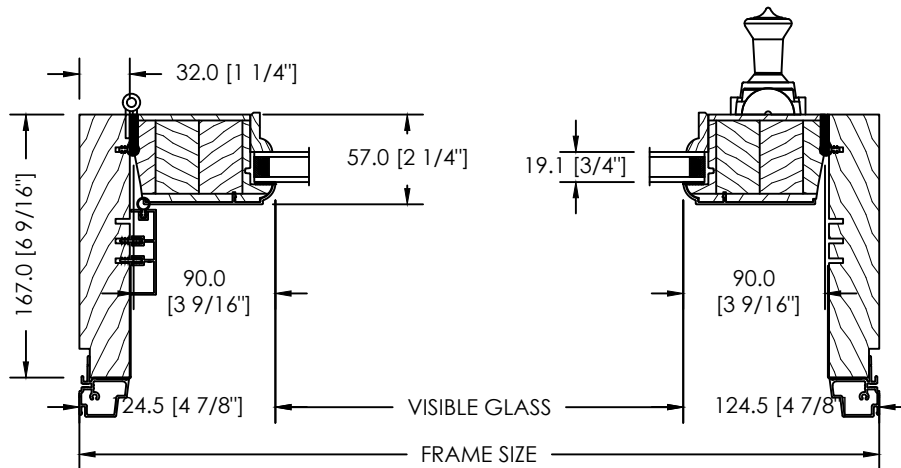
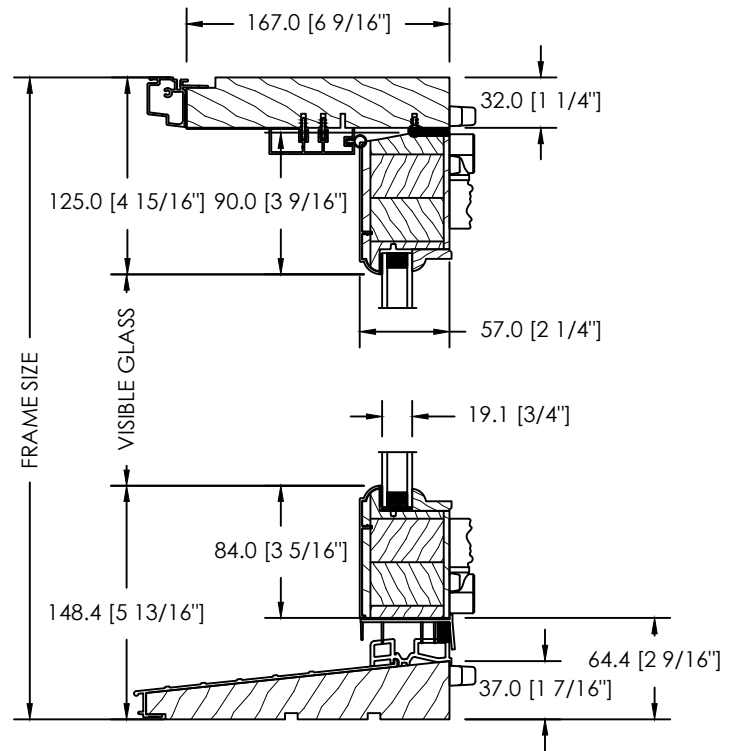
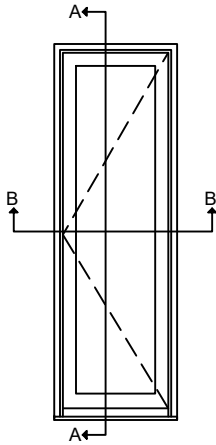


SECTION B - B


6 $\frac{9}{16}$ " FRAME - 2 $\frac{1}{4}$ " SASH

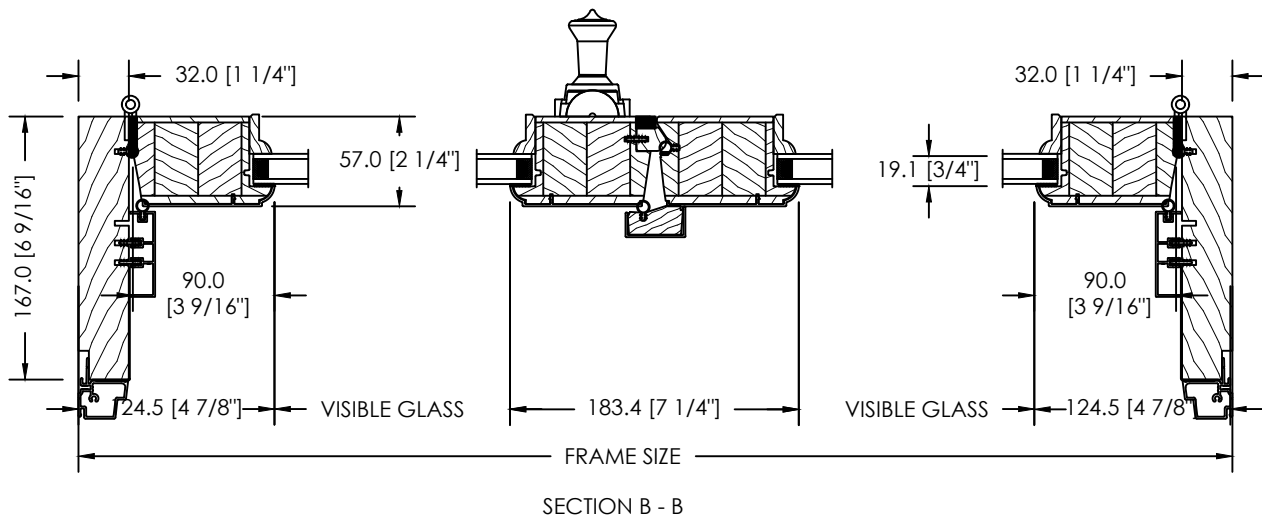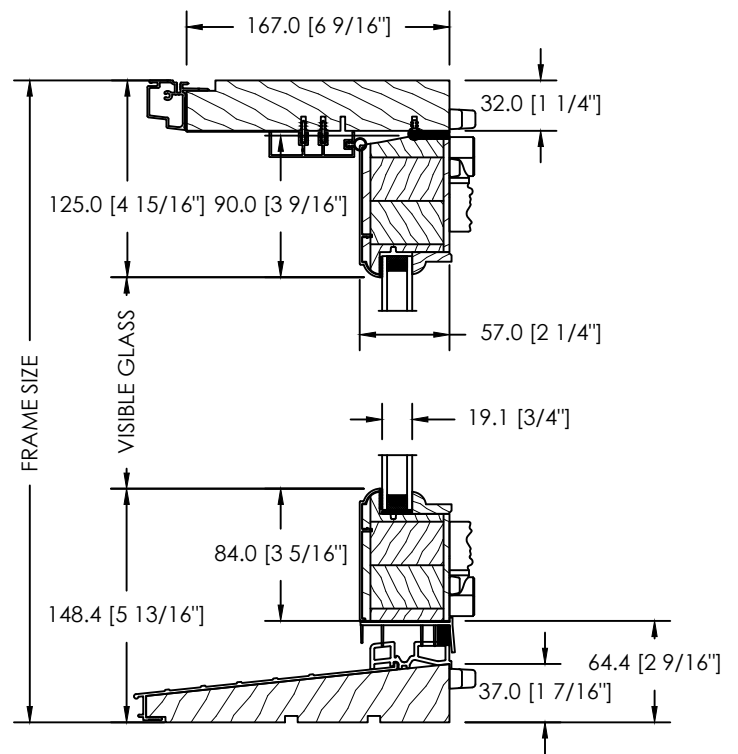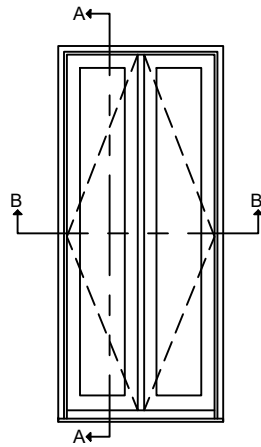


ALUMINIUM CLAD BALCONY DOOR
DEPTHS STANDARD FRAME

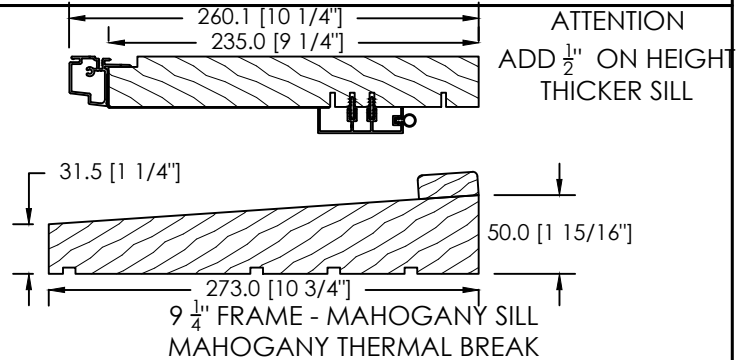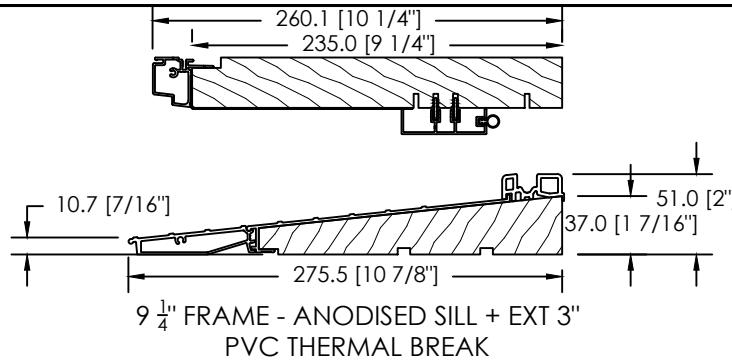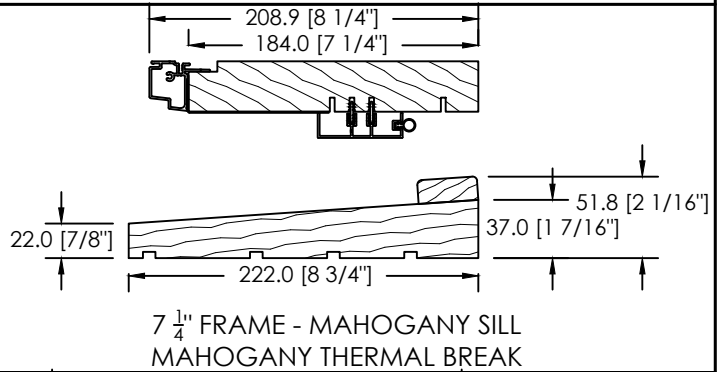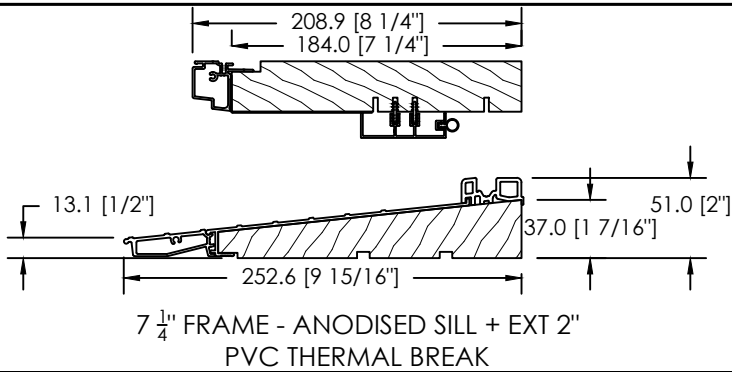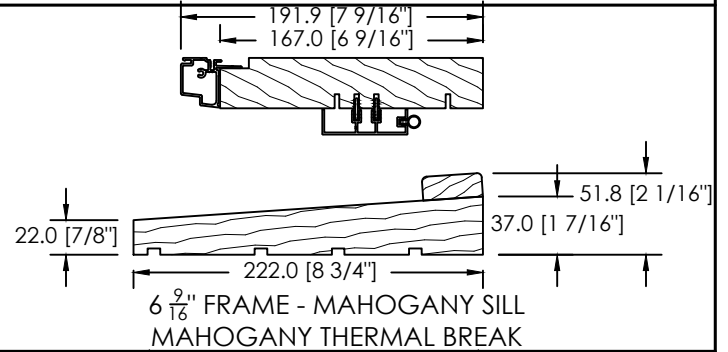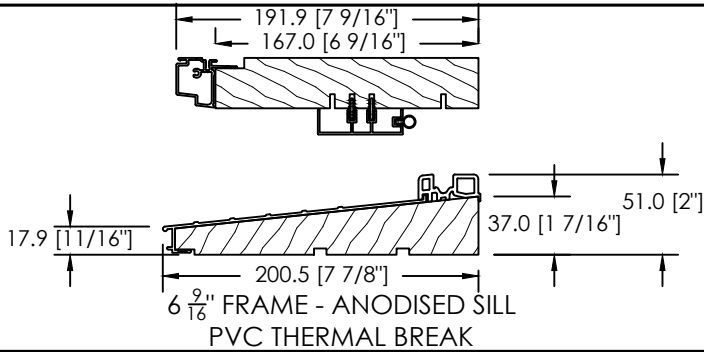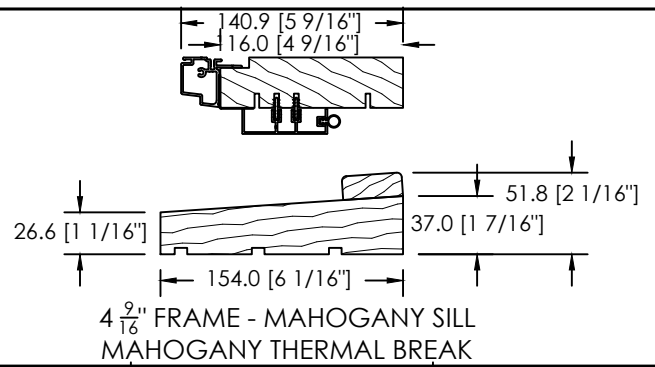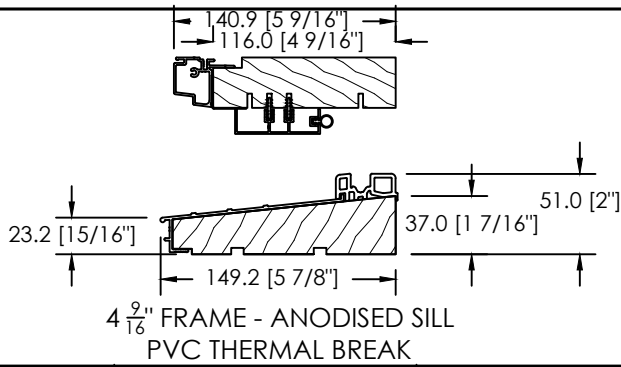


ALUMINIUM CLAD BALCONY DOOR EXTENSIONS AND BRICKMOULD OPTIONS

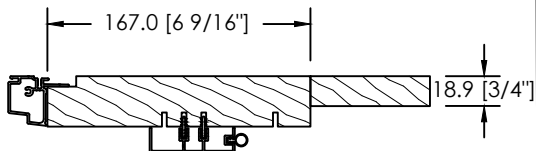


INTERIOR EXTENSION

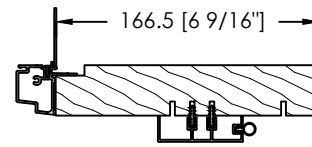


NAILING FIN

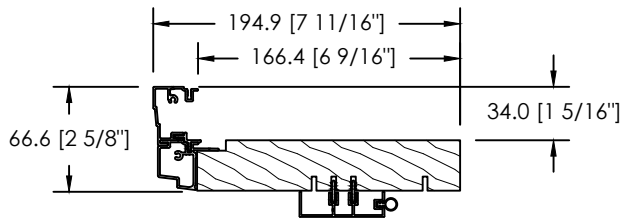


ALUMINIUM CLAD 908 BRICKMOULD

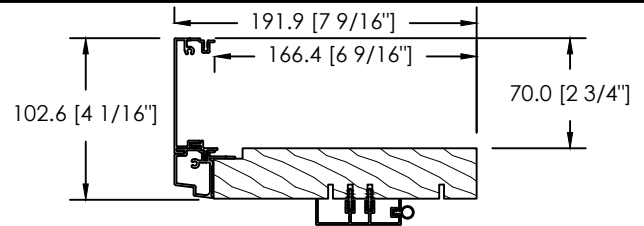


ALUMINIUM CLAD 2 3/4" FLAT BRICKMOULD D-066

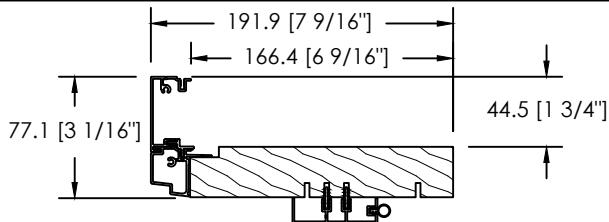


ALUMINIUM CLAD 1 3/4" FLAT BRICKMOULD D-116

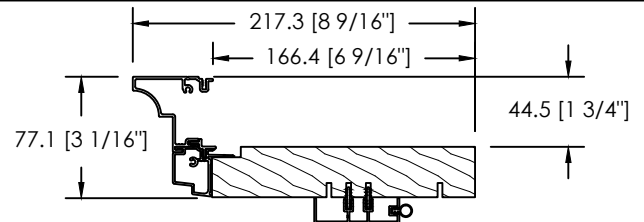

ALUMINIUM CLAD SKYLER BRICKMOULD D-174

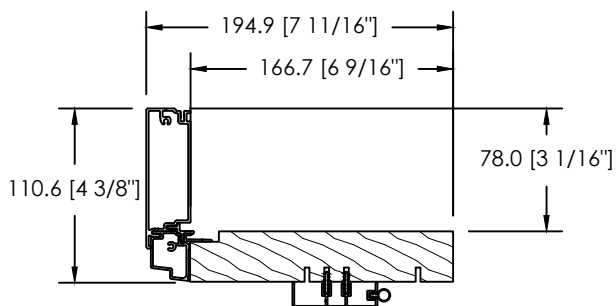


ALUMINIUM CLAD 3 1/2" FLAT BRICKMOULD D-050

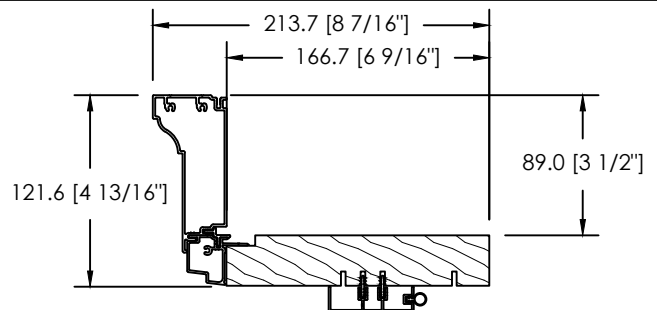

ALUMINIUM CLAD BACK BEND BRICKMOULD D-090

ALUMINIUM CLAD BALCONY DOOR
SASH AND GLASS STOP MODELS




1 $\frac{3}{4}$ " SASH &
COLONIAL SASH STOP




1 $\frac{3}{4}$ " COLONIAL SASH &
SQUARE SASH STOP



1 $\frac{3}{4}$ " CONTEMPORARY SASH &
COLONIAL SASH STOP



1 $\frac{3}{4}$ " CONTEMPORARY SASH
& SQUARE SASH STOP




2 $\frac{1}{4}$ " SASH &
COLONIAL SASH STOP




2 $\frac{1}{4}$ " COLONIAL SASH &
SQUARE GLASS STOP




2 $\frac{1}{4}$ " COLONIAL SASH &
DAVIS GLASS STOP




2 $\frac{1}{4}$ " CONTEMPORARY &
COLONIAL SASH STOP




2 $\frac{1}{4}$ " CONTEMPORARY SASH &
SQUARE GLASS STOP



2 $\frac{1}{4}$ " CONTEMPORARY SASH &
DAVIS GLASS STOP




2 $\frac{1}{4}$ " SASH - TRIPLE I.G. &
COLONIAL GLASS STOP



2 $\frac{1}{4}$ " CONTEMPORARY SASH - TRIPLE I.G. &
SQUARE GLASS STOP


ALUMINIUM CLAD BALCONY DOOR PANELS MODELS



RAISED PANEL
2 SIDES




EXTERIOR RAISED PANEL
INTERIOR FLAT




EXTERIOR FLAT PANEL
INTERIOR RAISED



FLAT PANEL
2 SIDES





EXTERIOR FLAT PANEL
INTERIOR DIAMOND




EXTERIOR FLAT PANEL
INTERIOR FRENCH


ALUMINIUM CLAD BALCONY DOOR
WOOD SCREN DOOR WS

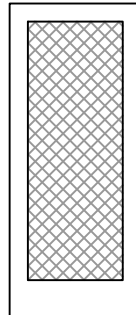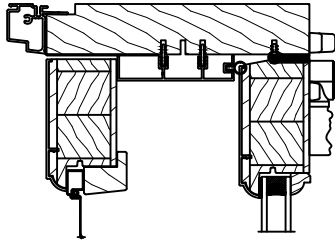





WS-01

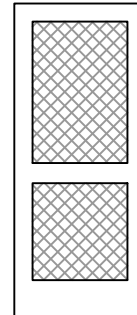






WS-02

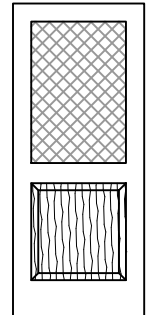

WS-05

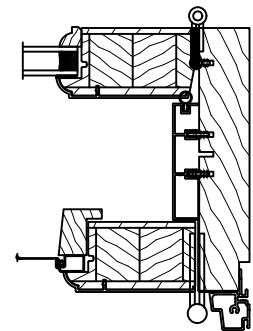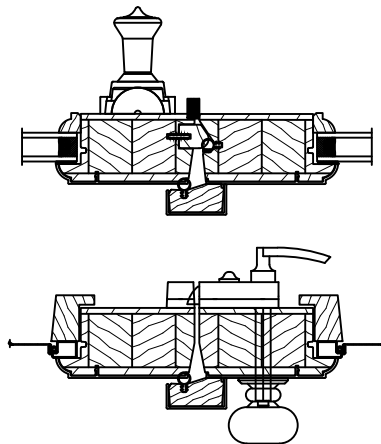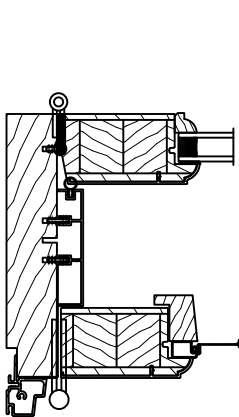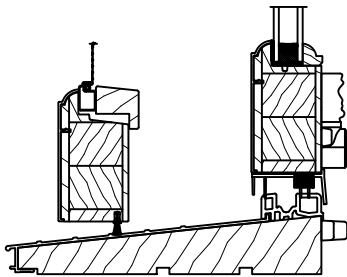


ALUMINIUM CLAD BALCONY DOOR
SCREEN ALUMINIUM DOOR

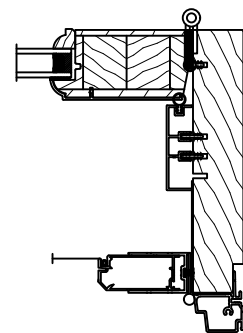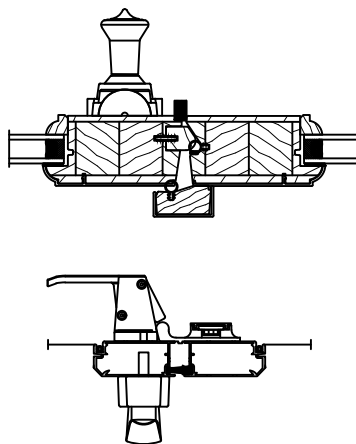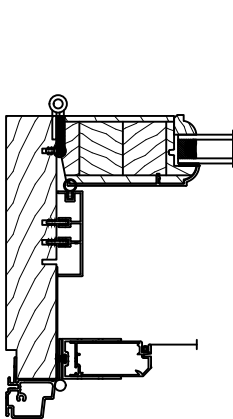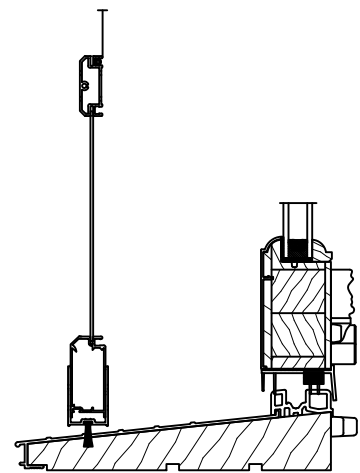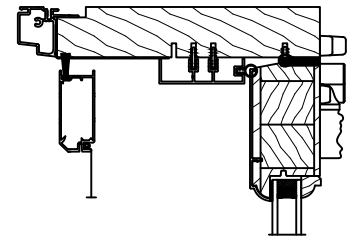


SCREEN DOOR AS-09 (WITH HINGES)


ALUMINIUM CLAD BALCONY DOOR HORIZONTAL ASSEMBLY

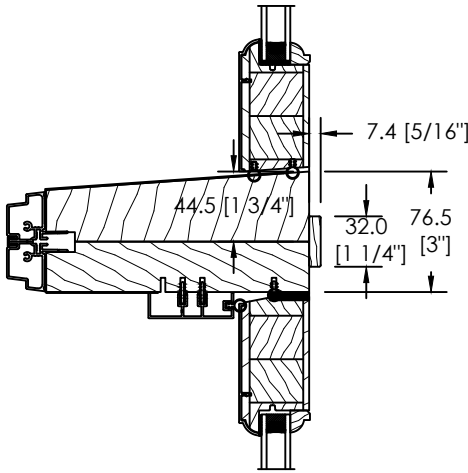


TRANSOM WITH SASH
MODULAR ASSEMBLY

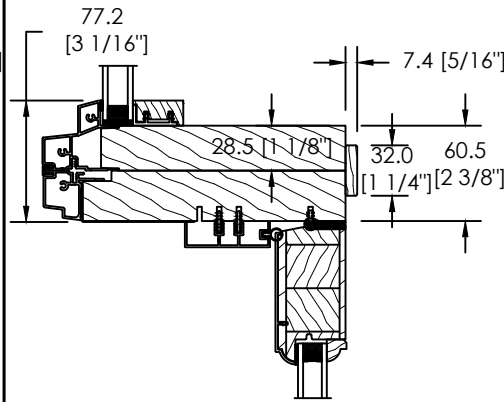


DIRECT SET (TR-1) TRANSOM
MODULAR ASSEMBLY

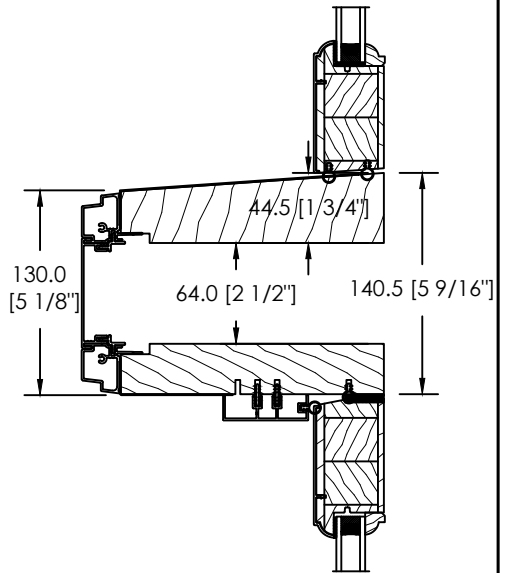


SPACE MULL & STUD POCKET
STANDARD 2 1/2"

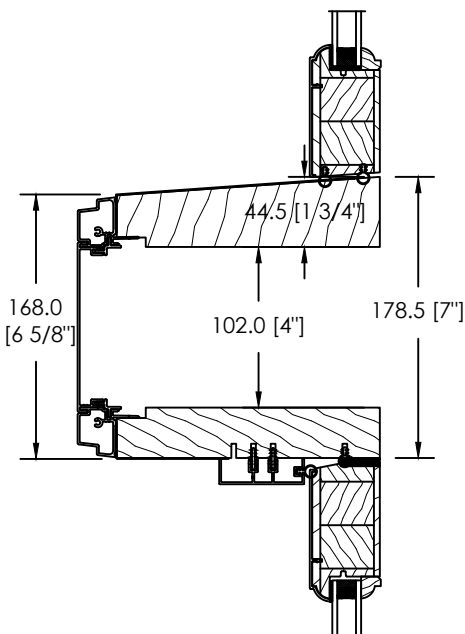

SPACE MULL & STUD POCKET
STANDARD 4"

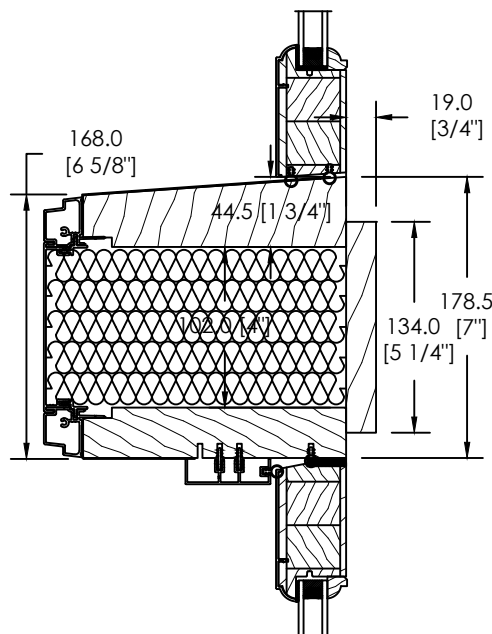


SPACE MULL & STUD POCKET
INSULATED - STANDARD 4"

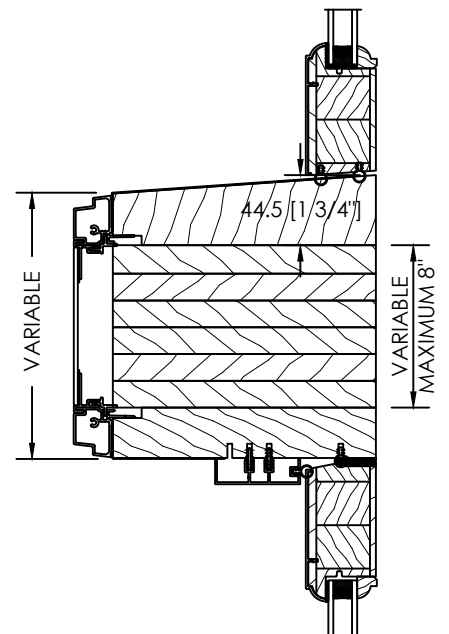


SPACE MULL & STUD POCKET
SOLID - CUSTOM


ALUMINIUM CLAD BALCONY DOOR VERTICAL ASSEMBLY

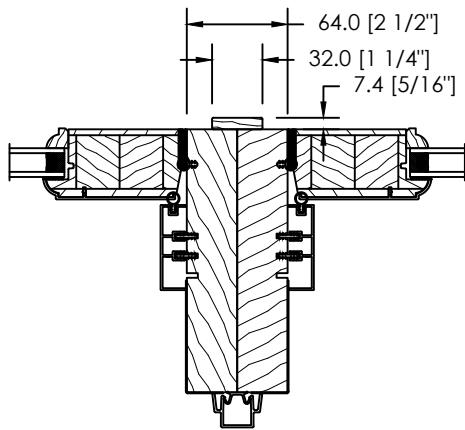


VERTICAL MODULAR ASSEMBLY

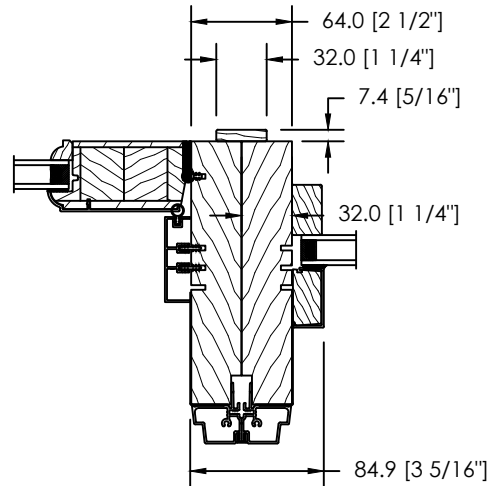


VERTICAL MODULAR ASSEMBLY
WITH DIRECT SET (SL-1)

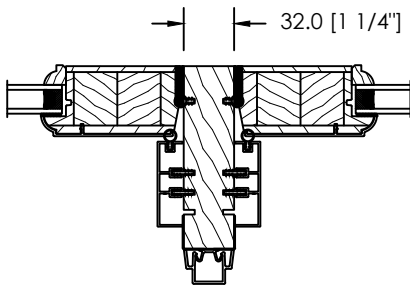


VERTICAL STRUCTURAL ASSEMBLY

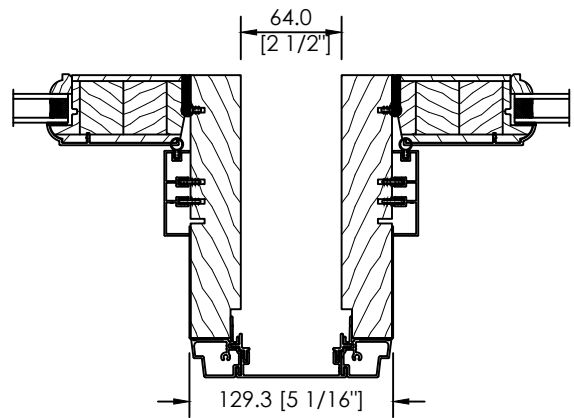

SPACE MULL & STUD POCKET
STANDARD 2 1/2"

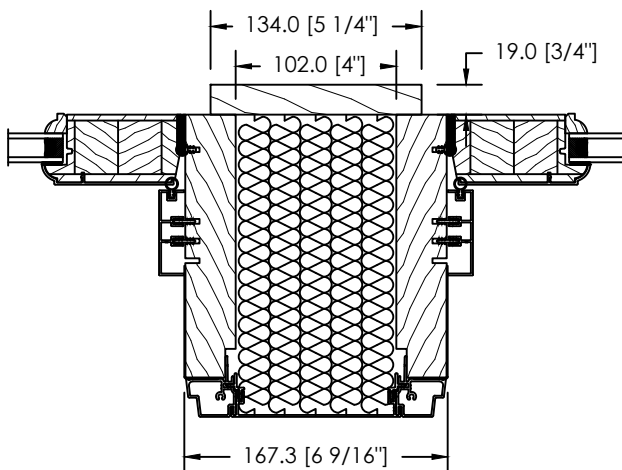

SPACE MULL & STUD POCKET
INSULATED - STANDARD 4"

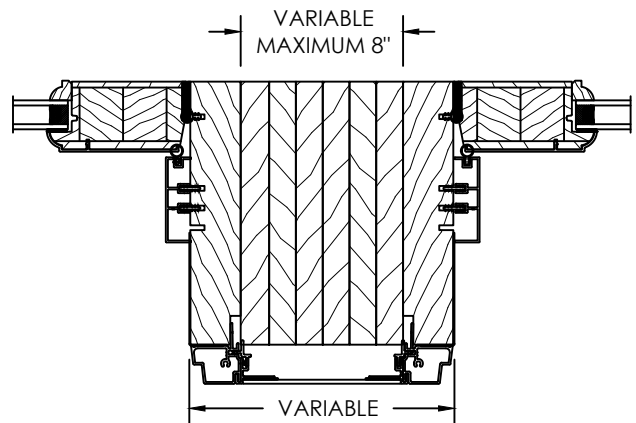

SPACE MULL & STUD POCKET
SOLID - CUSTOM