
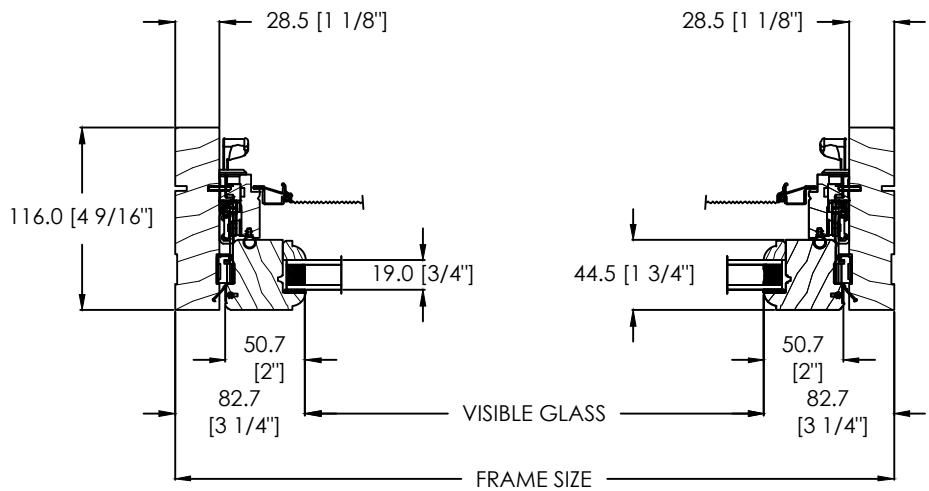
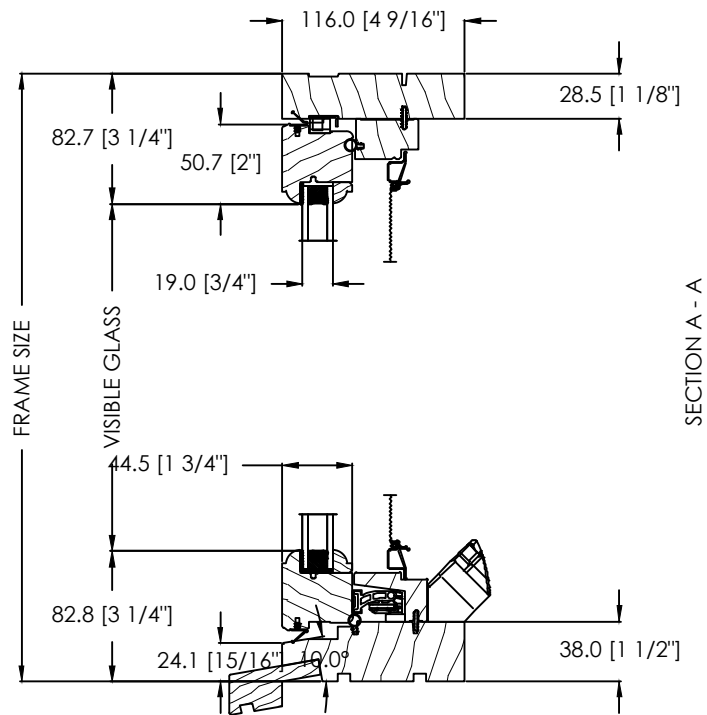


WOOD AWNING A-100 WINDOW (1 3/4" SASH, 4 9/16" FRAME)

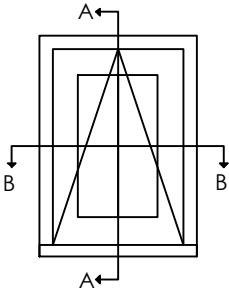

WOOD AWNING A-100 WINDOW (1 3/4" SASH, 4 9/16" FRAME)

The figure consists of four main views of the Wood Awning A-100 Window:



- Plan View (Top Left):** Shows the window layout with section lines A-A, B-B, and C-C.
- Section A-A (Top Right):** A vertical cross-section showing the frame and sash assembly. Dimensions include:
 - Frame Size: 116.0 [4 9/16"]
 - Visible Glass: 82.7 [3 1/4"]
 - Sash Depth: 28.5 [1 1/8"]
 - Internal Spacing: 50.7 [2"]
 - Bottom Mounting: 19.0 [3/4"]
- Section B-B (Middle Right):** A vertical cross-section showing the frame and sash assembly. Dimensions include:
 - Frame Size: 116.0 [4 9/16"]
 - Visible Glass: 82.8 [3 1/4"]
 - Sash Depth: 28.5 [1 1/8"]
 - Internal Spacing: 50.7 [2"]
 - Bottom Mounting: 19.0 [3/4"]
 - Angle: 60.0°
 - Bottom Mounting: 38.0 [1 1/2"]
- Section C-C (Bottom):** A horizontal cross-section showing the frame and sash assembly. Dimensions include:
 - Frame Size: 136.9 [5 3/8"]
 - Visible Glass: 116.0 [4 9/16"]
 - Sash Depth: 28.5 [1 1/8"]
 - Internal Spacing: 50.7 [2"]
 - Bottom Mounting: 19.0 [3/4"]
 - Angle: 60.0°
 - Bottom Mounting: 38.0 [1 1/2"]

LEPAGE
MILLWORK


APRIL 2026

SCALE: 2 1/2" = 1'-0"



PAGE 2/19

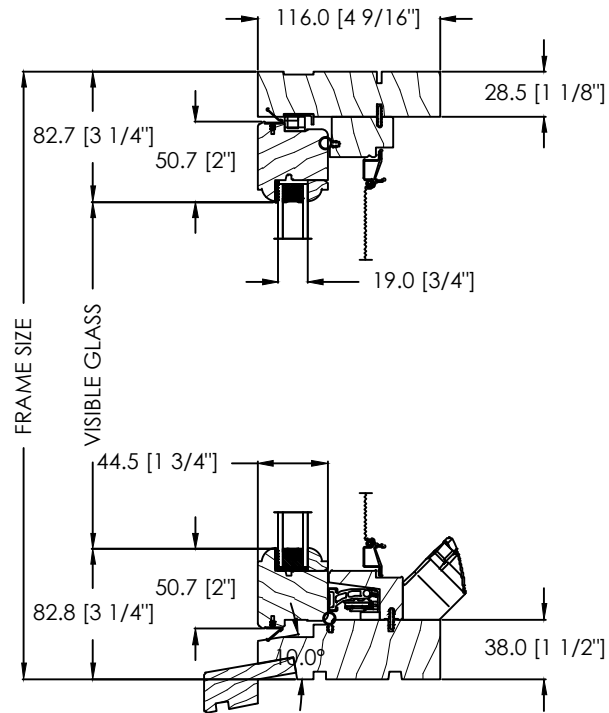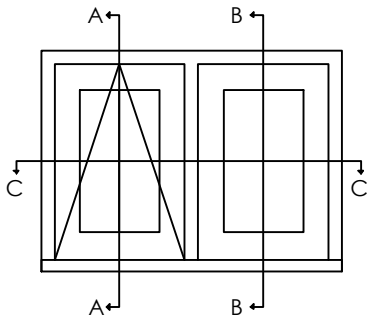

SECTION A - A


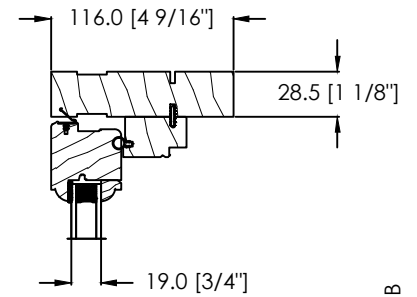


SECTION B - B

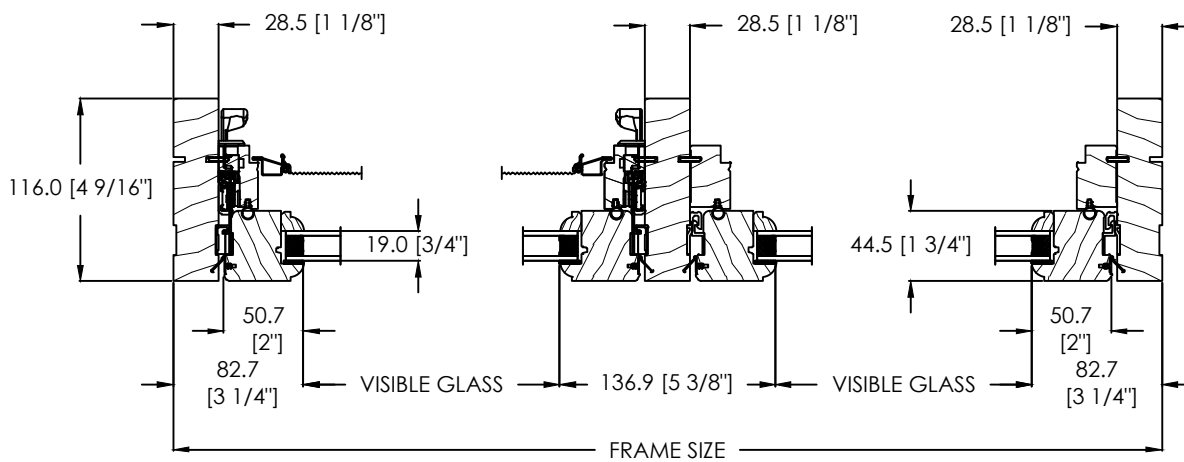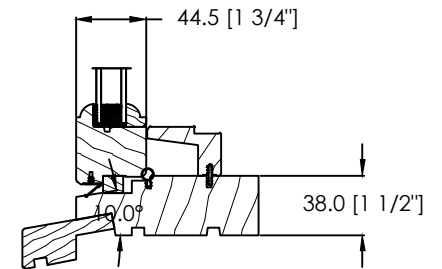


SECTION C - C

WOOD AWNING A-100 WINDOW (1 3/4" SASH, 4 9/16" FRAME)

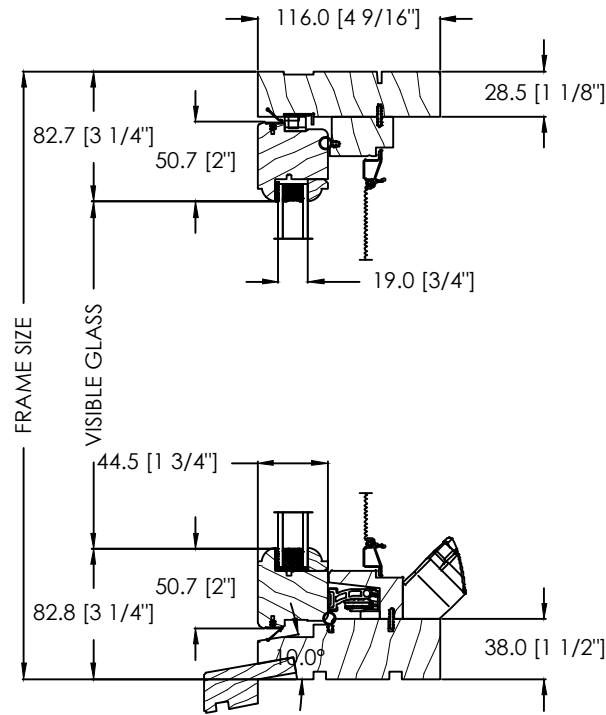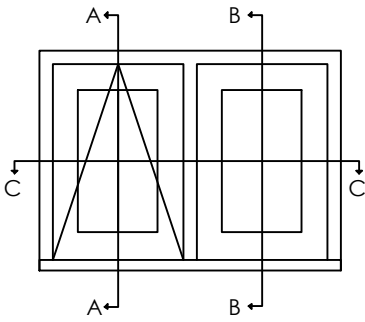



SECTION A - A

SECTION B - B

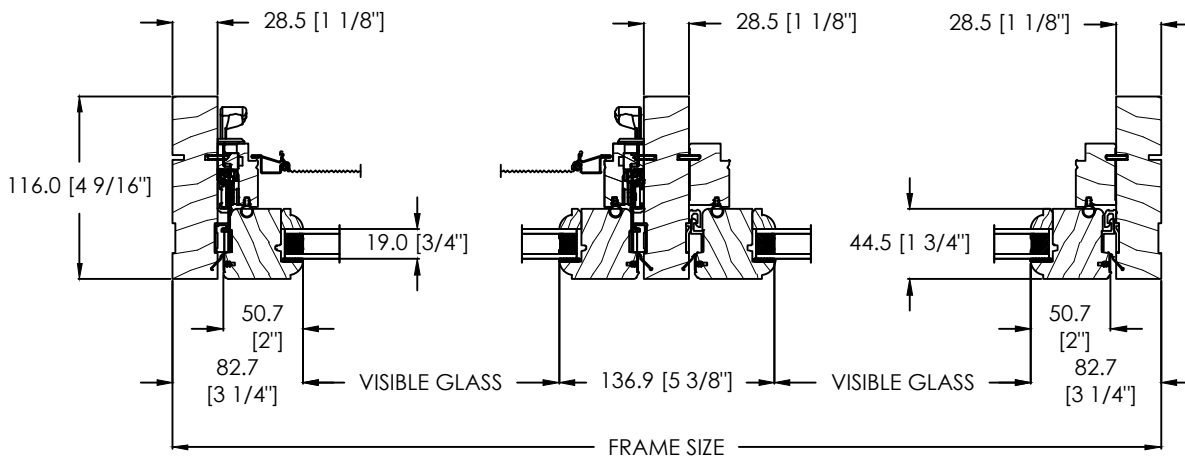


SECTION C - C

WOOD AWNING A-100 WINDOW (2 1/4" SASH, 4 9/16" FRAME)

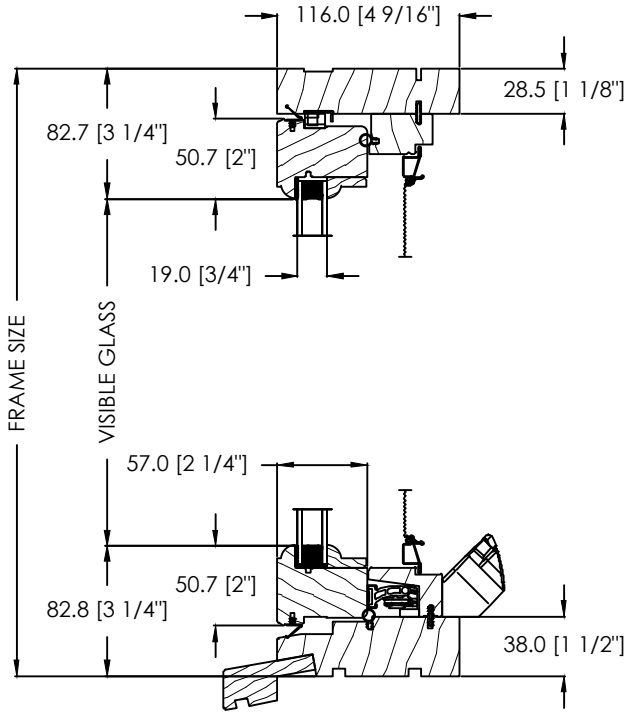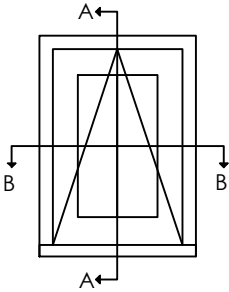


SECTION A - A

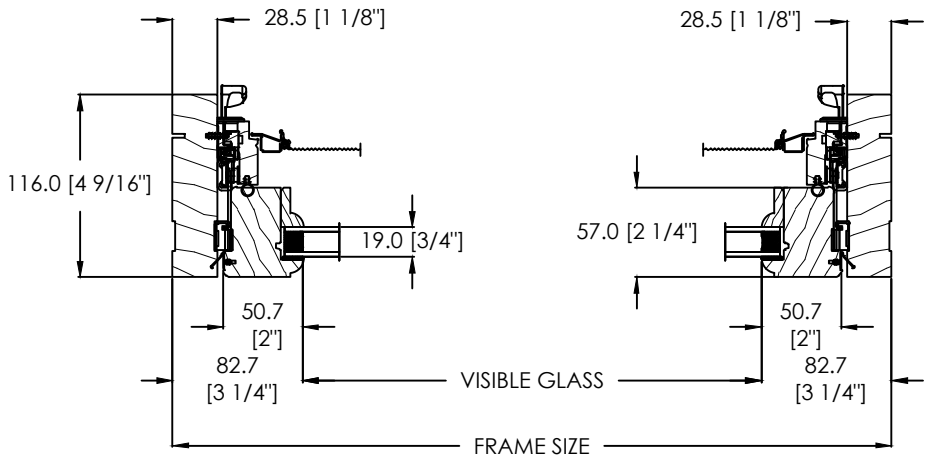

SECTION B - B

WOOD AWNING A-100 WINDOW (2 1/4" SASH, 4 9/16" FRAME)

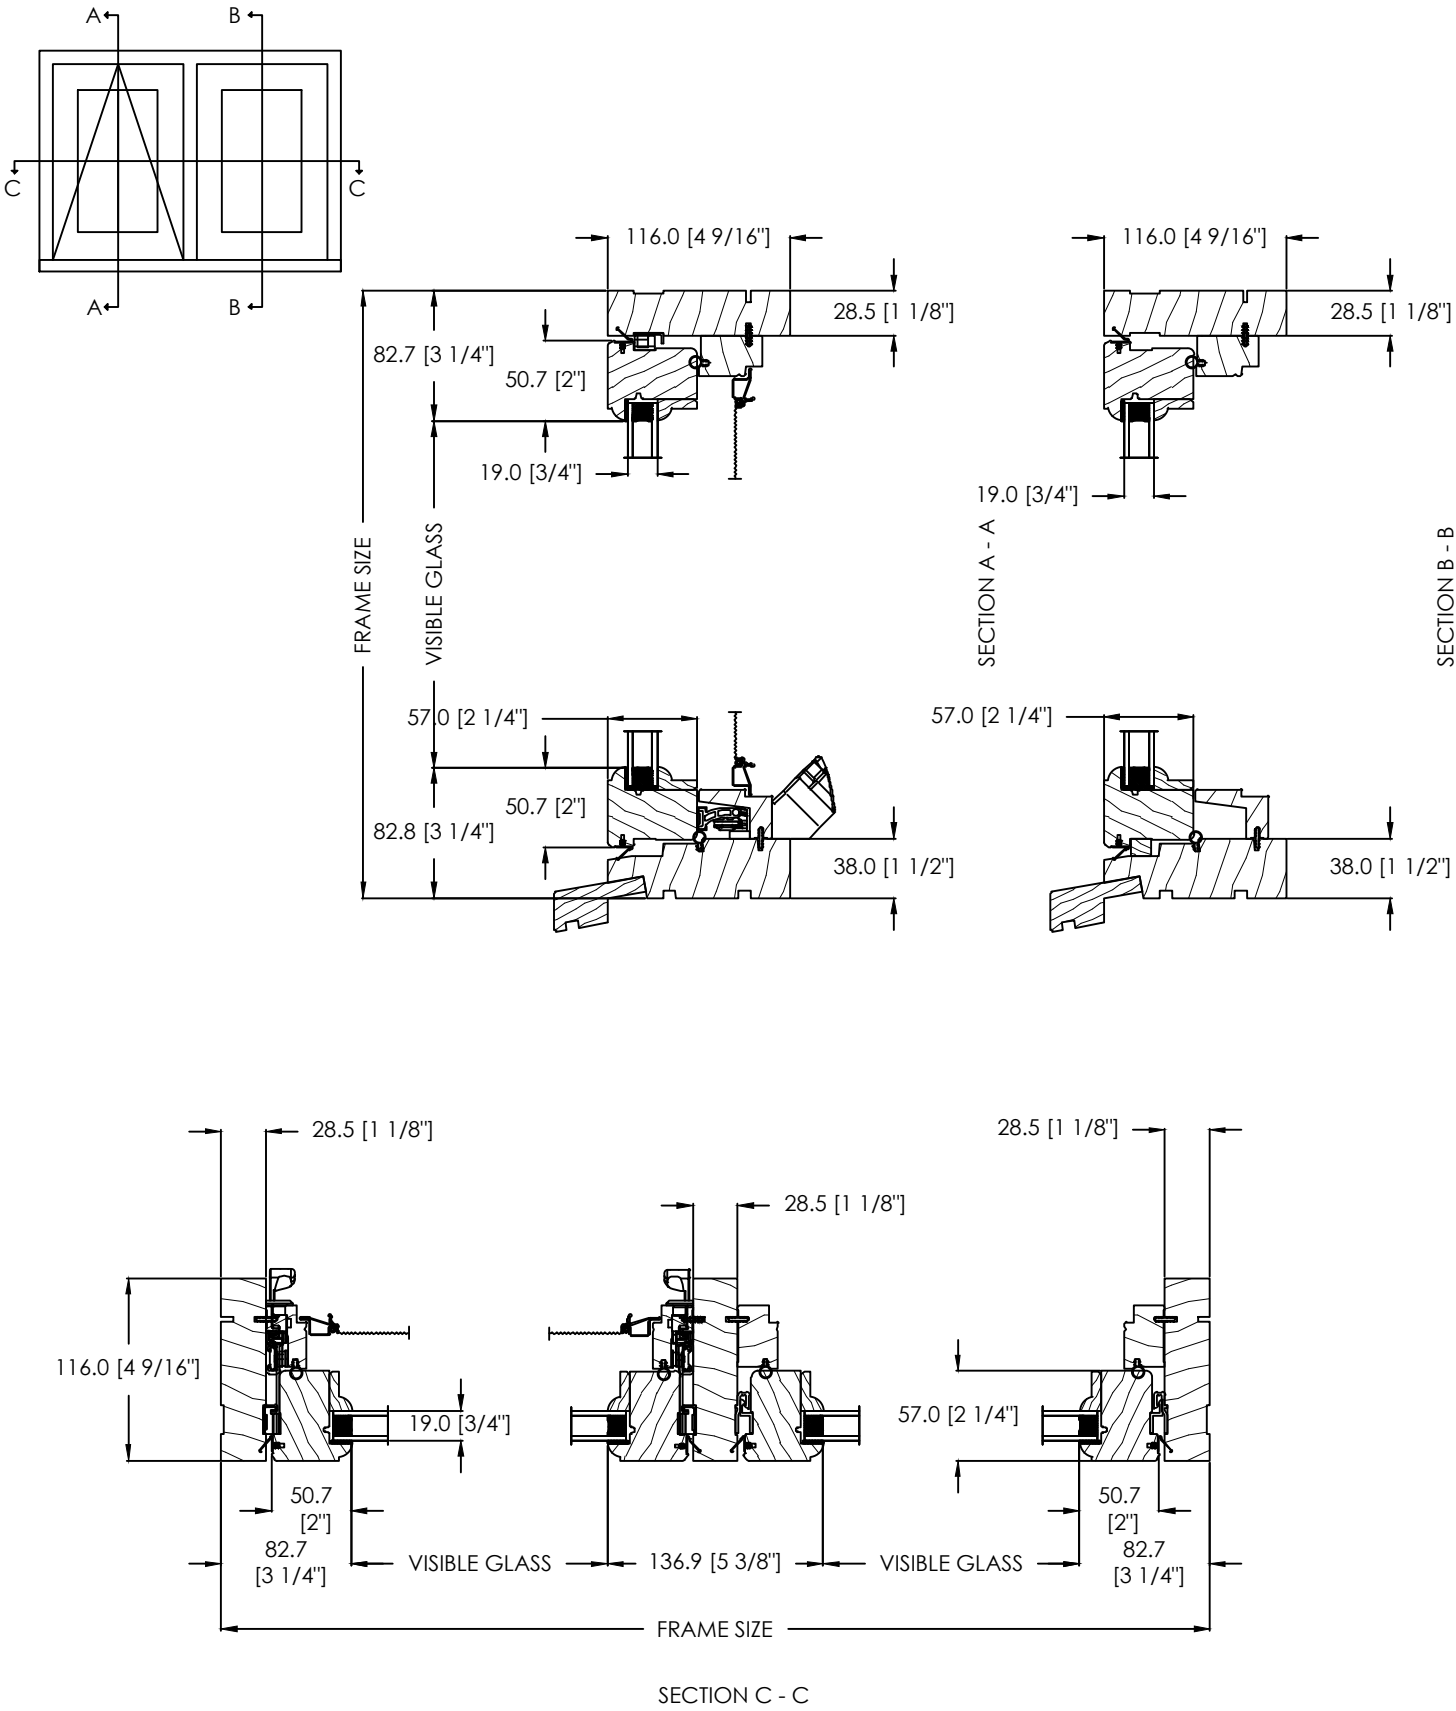

WOOD AWNING A-100 WINDOW (2 1/4" SASH, 4 9/16" FRAME)

The figure consists of three main cross-sectional views of a wood awning window, labeled SECTION A - A, SECTION B - B, and SECTION C - C. A small schematic at the top left shows the window's layout with lines A-A, B-B, and C-C indicating the section locations.

- SECTION A - A:** Shows a vertical cross-section of the window frame and sash. Key dimensions include:
 - Top frame width: 116.0 [4 9/16"]
 - Top frame depth: 28.5 [1 1/8"]
 - Frame height: 82.7 [3 1/4"]
 - Visible glass height: 50.7 [2"]
 - Bottom frame depth: 19.0 [3/4"]
 - Bottom frame width: 57.0 [2 1/4"]
 - Bottom frame height: 38.0 [1 1/2"]
- SECTION B - B:** Shows a horizontal cross-section of the window frame and sash. Key dimensions include:
 - Top frame width: 116.0 [4 9/16"]
 - Top frame depth: 28.5 [1 1/8"]
 - Frame height: 19.0 [3/4"]
 - Bottom frame width: 57.0 [2 1/4"]
 - Bottom frame height: 38.0 [1 1/2"]
- SECTION C - C:** Shows a vertical cross-section of the window frame and sash, similar to SECTION A - A but with different dimensions. Key dimensions include:
 - Top frame width: 28.5 [1 1/8"]
 - Top frame depth: 28.5 [1 1/8"]
 - Frame height: 116.0 [4 9/16"]
 - Visible glass height: 50.7 [2"]
 - Bottom frame depth: 19.0 [3/4"]
 - Bottom frame width: 57.0 [2 1/4"]
 - Bottom frame height: 38.0 [1 1/2"]




Labels for "FRAME SIZE" and "VISIBLE GLASS" are present in each section. The drawing is a technical illustration showing the internal components and dimensions of the window frame and sash.

LEPAGE
MILLWORK



APRIL 2026

SCALE: 2 1/2" = 1'-0"


PAGE 6/19

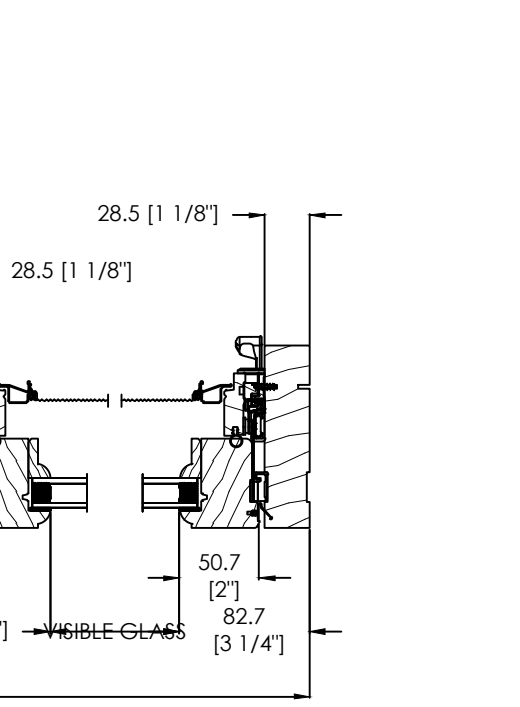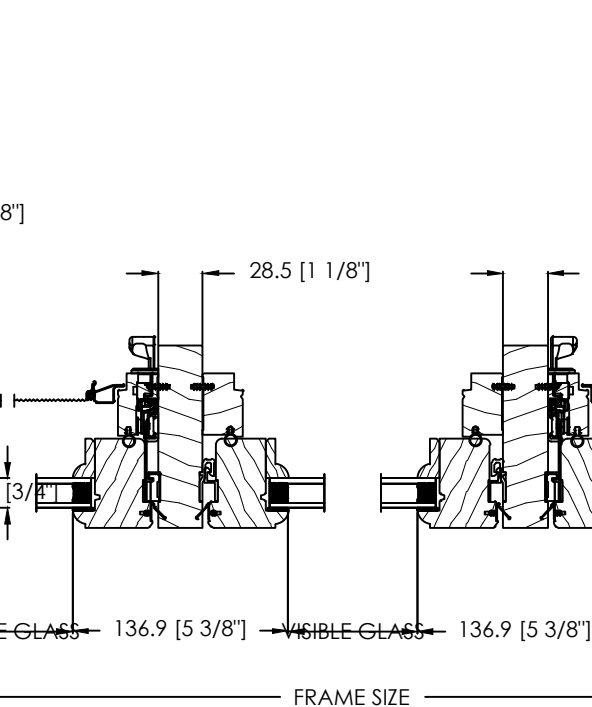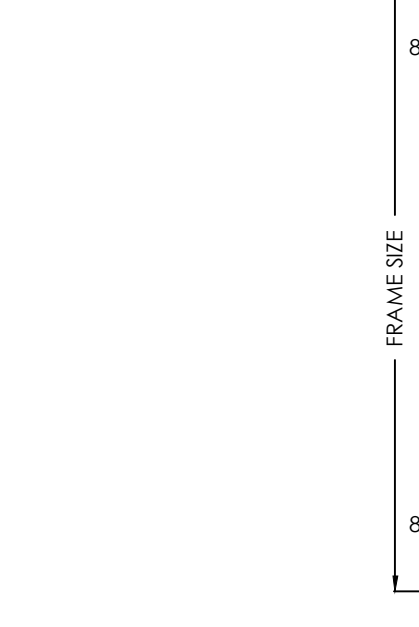

WOOD AWNING A-100 WINDOW (2 1/4" SASH, 4 9/16" FRAME)
TRIPLE INSULATING GLASS OPTION

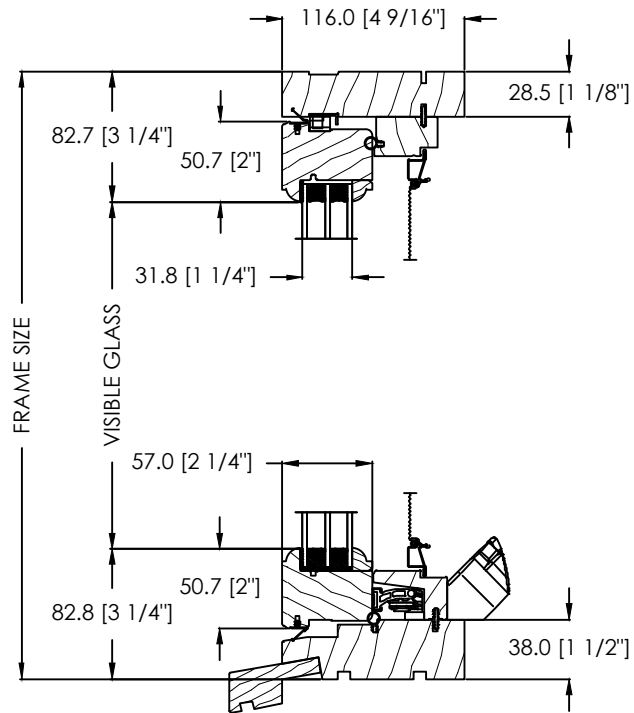
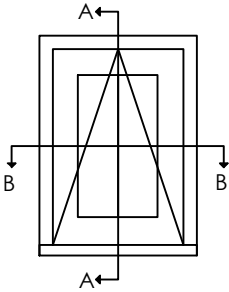


SECTION A - A

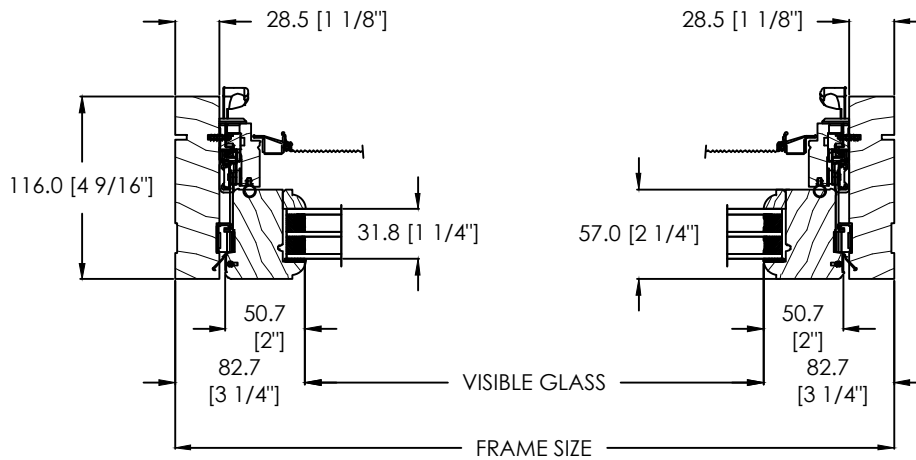


SECTION B - B


WOOD AWNING A-100 WINDOW (1 3/4" SASH, 4 9/16" FRAME)
FIXED SASH TRANSOM

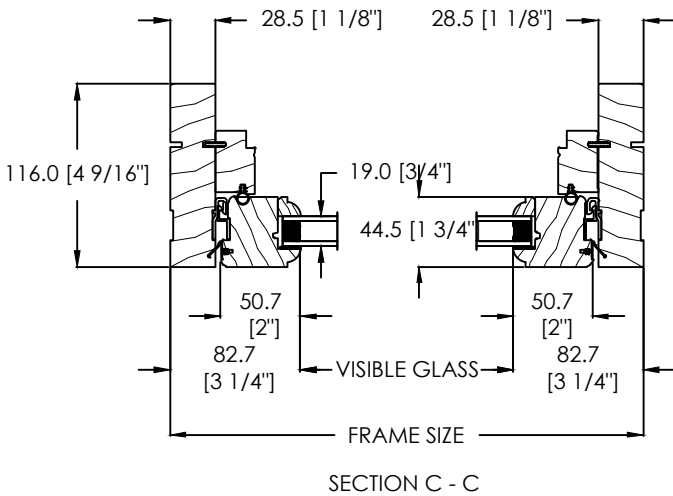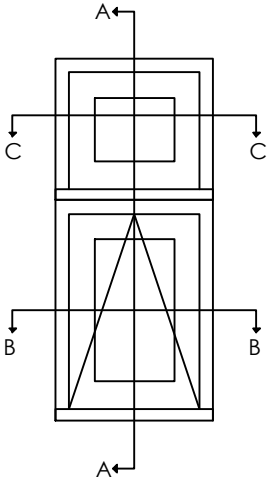

SECTION C - C


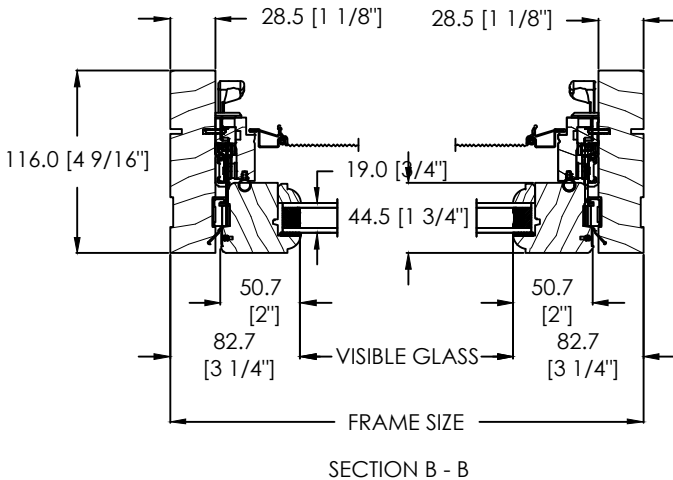


SECTION B - B

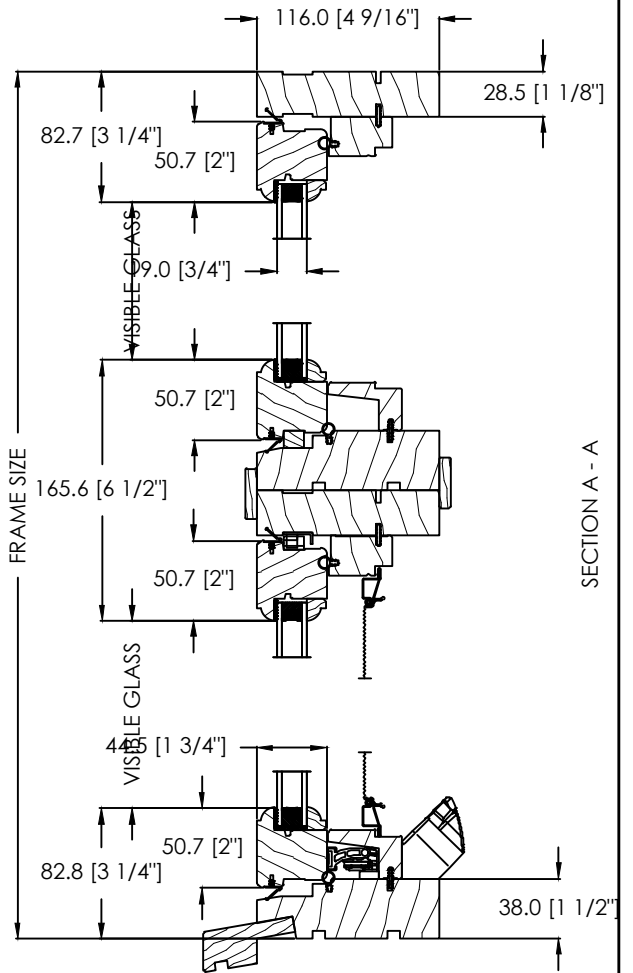


SECTION A - A


WOOD AWNING A-100 WINDOW (1 3/4" SASH, 4 9/16" FRAME)
DIRECT SET TRANSOM

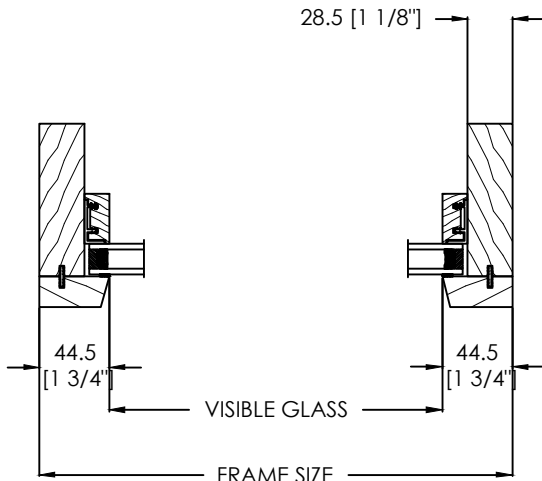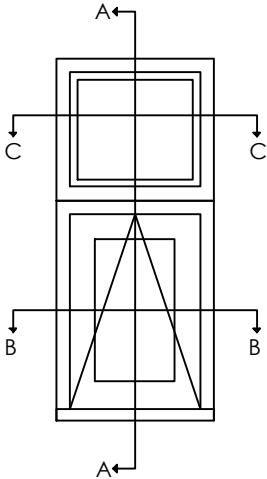

SECTION C - C

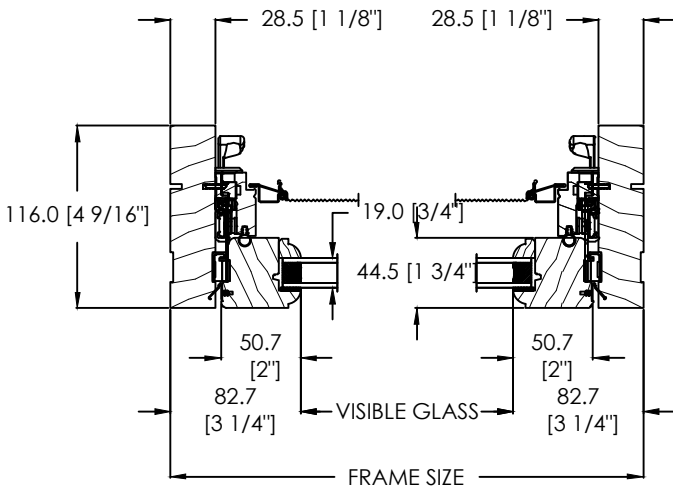


SECTION B - B

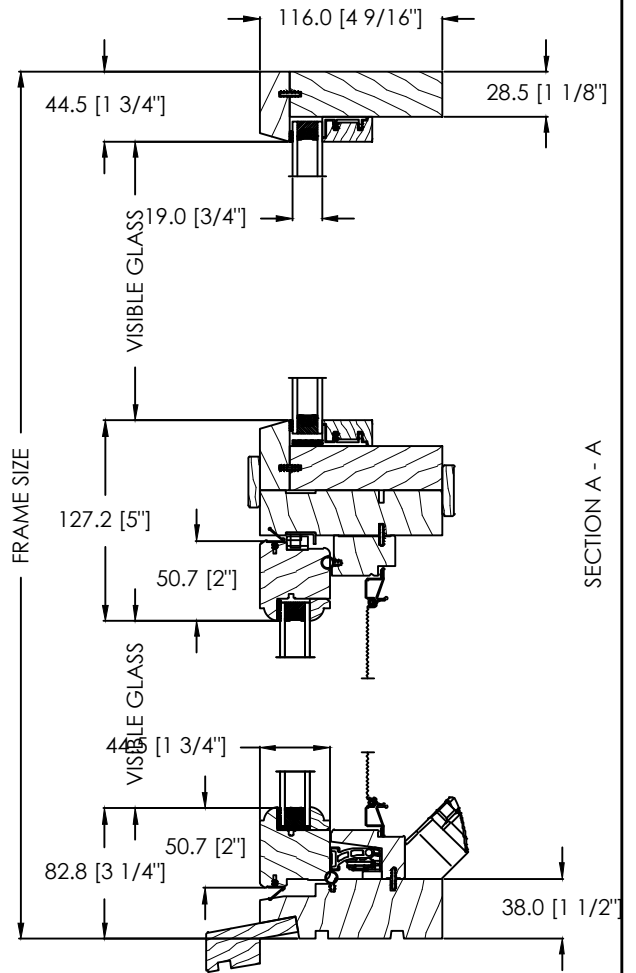


SECTION A - A


WOOD AWNING A-100 WINDOW
EXTERIOR, INTERIOR EXTENSIONS AND BRICKMOULD OPTIONS

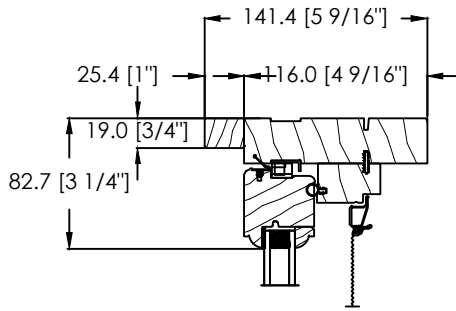


FLUSH 1" EXTERIOR EXTENSION

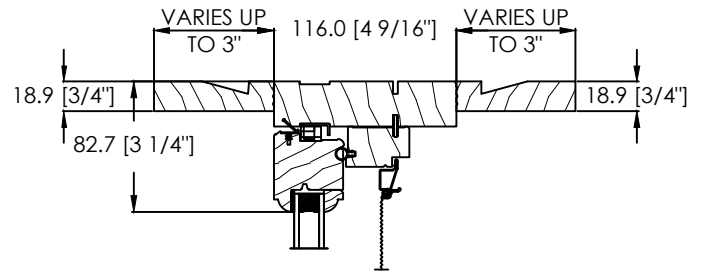


FLUSH UP TO 3" EXT. AND INT. EXTENSION

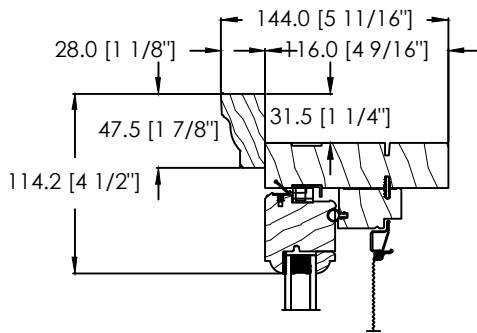


COLONIAL EXTERIOR BRICKMOULD

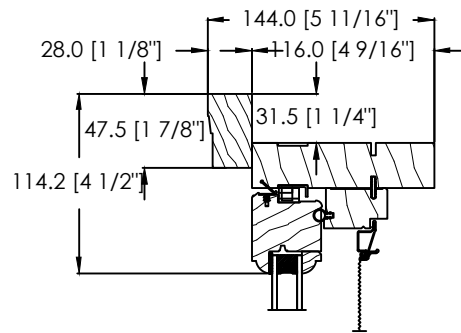


908 BRICKMOULD

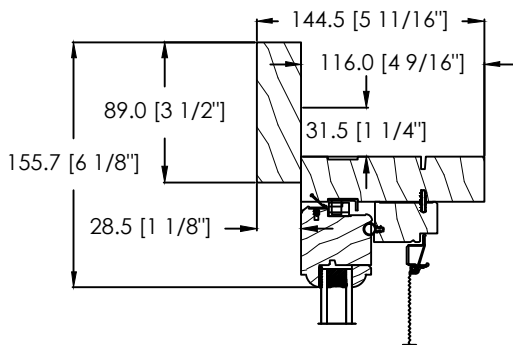

5/4 X 3 1/2" FLAT CASING







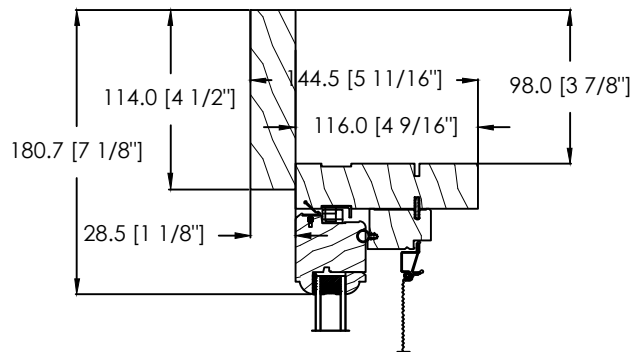


5/4 X 4 1/2" FLAT CASING

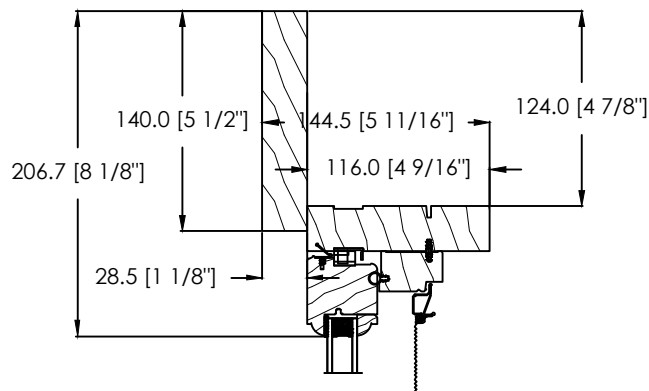


5/4 X 5 1/2" FLAT CASING

WOOD AWNING A-100 WINDOW
EXTERIOR, INTERIOR EXTENSIONS AND BRICKMOULD OPTIONS

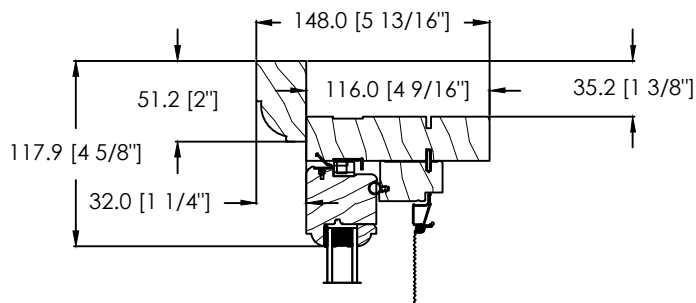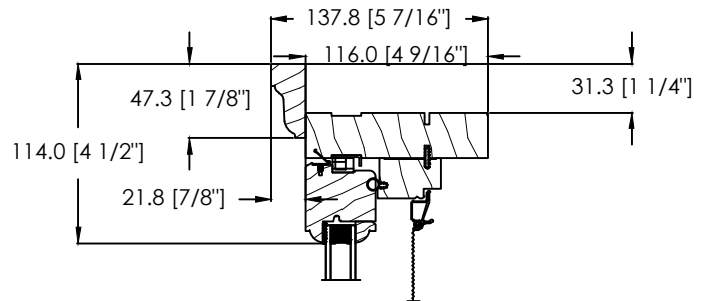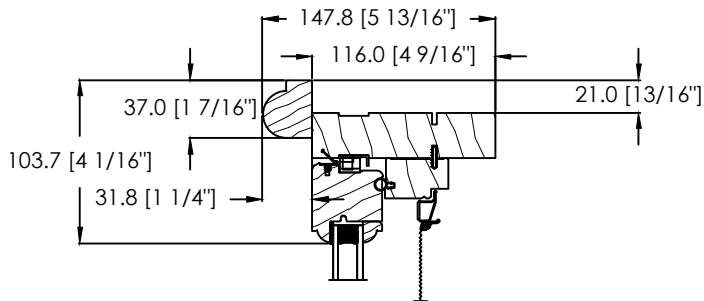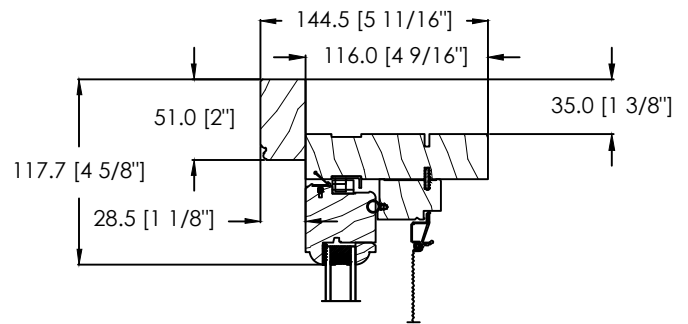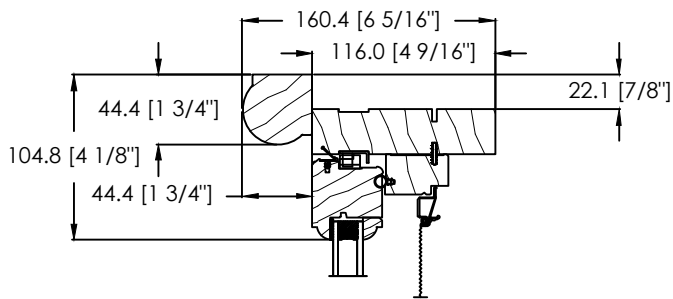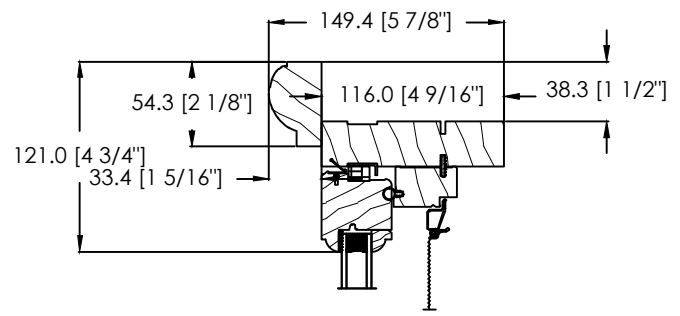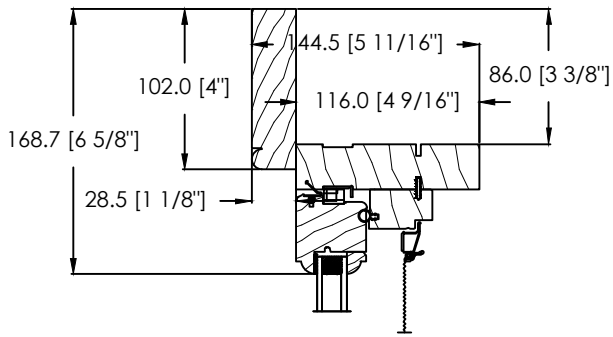


DS-065 BRICKMOULD


WOOD AWNING A-100 WINDOW
SILL NOSING OPTIONS

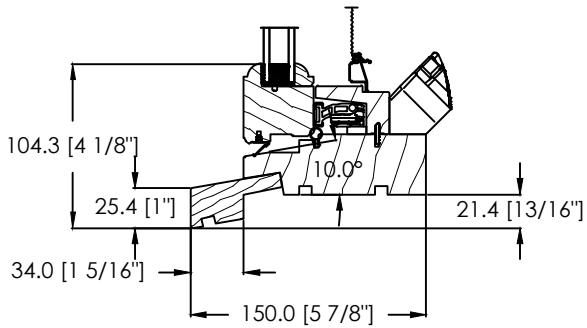


STANDARD 1 1/4" SILL NOSING GB-021

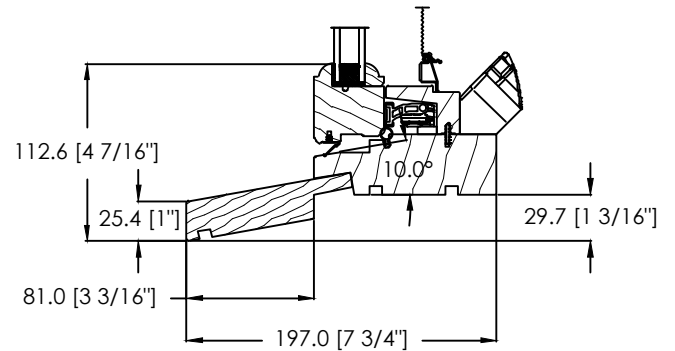


3" LONG SILL NOSING GB-040

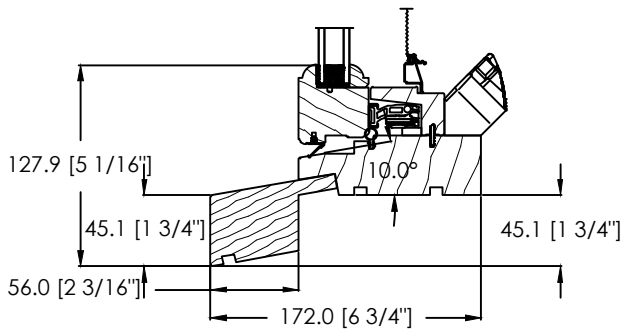


HISTORIC SILL NOSING GB-036

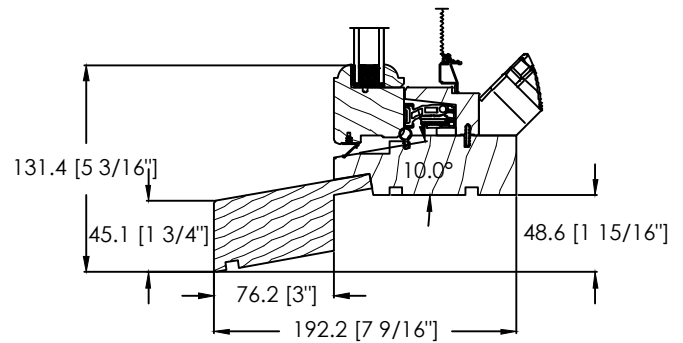

LONG HISTORIC SILL NOSING GB-058



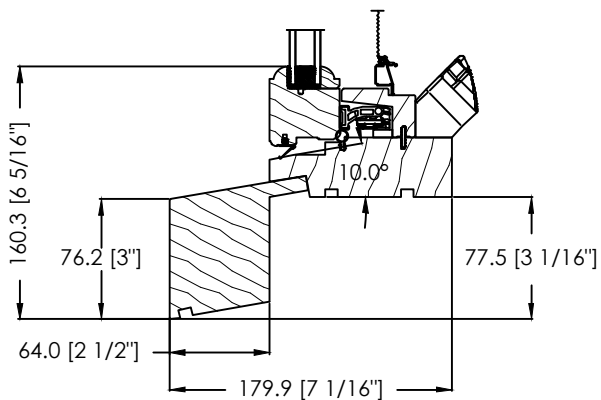


DS-073 SILL NOSING



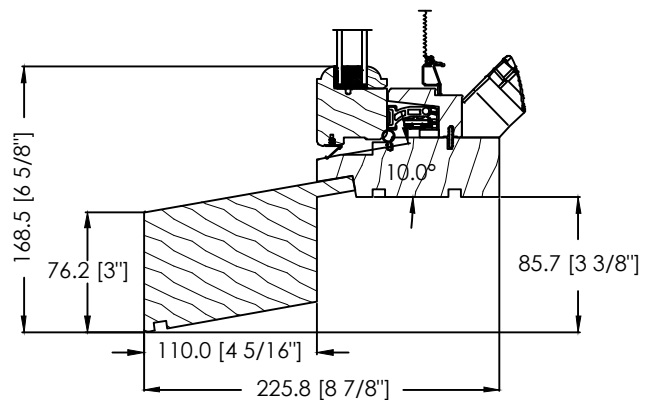


DS-072 SILL NOSING

WOOD AWNING A-100 WINDOW SCREEN OPTIONS

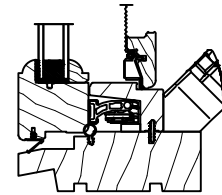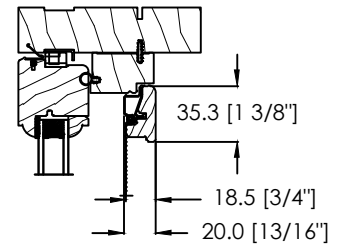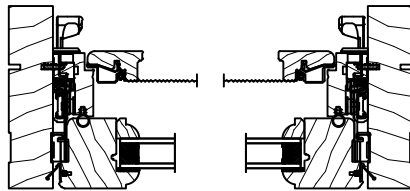


WOOD SCREEN OPTION

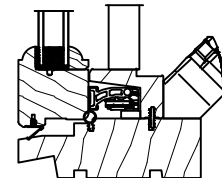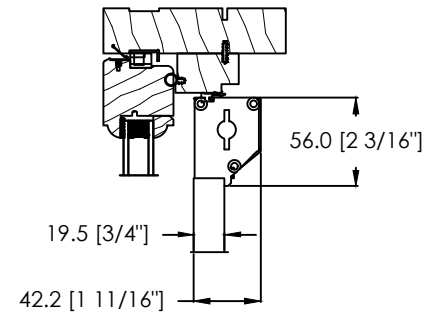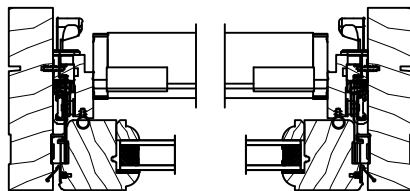


RETRACTABLE SCREEN OPTION


WOOD AWNING A-100 WINDOW
 SASH AND GLASS STOP MODELS - 1 3/4" SASH

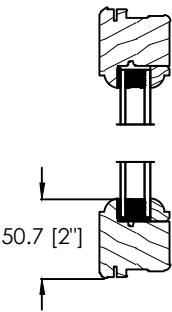


COLONIAL SASH & GLASS STOP




COLONIAL SASH & SQUARE GLASS STOP

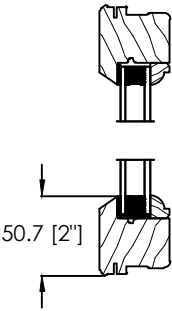


PUTTY GLAZE SASH & COLONIAL GLASS STOP




PUTTY GLAZE SASH & SQUARE GLASS STOP

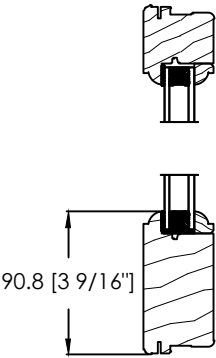


COLONIAL SASH & GLASS STOP-WIDE BOTTOM RAIL



COLONIAL SASH & SQUARE GLASS STOP-WIDE BOTTOM RAIL

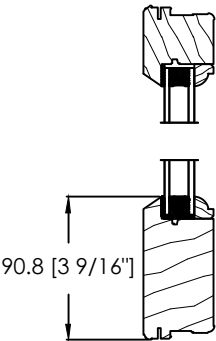

PUTTY GLAZE SASH & COLONIAL
 GLASS STOP-WIDE BOTTOM RAIL




PUTTY GLAZE SASH & SQUARE GLASS STOP
 WIDE BOTTOM RAIL


WOOD AWNING A-100 WINDOW
 SASH AND GLASS STOP MODELS - 2 1/4" SASH

COLONIAL SASH & GLASS STOP	COLONIAL SASH & SQUARE GLASS STOP	COLONIAL SASH & DAVIS GLASS STOP
PUTTY GLAZE SASH & COLONIAL GLASS STOP	PUTTY GLAZE SASH & SQUARE GLASS STOP	PUTTY GLAZE SASH & DAVIS GLASS STOP
COLONIAL SASH & GLASS STOP WIDE BOTTOM RAIL	COLONIAL SASH & SQUARE GLASS STOP - WIDE BOTTOM RAIL	COLONIAL SASH & DAVIS GLASS STOP - WIDE BOTTOM RAIL
PUTTY GLAZE SASH & COLONIAL GLASS STOP - WIDE BOTTOM RAIL	PUTTY GLAZE SASH & SQUARE GLASS STOP - WIDE BOTTOM RAIL	PUTTY GLAZE SASH & DAVIS GLASS STOP - WIDE BOTTOM RAIL


WOOD AWNING A-100 WINDOW
HORIZONTAL MULLING OPTIONS

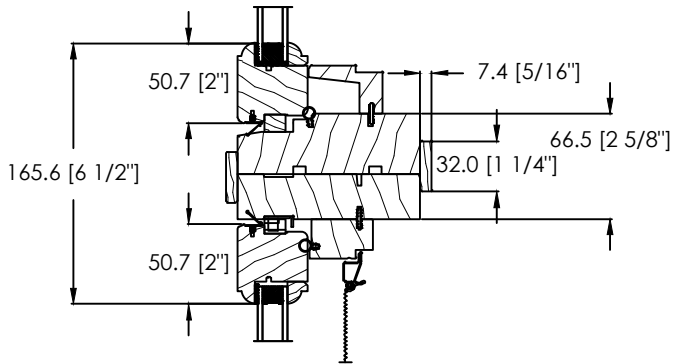


FIXED OVER OPERATING TIGHT MULL

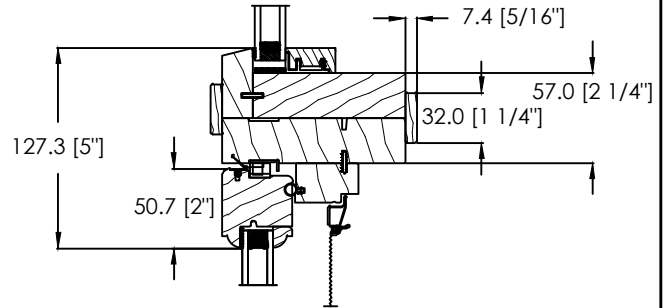


DIRECT SET OVER OPERATING TIGHT MULL

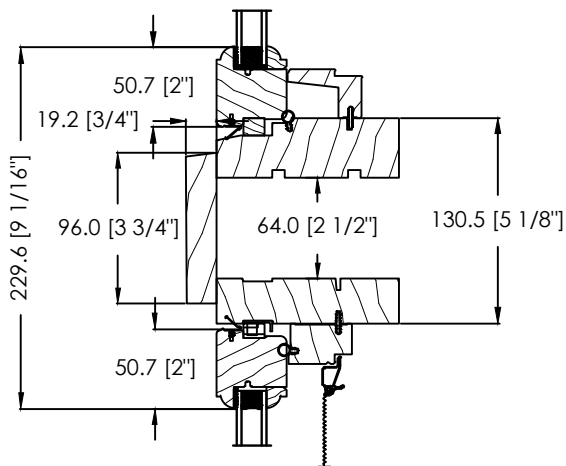


2 1/2" SPACE MULL OR STUD POCKET

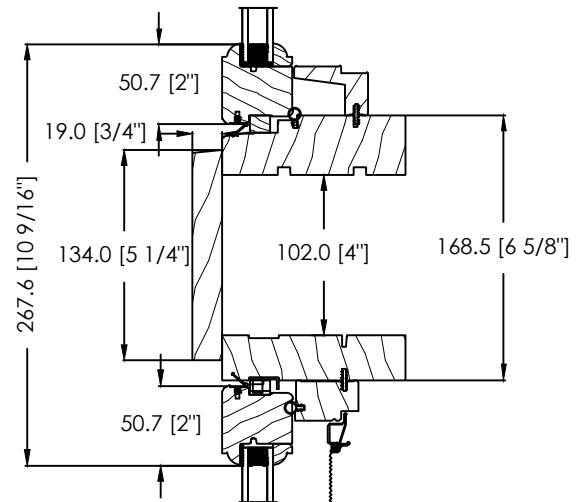

4" SPACE MULL OR STUD POCKET

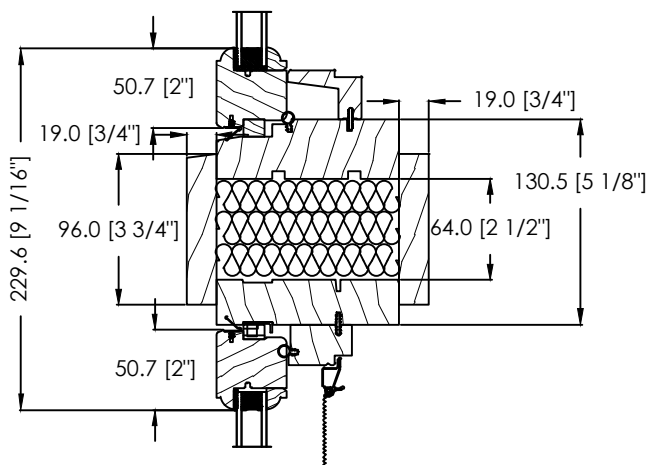


2 1/2" INSULATED SPACE MULL OR STUD POCKET

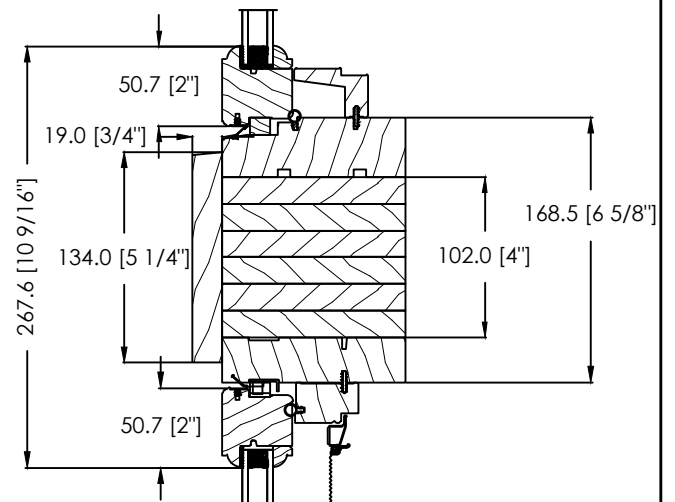


4" SOLID SPACE MULL OR STUD POCKET


WOOD AWNING A-100 WINDOW
VERTICAL MULLING OPTIONS

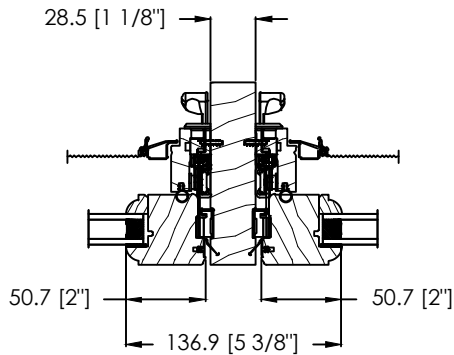


2 WIDE OPERATING STANDARD STRUCTURAL MULL

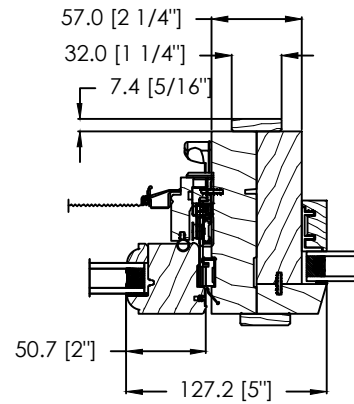


OPERATING, DIRECT SET MODULAR MULL

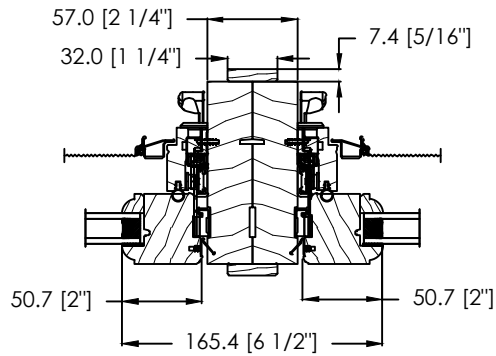


2 WIDE OPERATING STANDARD MODULAR MULL

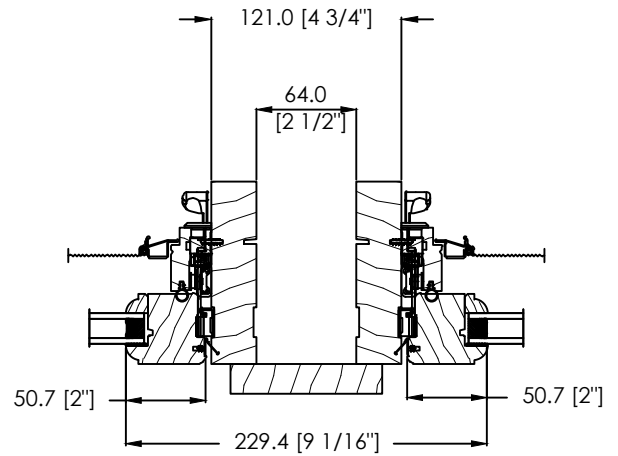

2 $\frac{1}{2}$ " SPACE MULL OR STUD POCKET

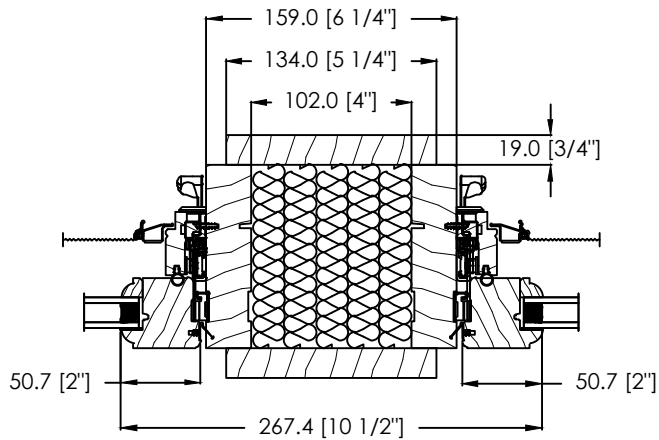


4" INSULATED SPACE MULL OR STUD POCKET

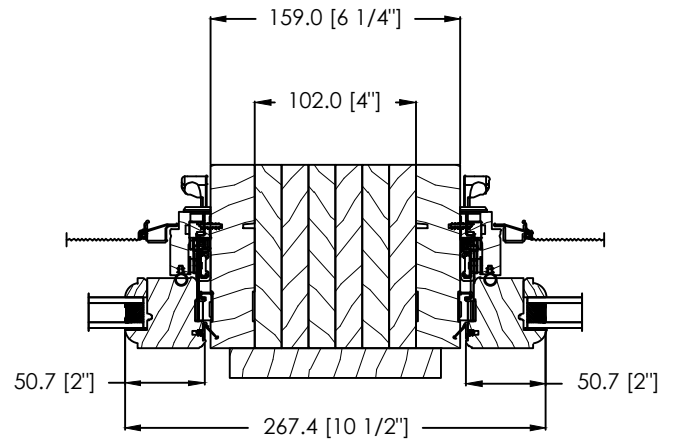


4" SOLID SPACE MULL OR STUD POCKET


WOOD AWNING A-100 WINDOW
BAY AND BOW MULLING OPTIONS

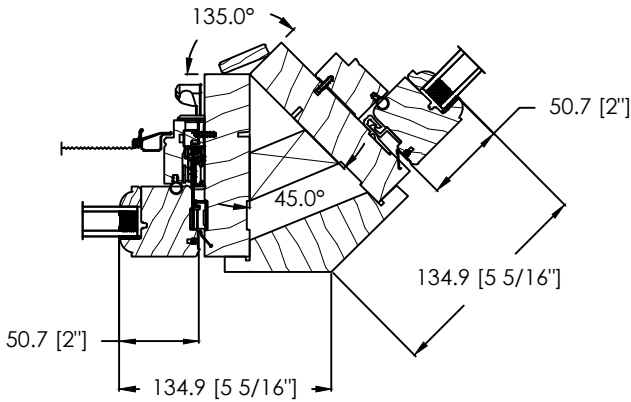


45° BAY STANDARD MULL

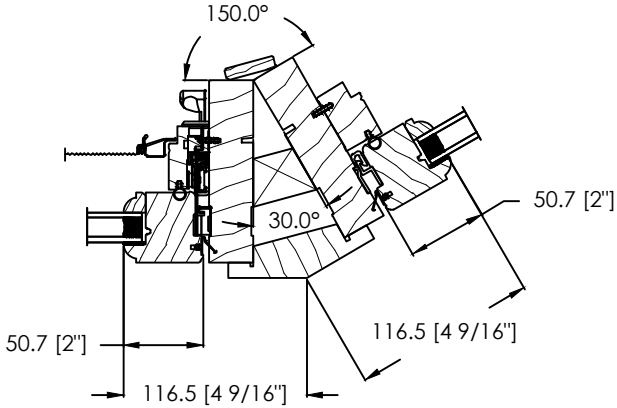

30° BAY STANDARD MULL

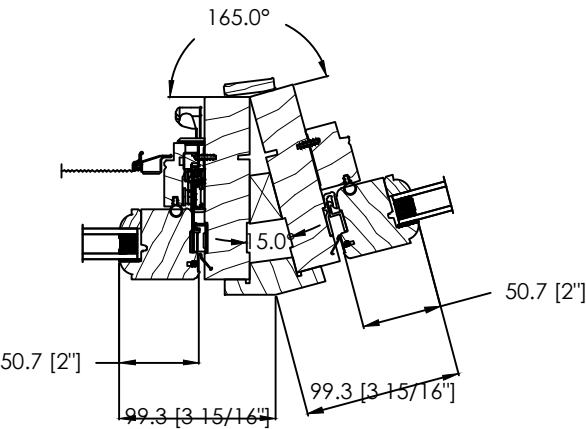

15° BOW STANDARD MULL

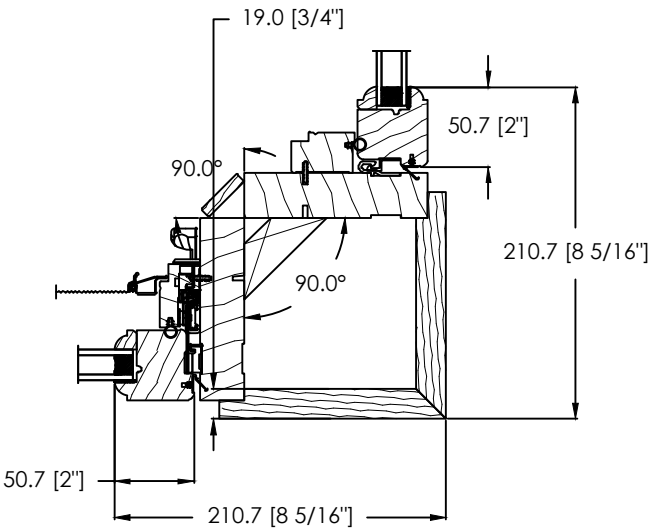

90° BOX BAY STANDARD MULL




WOOD AWNING A-100 WINDOW
GRIDS OPTIONS

SEE LINK BELOW FOR GRIDS :

CAD FILE http://www.lepagemillwork.com/download/Info-Tech_Grid_Options.dwg


PDF FILE http://www.lepagemillwork.com/download/Info-Tech_Grid_Options.pdf

ALUMINIUM CLAD AWNING A-100 WINDOW (1 3/4" SASH, 4 9/16" FRAME)

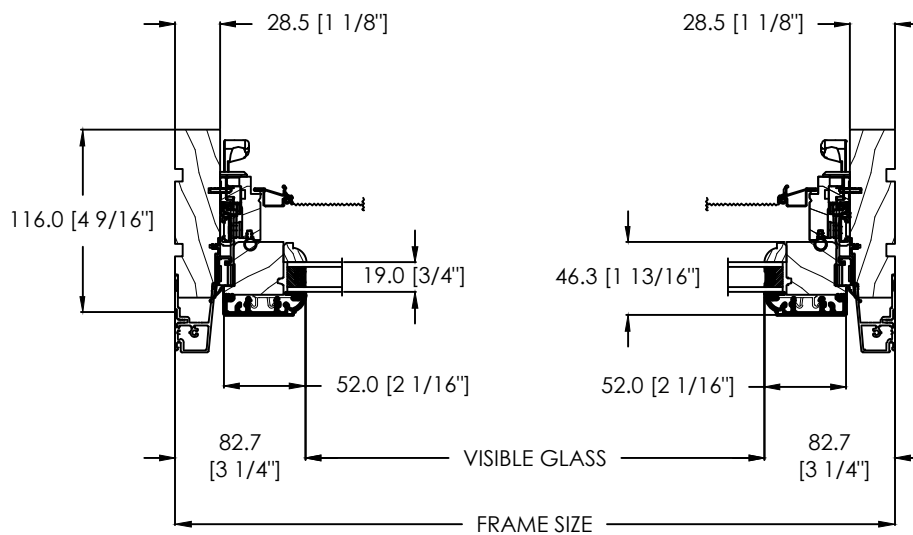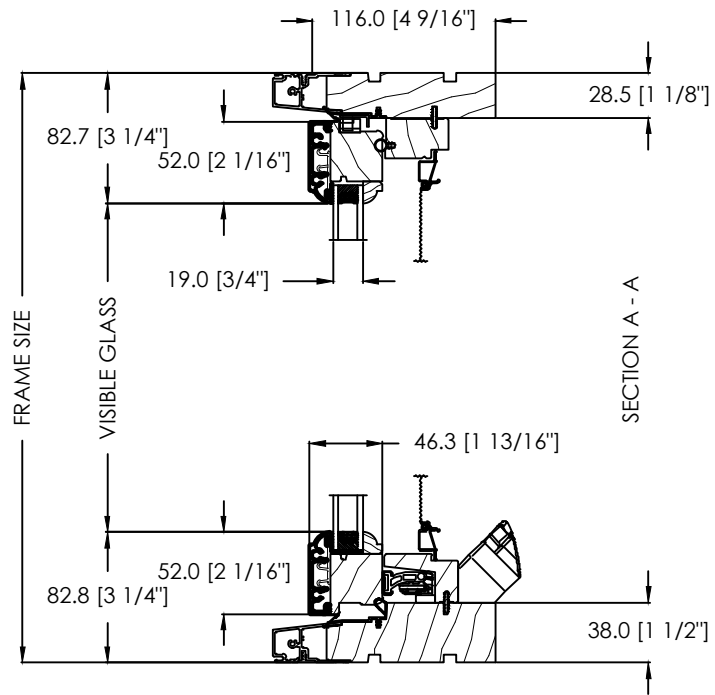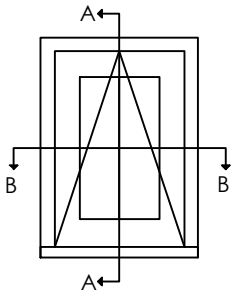


SECTION B - B




ALUMINIUM CLAD AWNING A-100 WINDOW (1 3/4" SASH, 4 9/16" FRAME)

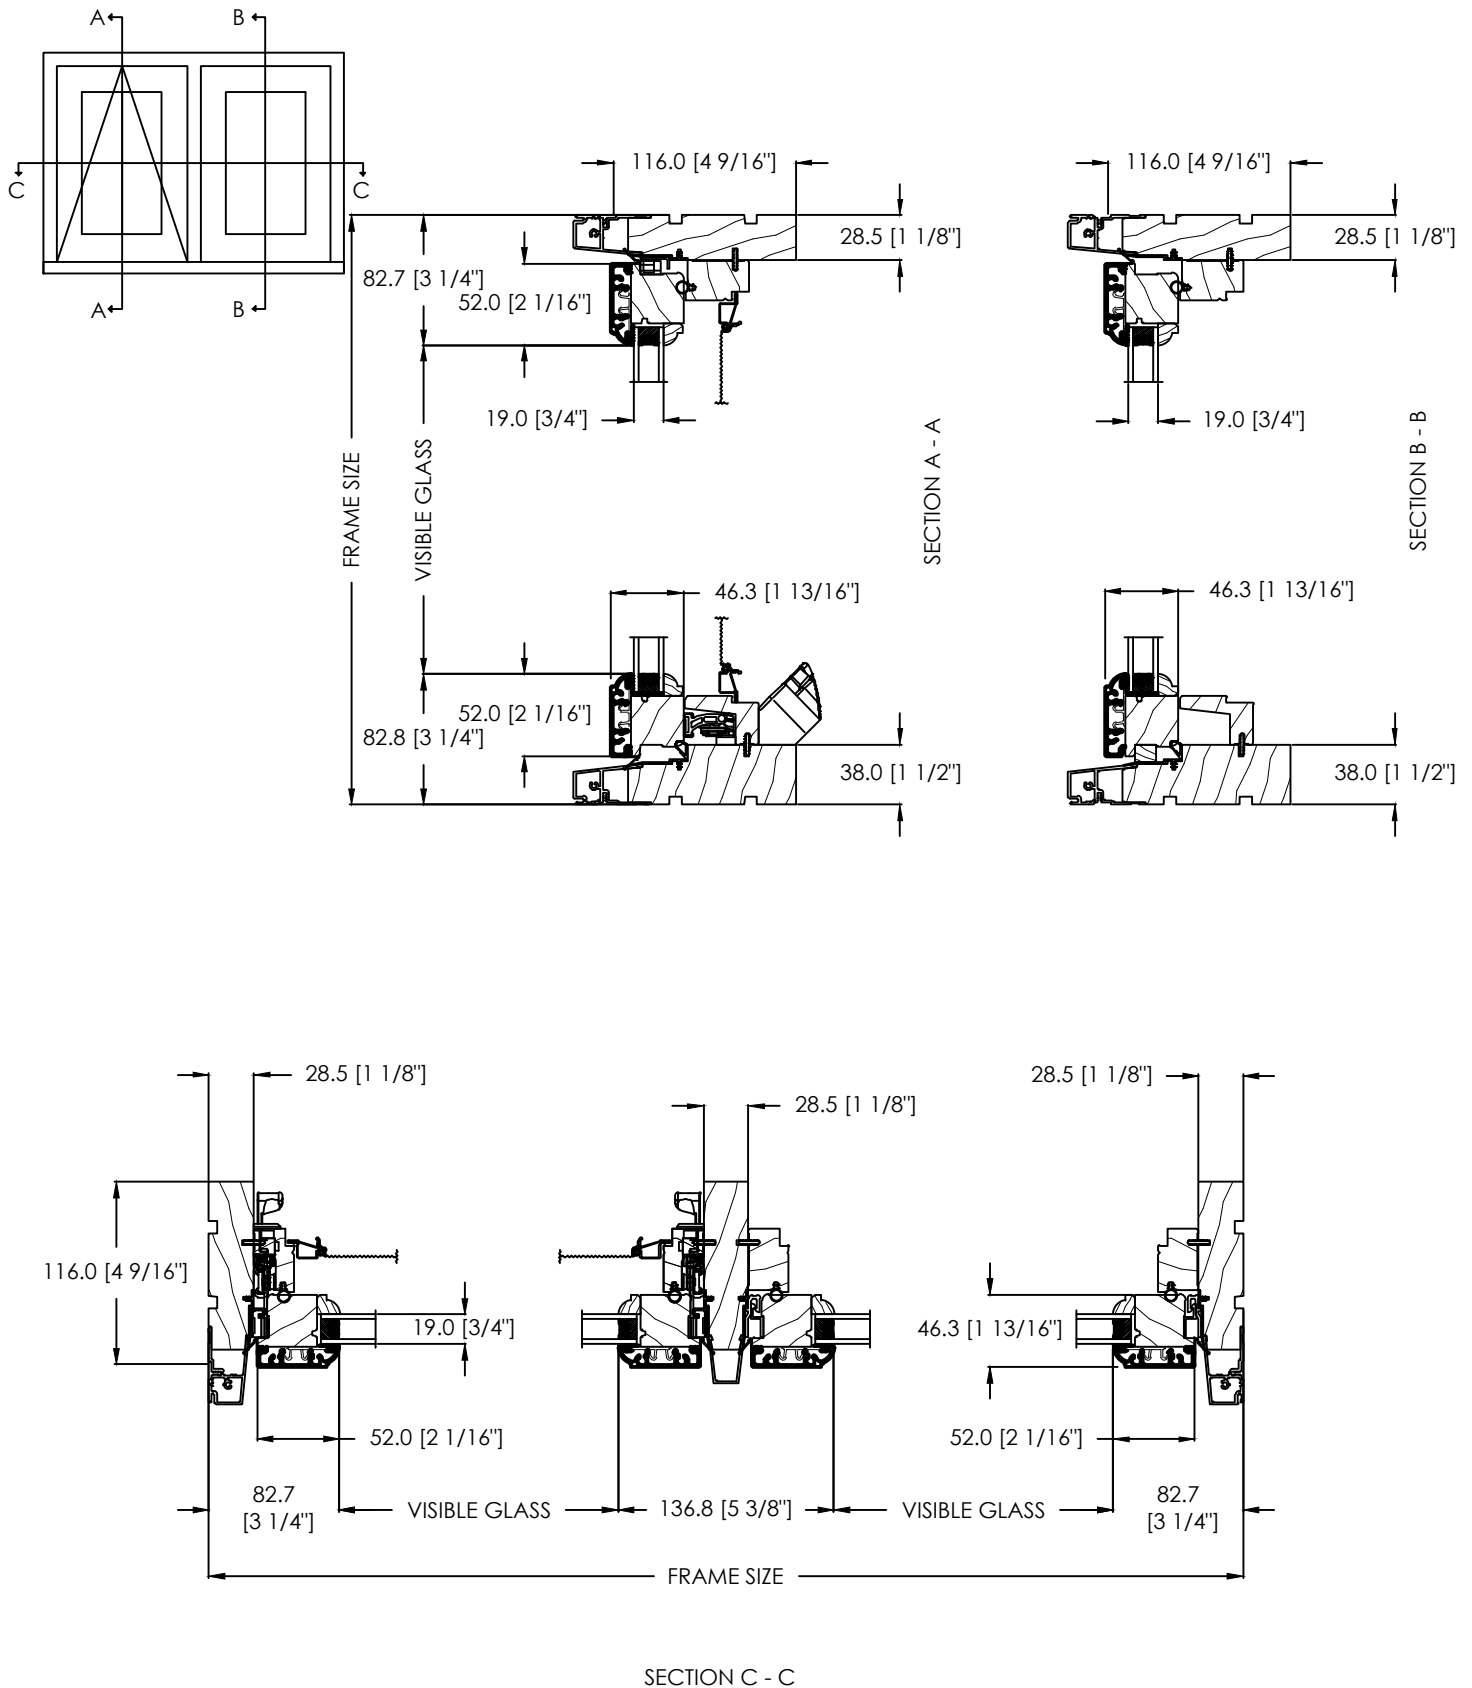


ALUMINIUM CLAD AWNING A-100 WINDOW (1 3/4" SASH, 4 9/16" FRAME)

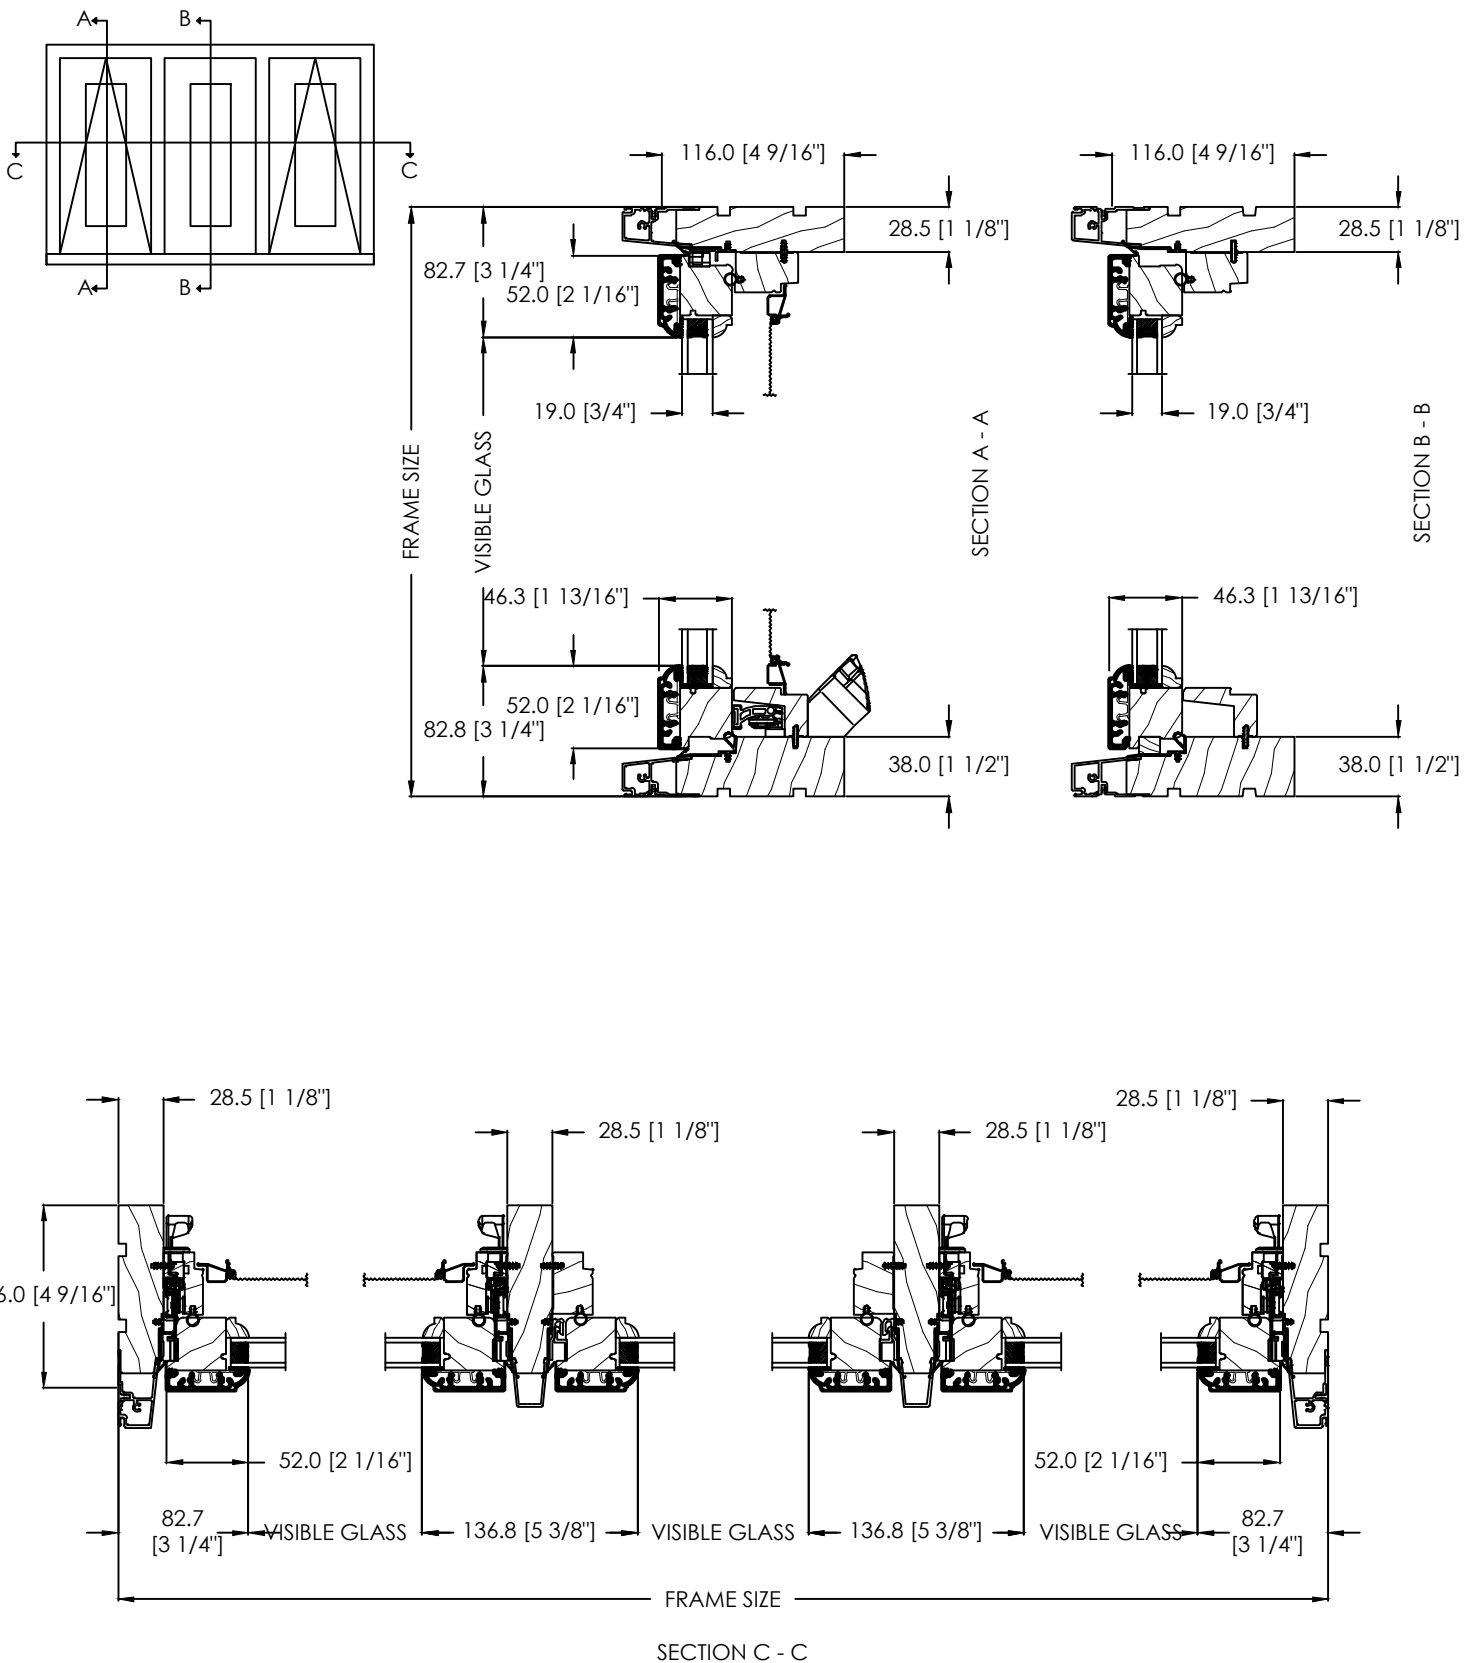


ALUMINIUM CLAD AWNING A-100 WINDOW (1 3/4" SASH, 6 9/16" FRAME)

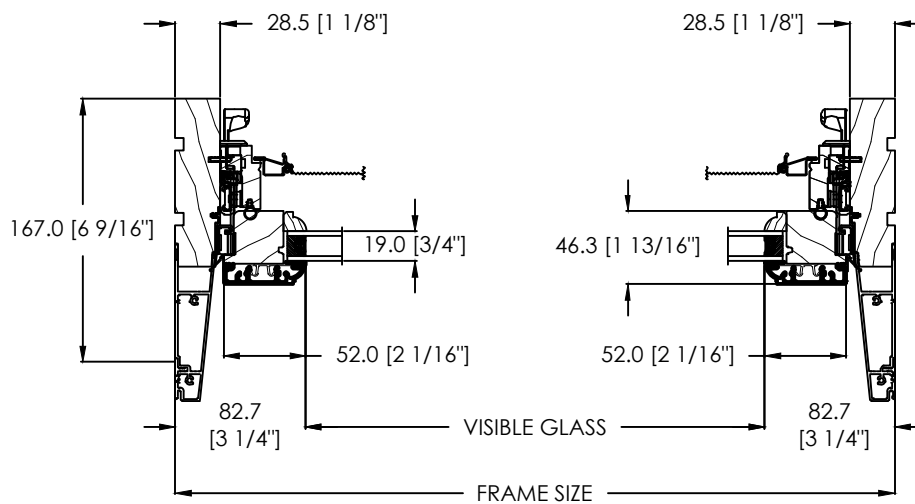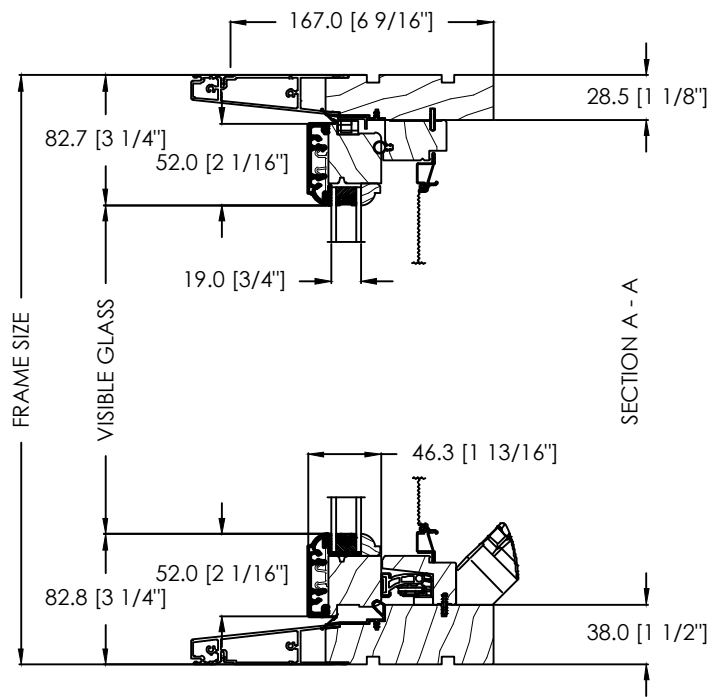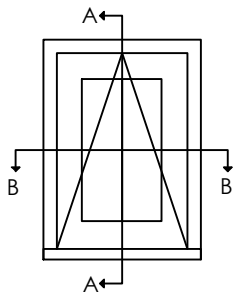




ALUMINIUM CLAD AWNING A-100 WINDOW (1 3/4" SASH, 6 9/16" FRAME)

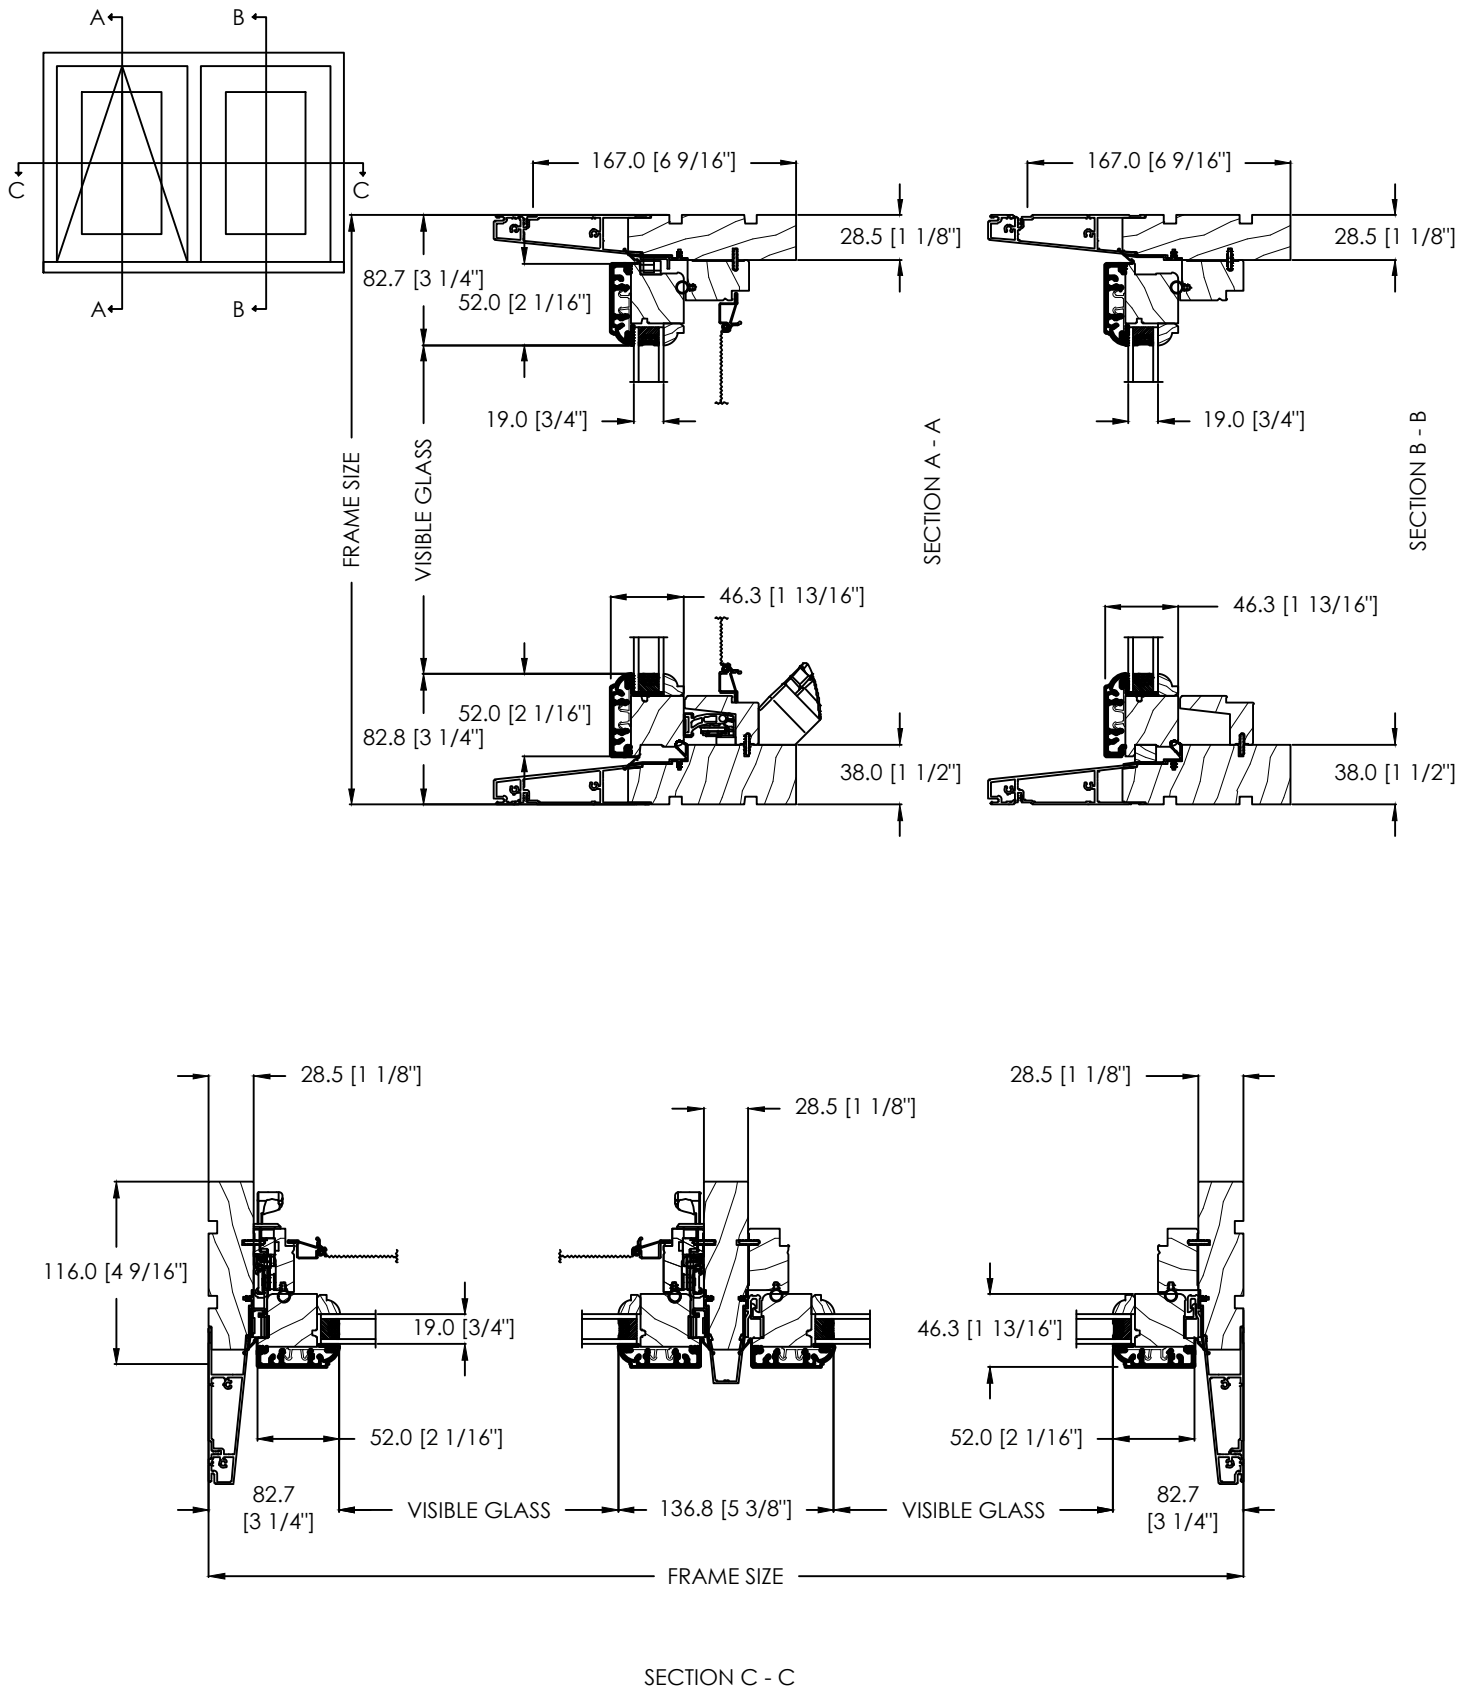

ALUMINIUM CLAD AWNING A-100 WINDOW (1 3/4" SASH, 6 9/16" FRAME)

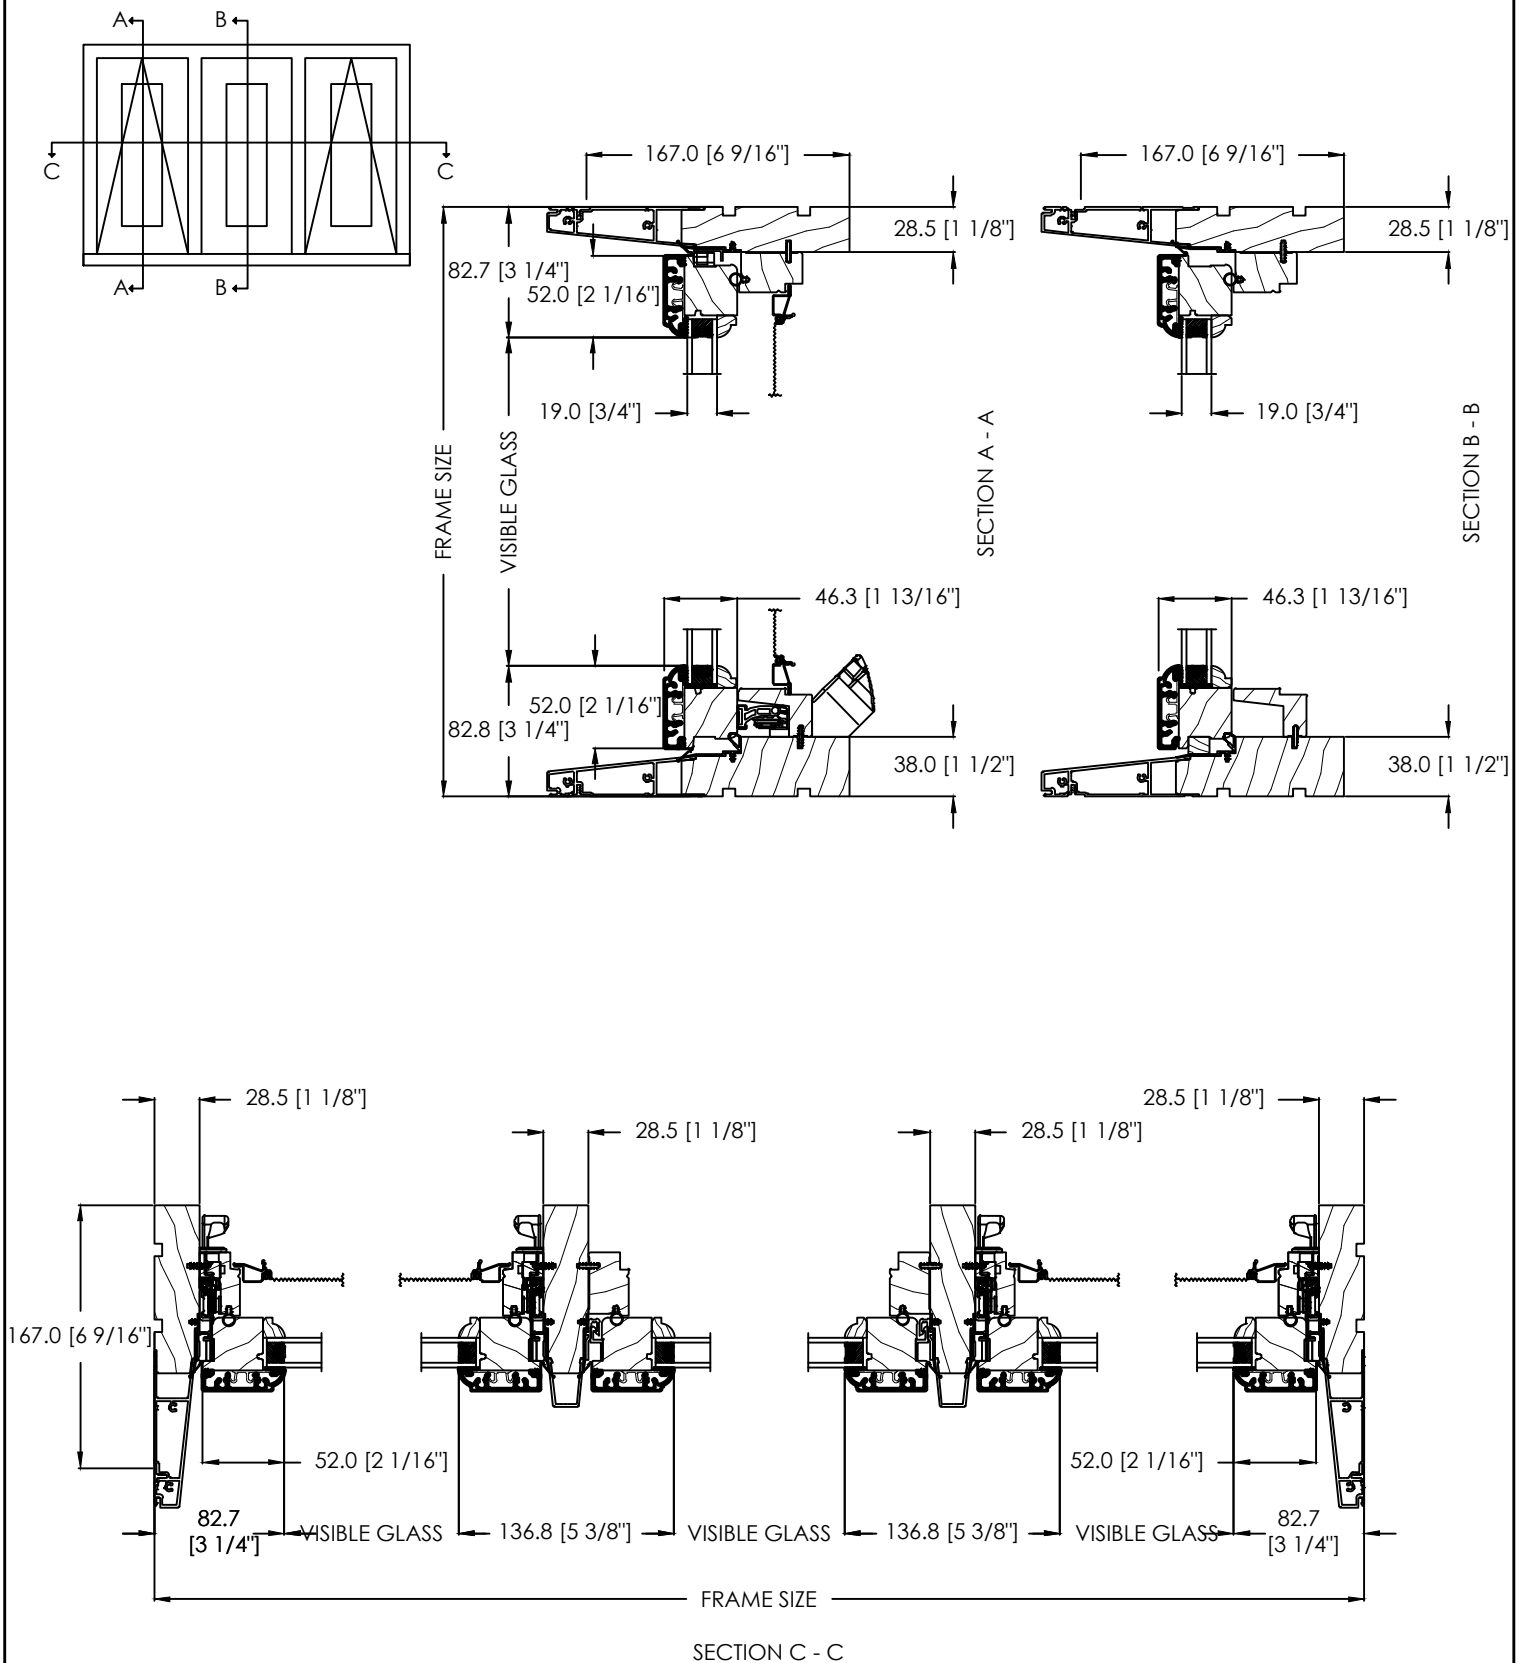


ALUMINIUM CLAD AWNING A-100 WINDOW (2 1/4" SASH, 4 9/16" FRAME)

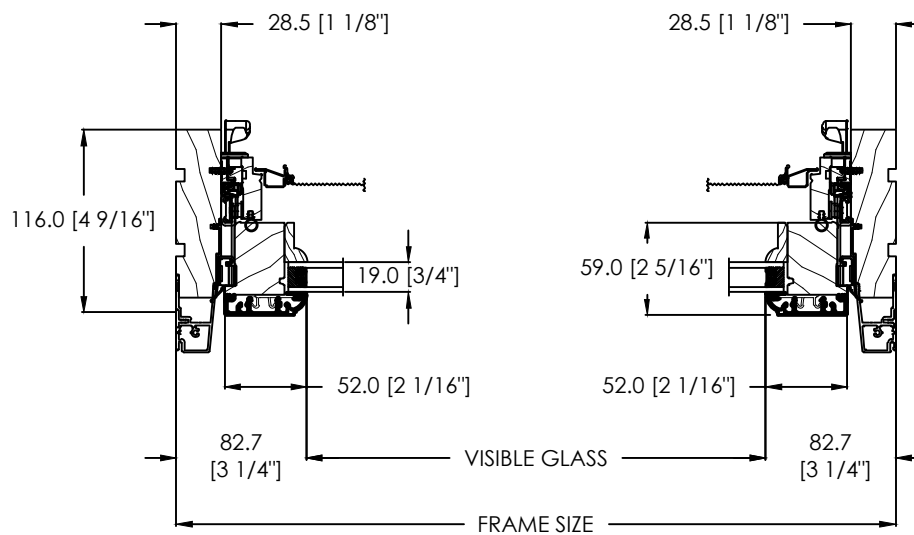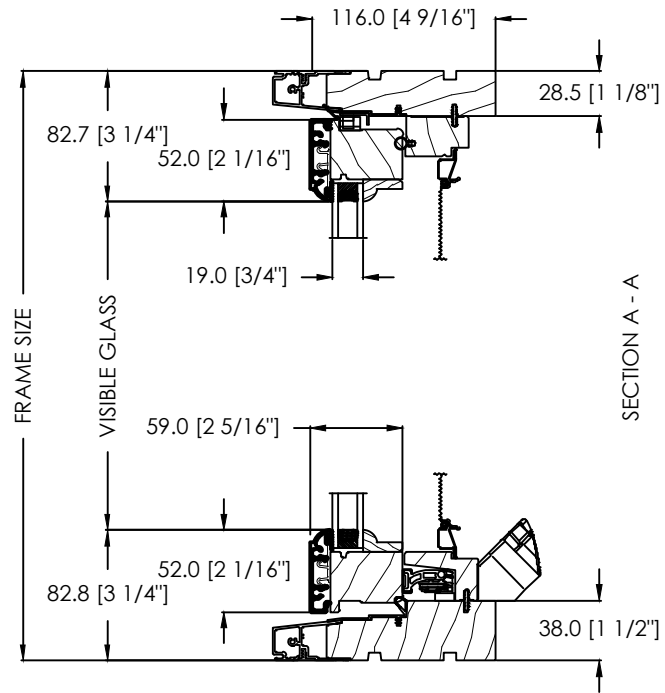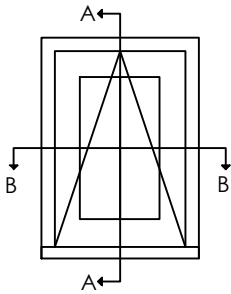


SECTION B - B




ALUMINIUM CLAD AWNING A-100 WINDOW (2 1/4" SASH, 4 9/16" FRAME)

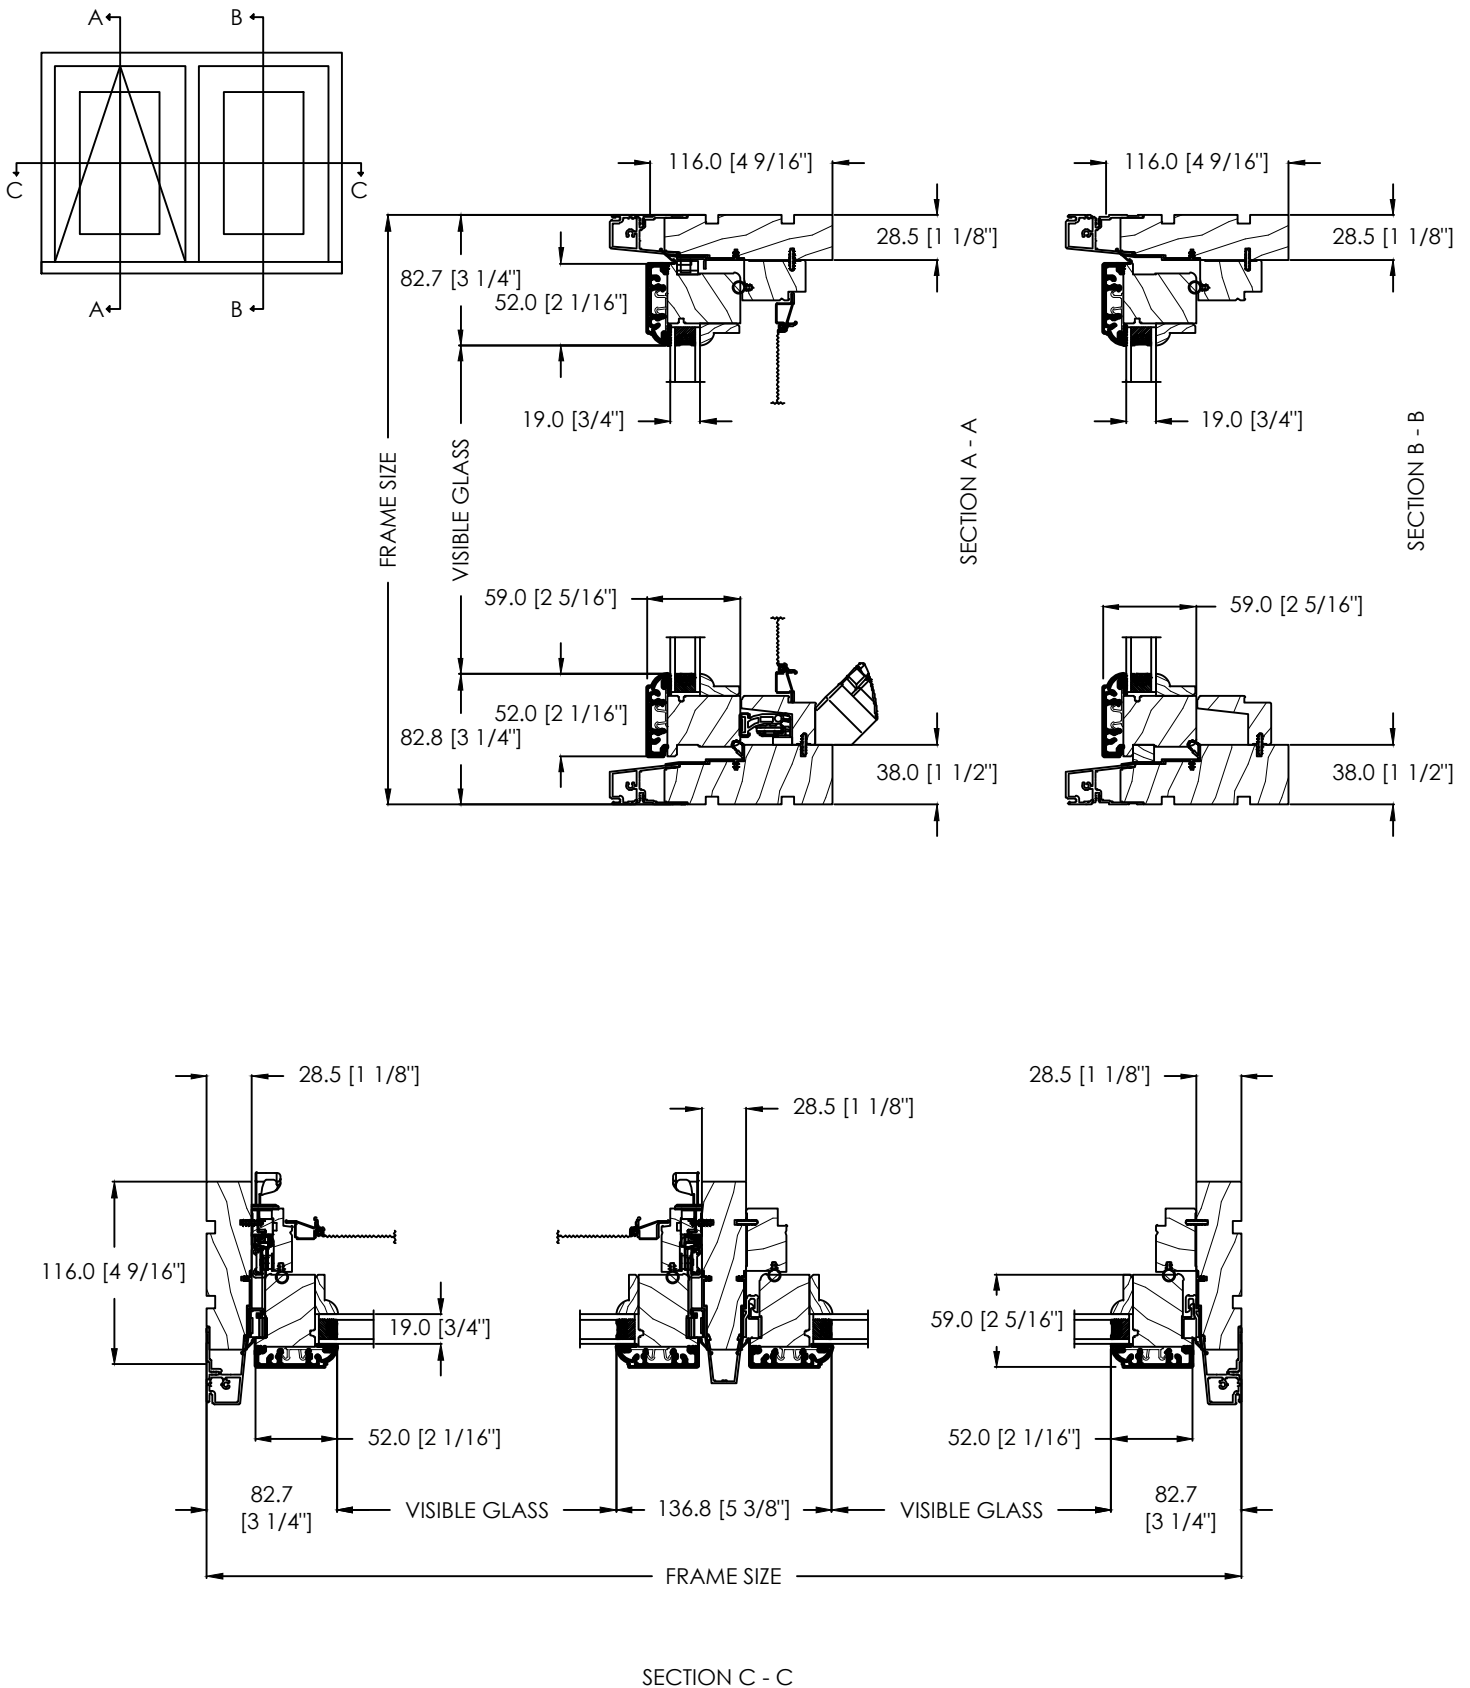

ALUMINIUM CLAD AWNING A-100 WINDOW (2 1/4" SASH, 4 9/16" FRAME)

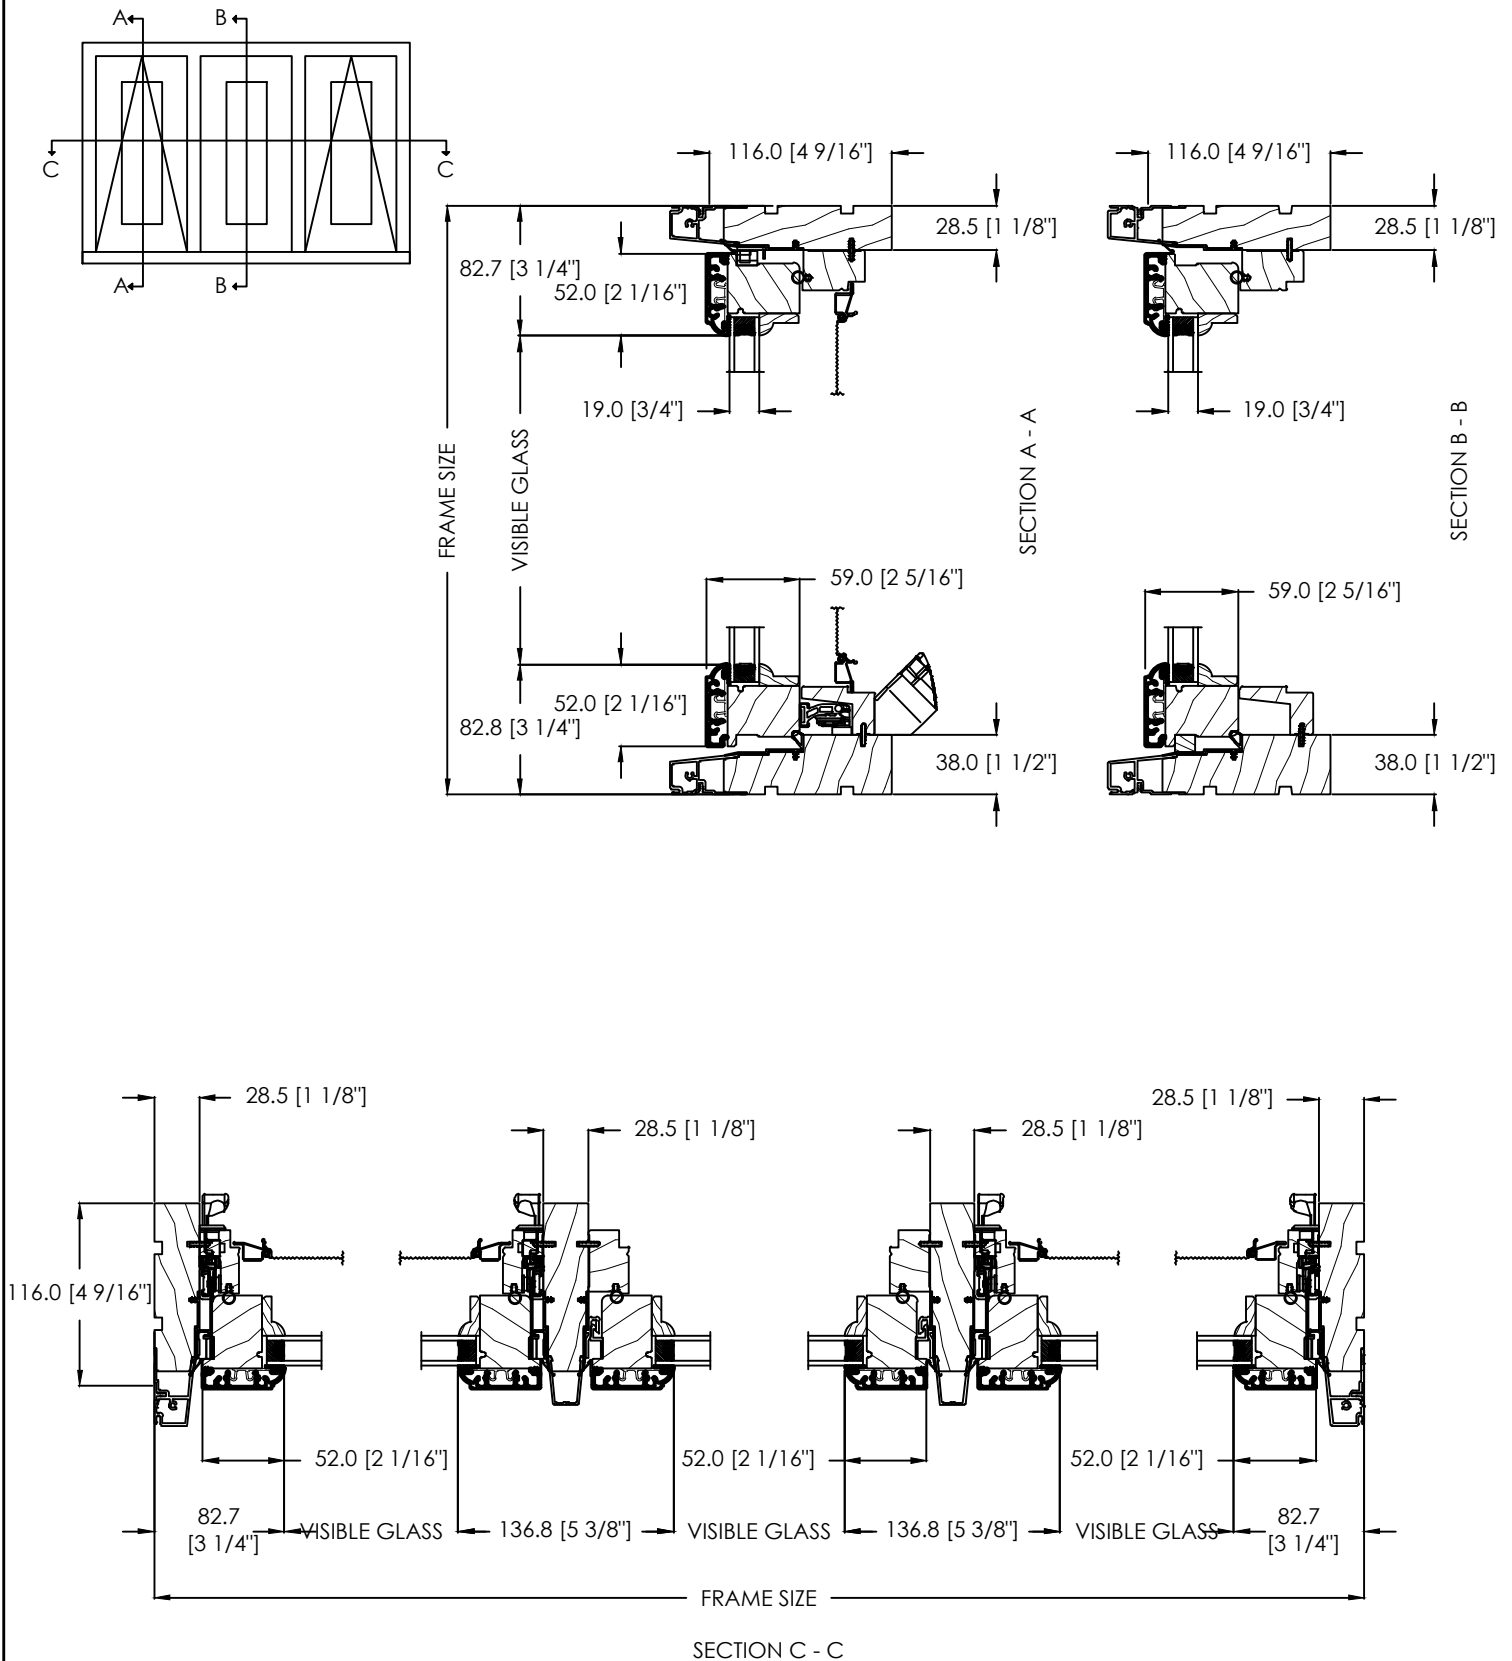


ALUMINIUM CLAD AWNING A-100 WINDOW (2 1/4" SASH, 6 9/16" FRAME)




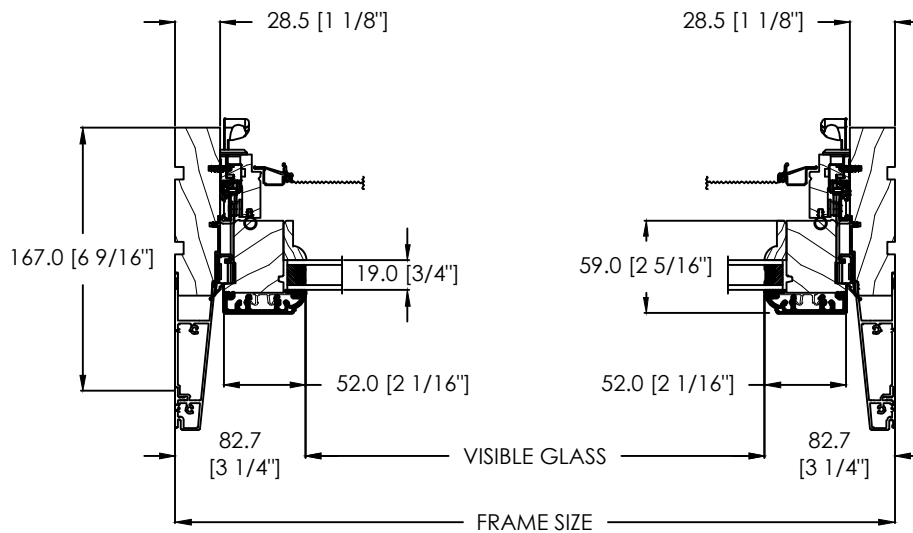
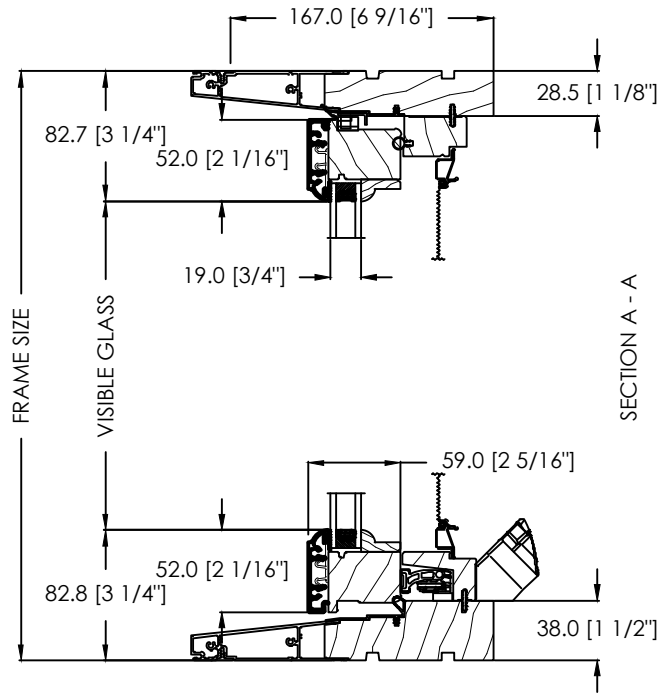
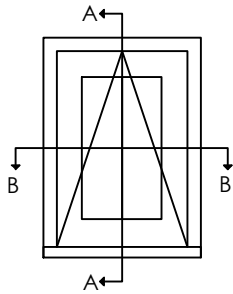


SECTION B - B


ALUMINIUM CLAD AWNING A-100 WINDOW (2 1/4" SASH, 6 9/16" FRAME)

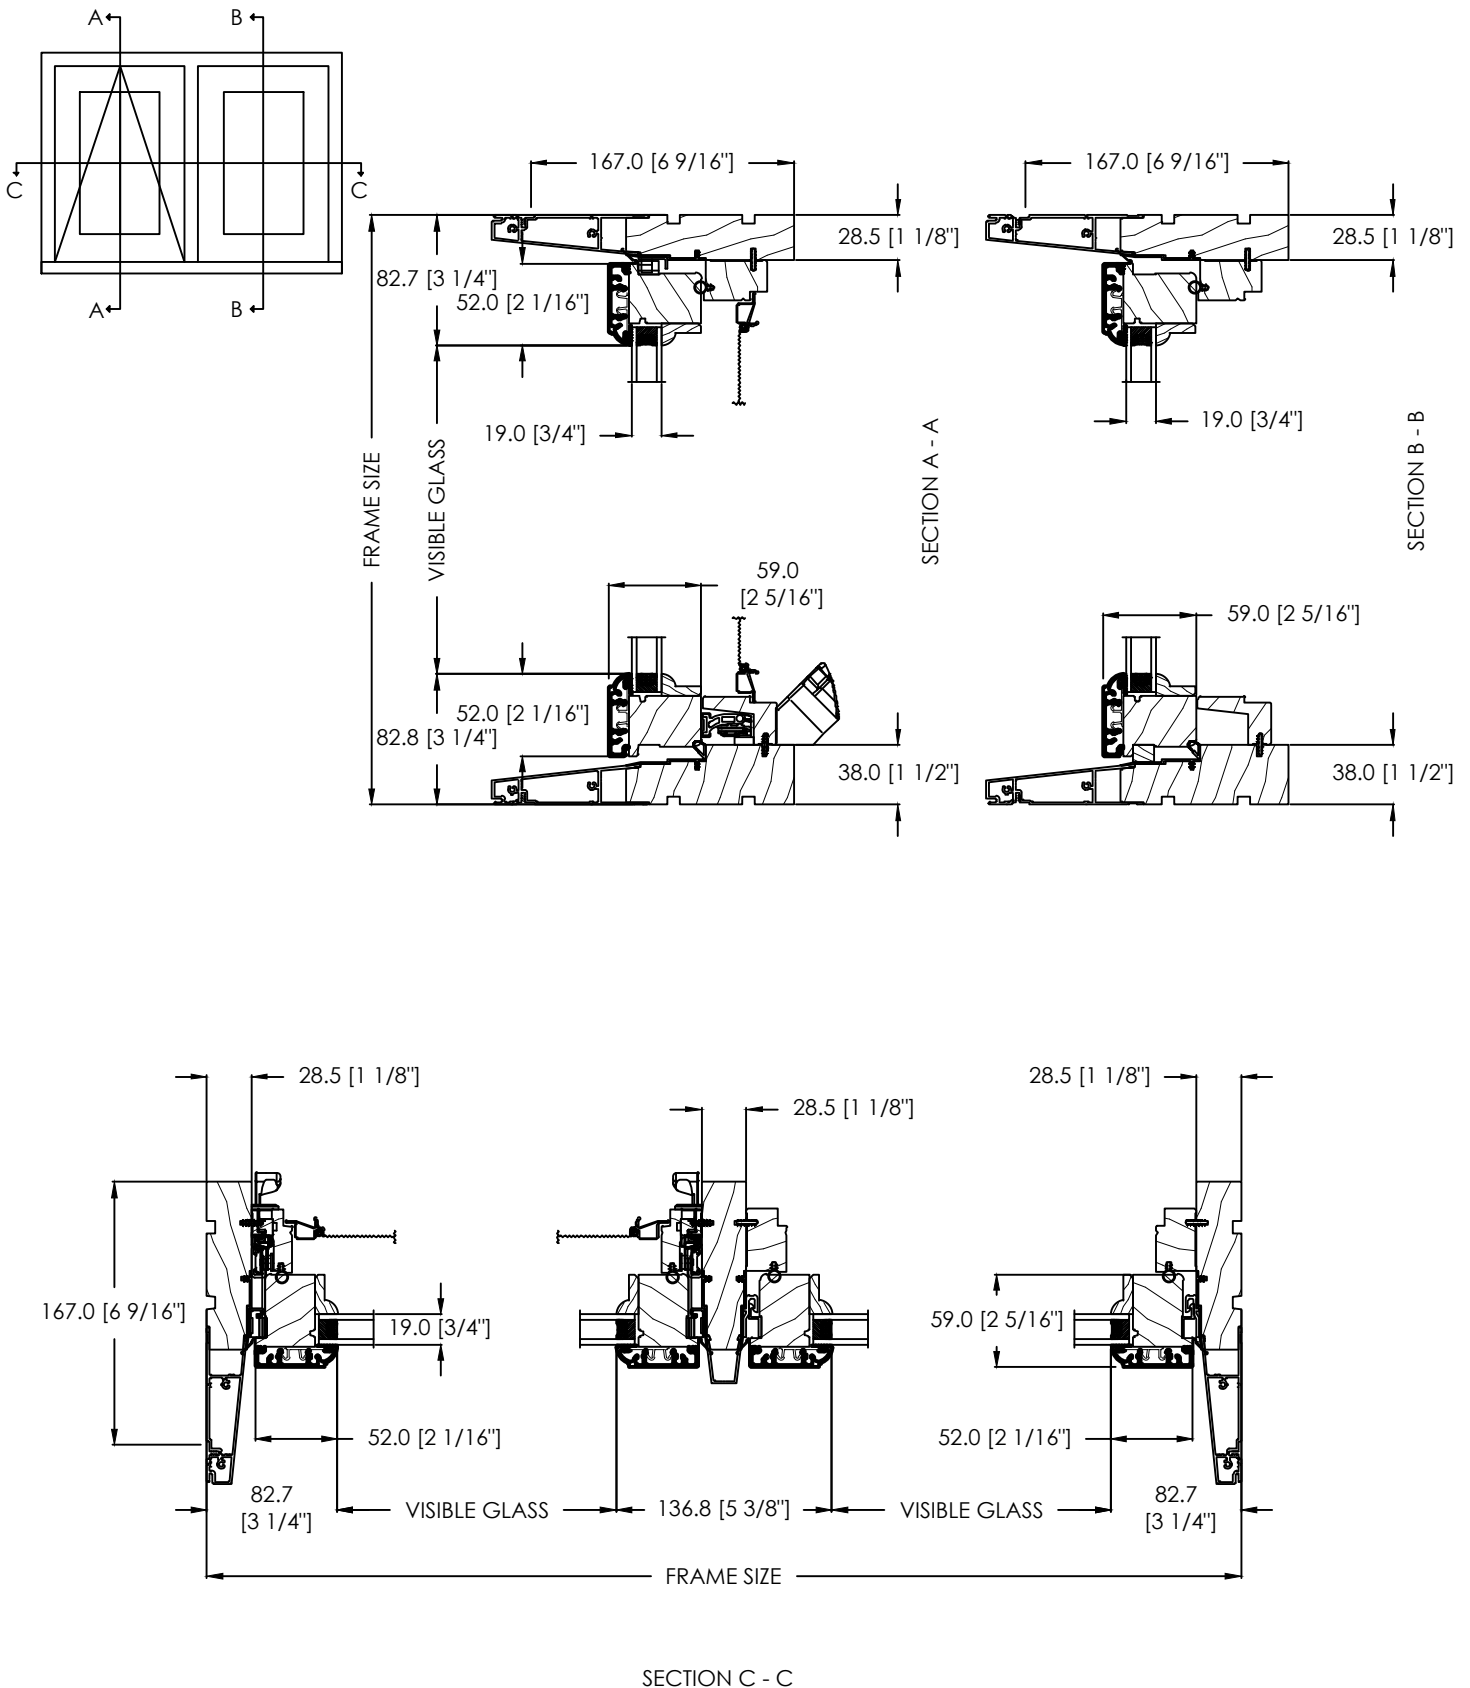





ALUMINIUM CLAD AWNING A-100 WINDOW (2 1/4" SASH, 6 9/16" FRAME)

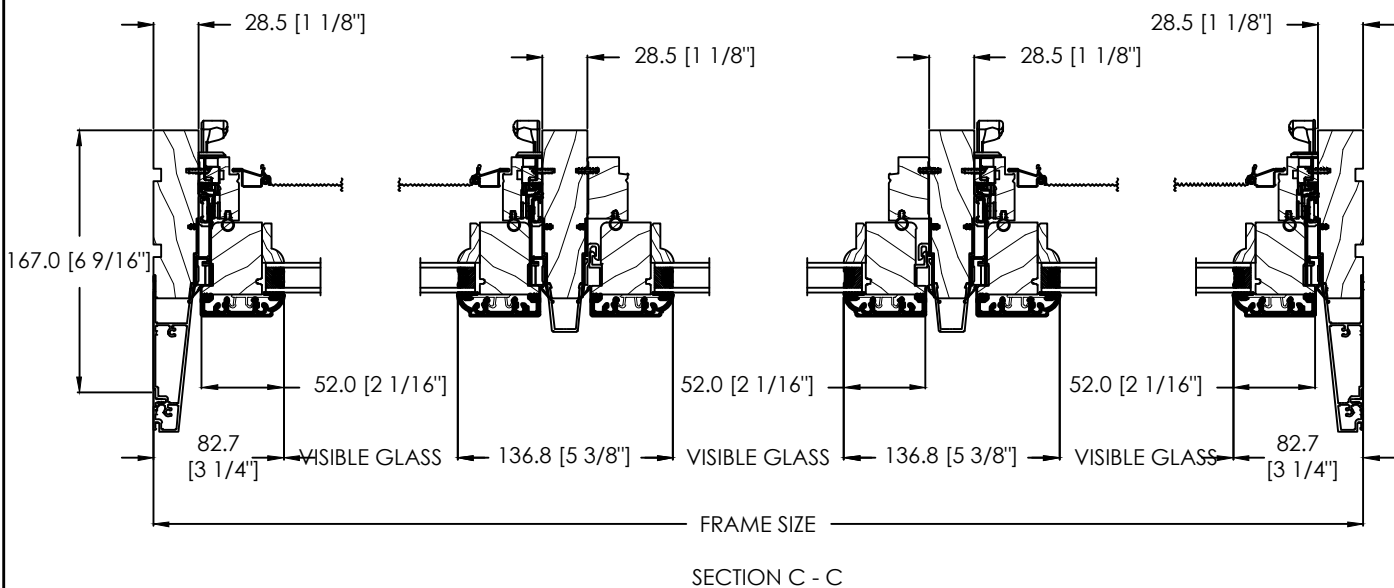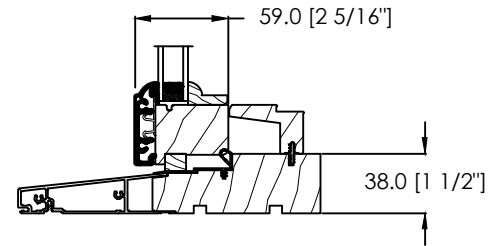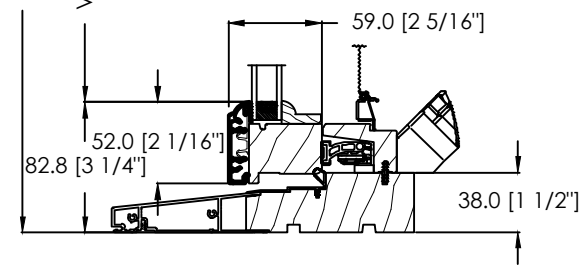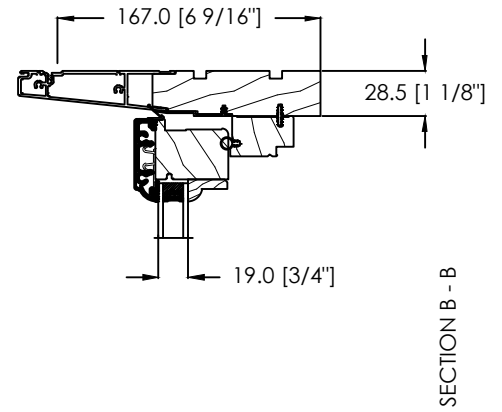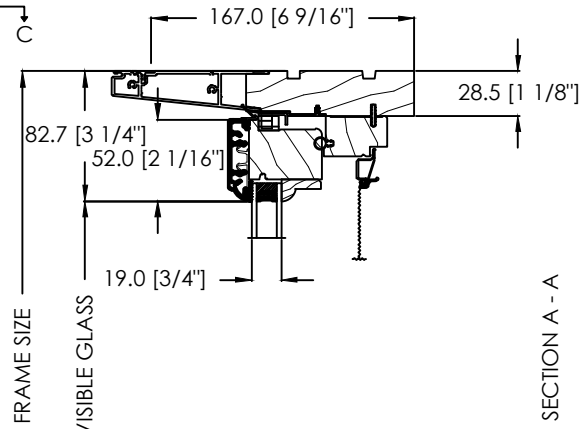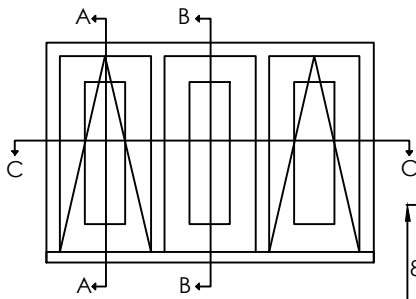





TRIPLE INSULATING GLASS OPTION

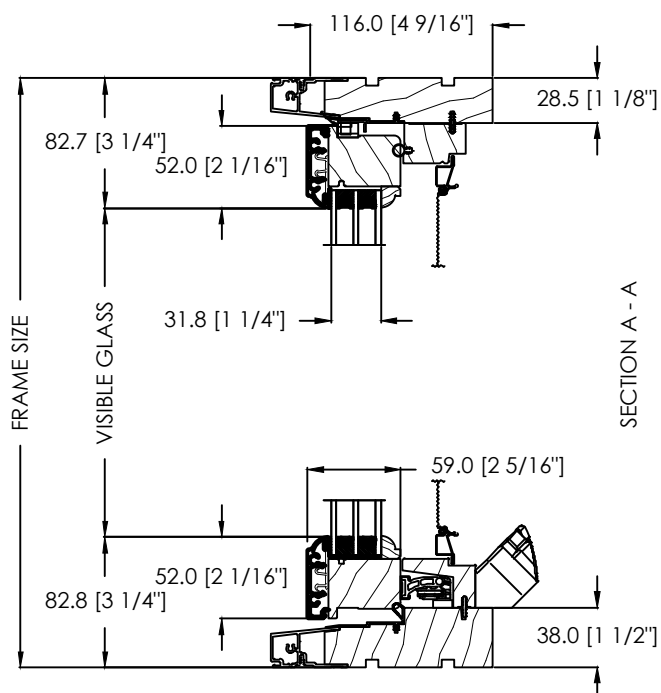


ALUMINIUM CLAD AWNING A-100 WINDOW (1 3/4" SASH, 4 9/16" FRAME)
FIXED SASH TRANSOM

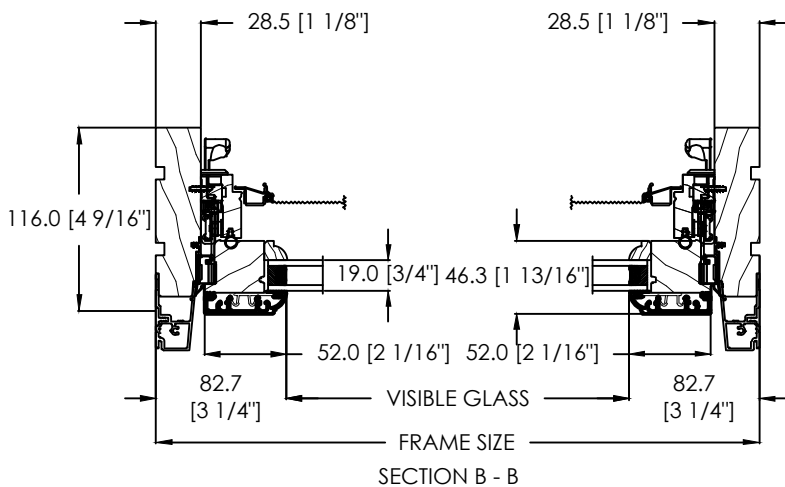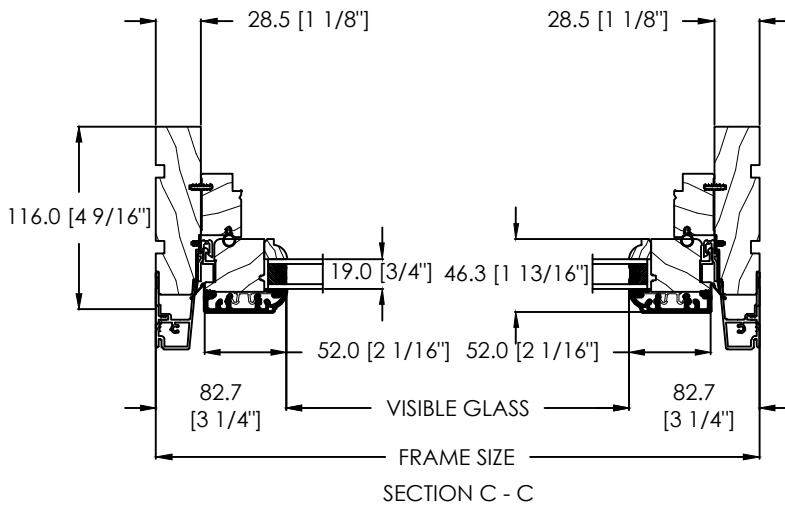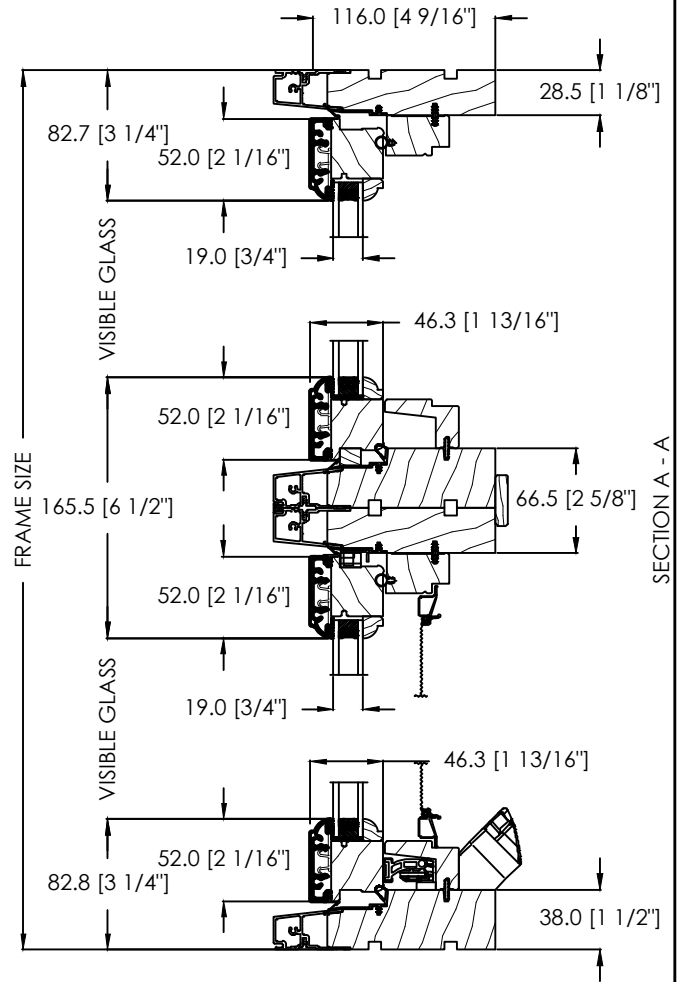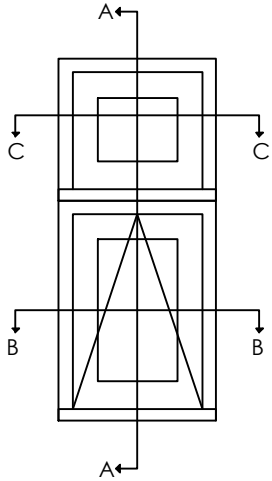


ALUMINIUM CLAD AWNING A-100 WINDOW (1 3/4" SASH, 4 9/16" FRAME)
DIRECT SET TRANSOM

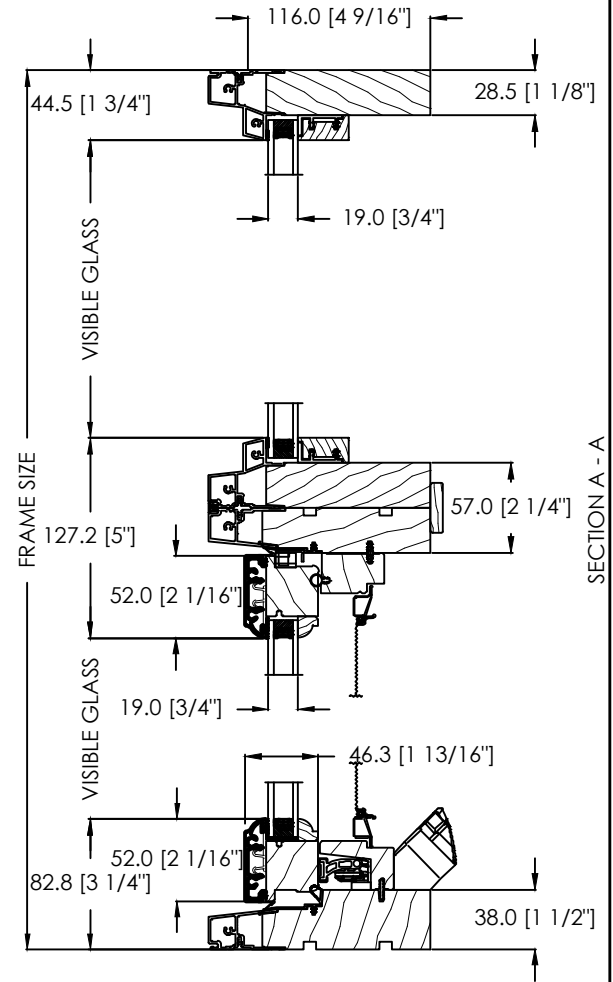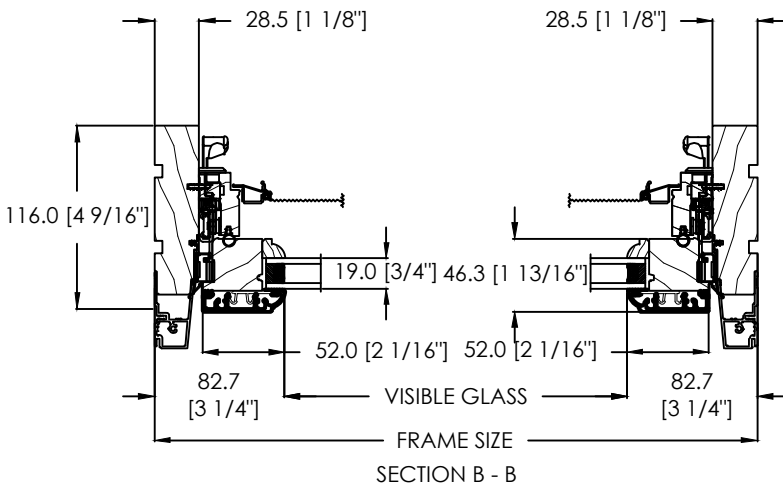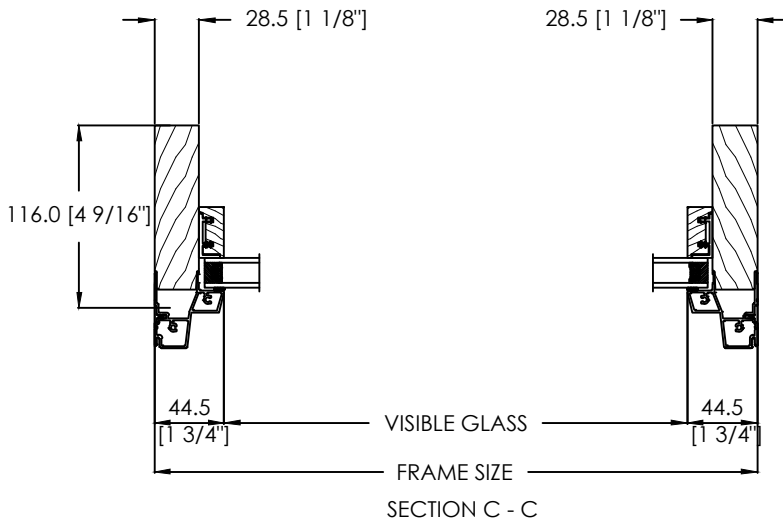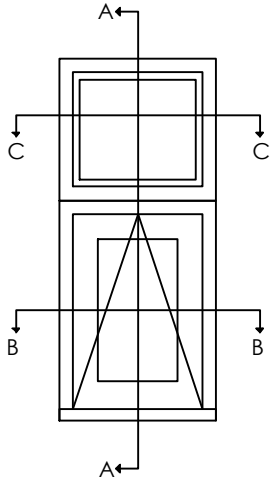


ALUMINIUM CLAD AWNING A-100 WINDOW
INTERIOR EXTENSIONS AND BRICKMOULD OPTIONS

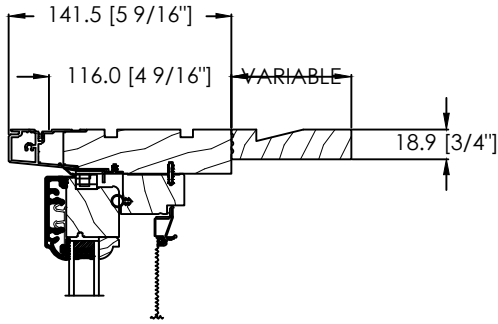


INTERIOR EXTENSION

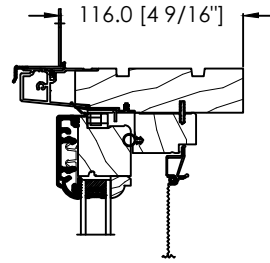


NAILING FIN

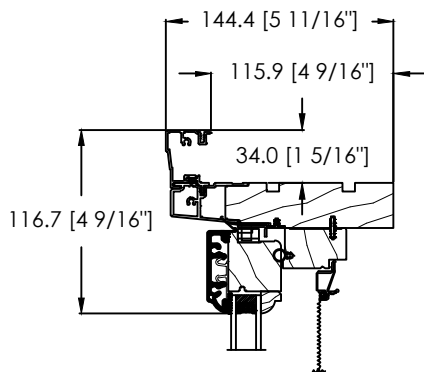


ALUMINIUM CLAD 908 BRICKMOULD

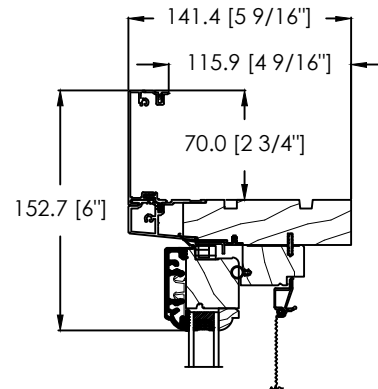


ALUMINIUM CLAD 2 3/4" FLAT BRICKMOULD D-066

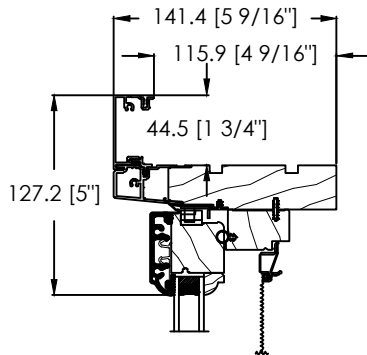


ALUMINIUM CLAD 1 3/4" FLAT BRICKMOULD D-116

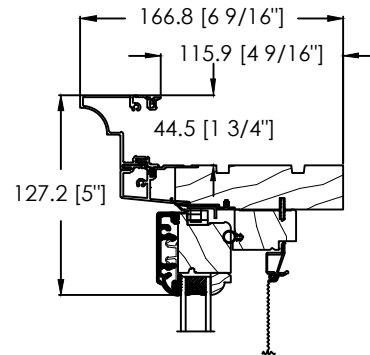

ALUMINIUM CLAD SKYLER BRICKMOULD D-174

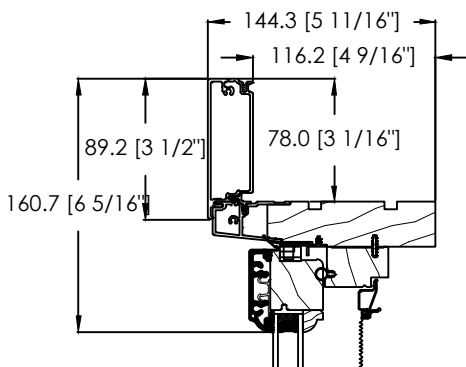


ALUMINIUM CLAD 3 1/2" FLAT BRICKMOULD D-050

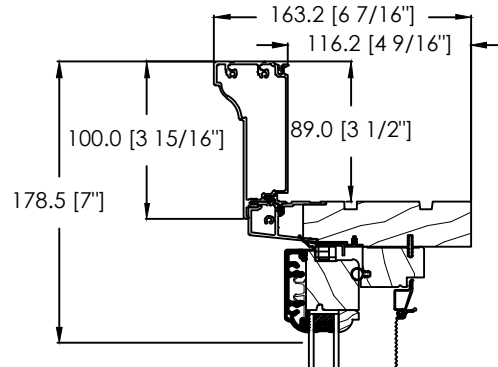


ALUMINIUM CLAD BACK BEND BRICKMOULD D-090

ALUMINIUM CLAD AWNING A-100 WINDOW
SILL NOSING OPTIONS




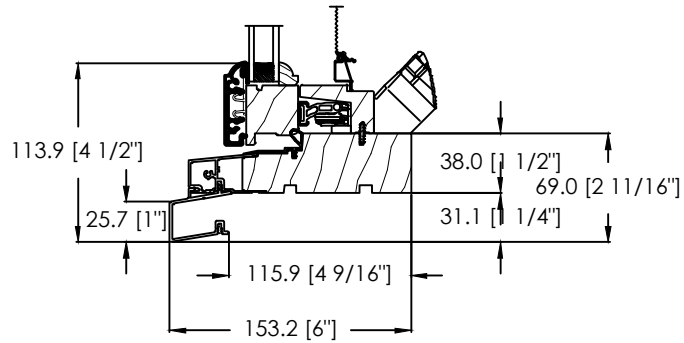


STANDARD 1 1/4" SILL NOSING D-082




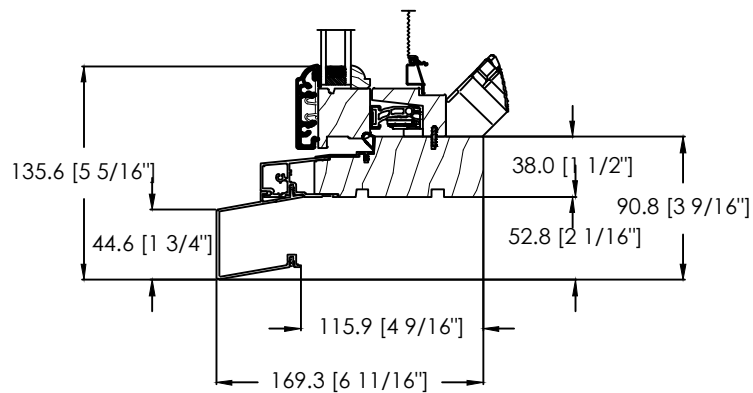


HISORIC SILL NOSING D-083

ALUMINIUM CLAD AWNING A-100 WINDOW
SCREEN OPTIONS

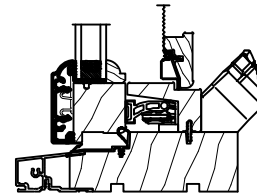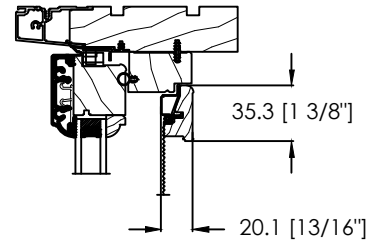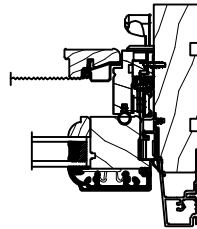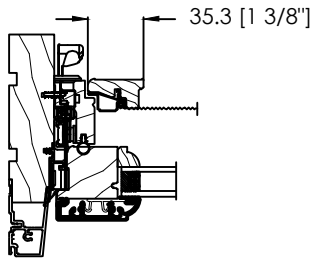

WOOD SCREEN OPTION

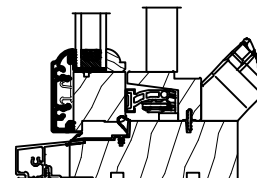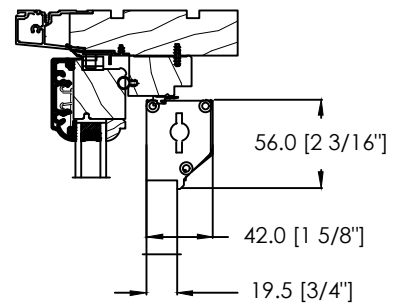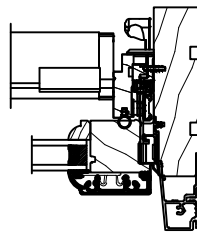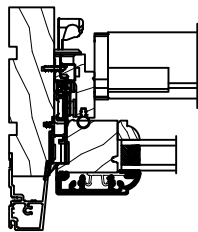

RETRACTABLE SCREEN OPTION

ALUMINIUM CLAD AWNING A-100 WINDOW
SASH AND GLASS STOP MODELS - 1 3/4" SASH



COLONIAL SASH & GLASS STOP



COLONIAL SASH & SQUARE GLASS STOP





CONTEMPORARY SASH & COLONIAL GLASS STOP





CONTEMPORARY SASH & SQUARE GLASS STOP



ALUMINIUM CLAD AWNING A-100 WINDOW
SASH AND GLASS STOP MODELS - 2 1/4" SASH





COLONIAL SASH & GLASS STOP





COLONIAL SASH &
SQUARE GLASS STOP





COLONIAL SASH &
DAVIS GLASS STOP



CONTEMPORARY SASH &
COLONIAL GLASS STOP




CONTEMPORARY SASH &
SQUARE GLASS STOP




CONTEMPORARY SASH &
DAVIS GLASS STOP


ALUMINIUM CLAD AWNING A-100 WINDOW
HORIZONTAL MULLING OPTIONS

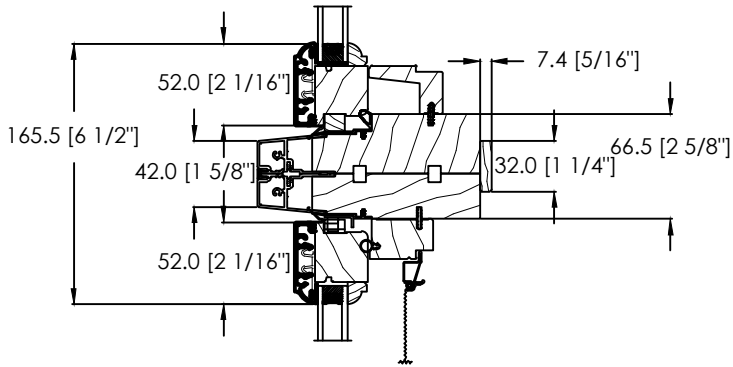


FIXED OVER OPERATING TIGHT MULL

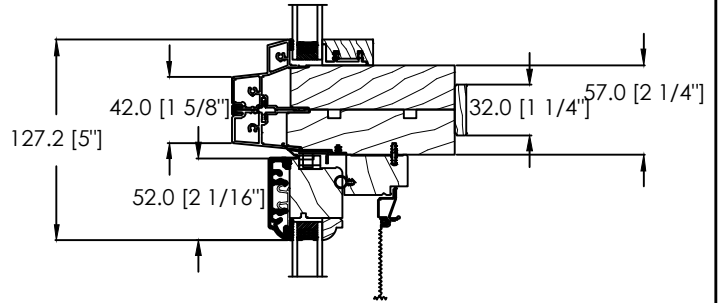


DIRECT SET OVER OPERATING TIGHT MULL

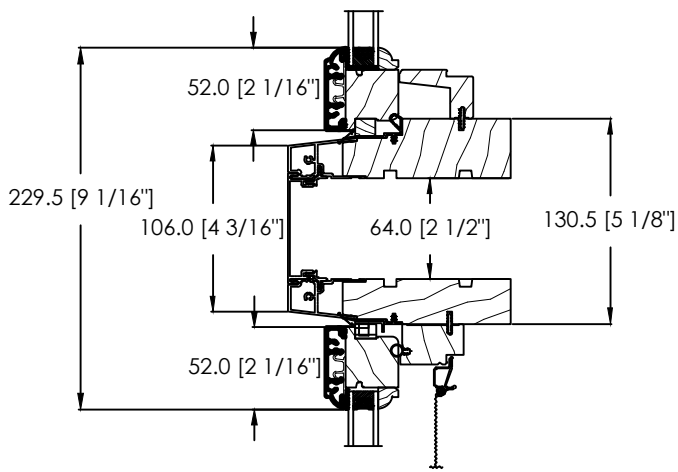


2 1/2" SPACE MULL OR STUD POCKET

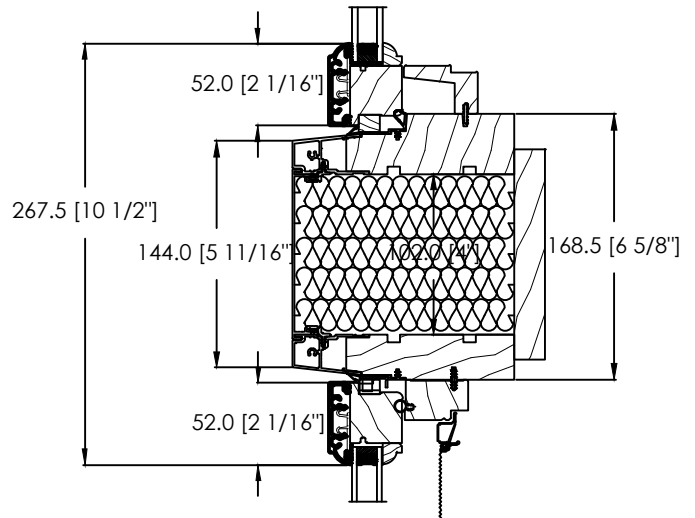

4" INSULATED SPACE MULL OR STUD POCKET

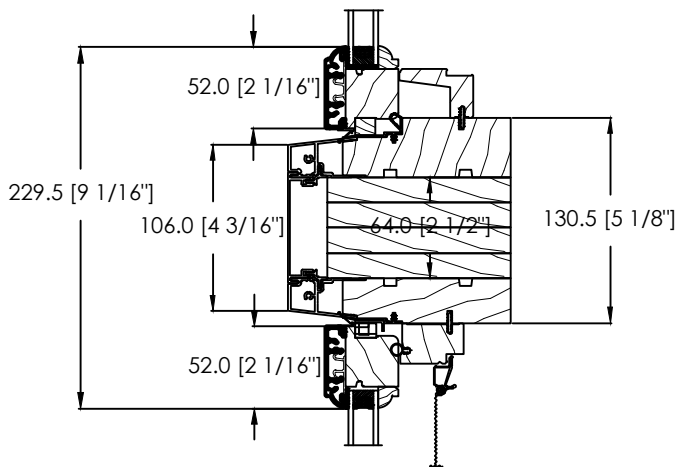


2 1/2" SOLID SPACE MULL OR STUD POCKET

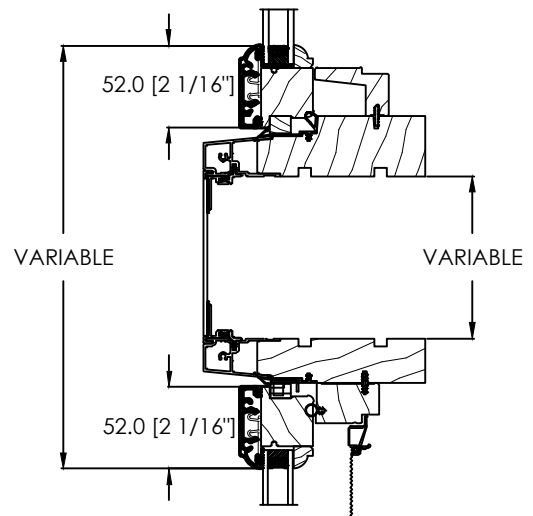


CUSTOM SPACE MULL OR STUD POCKET
8" MAXIMUM


ALUMINIUM CLAD AWNING A-100 WINDOW
VERTICAL MULLING OPTIONS

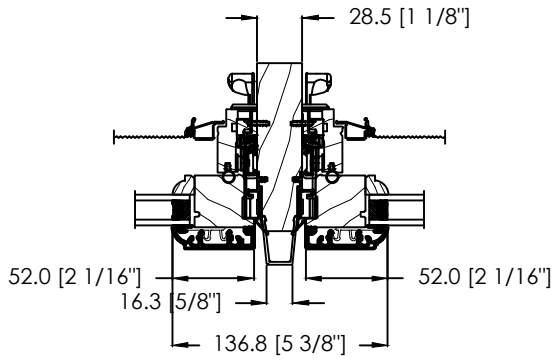


2 WIDE OPERATING STANDARD STRUCTURAL MULL

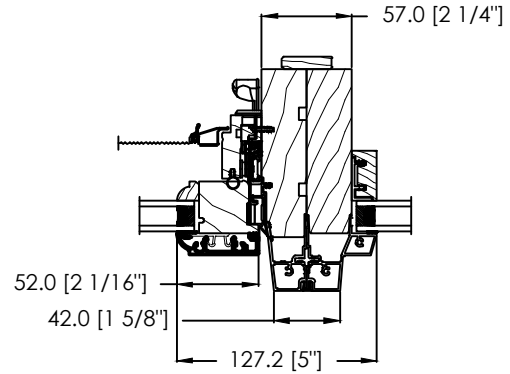


OPERATING, DIRECT SET MODULAR MULL

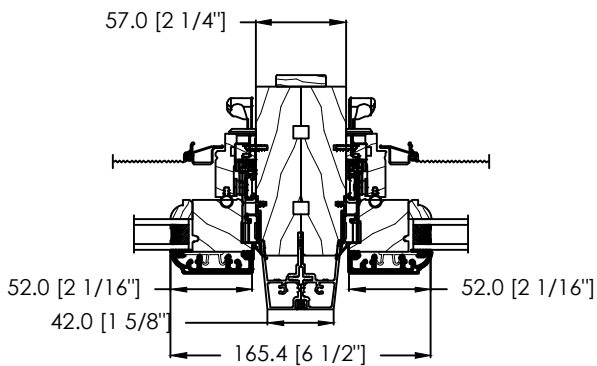


2 WIDE OPERATING STANDARD MODULAR MULL

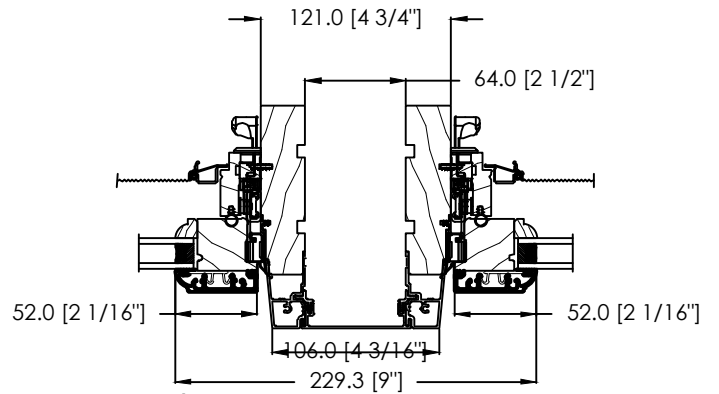


2 1/2" SPACE MULL OR STUD POCKET

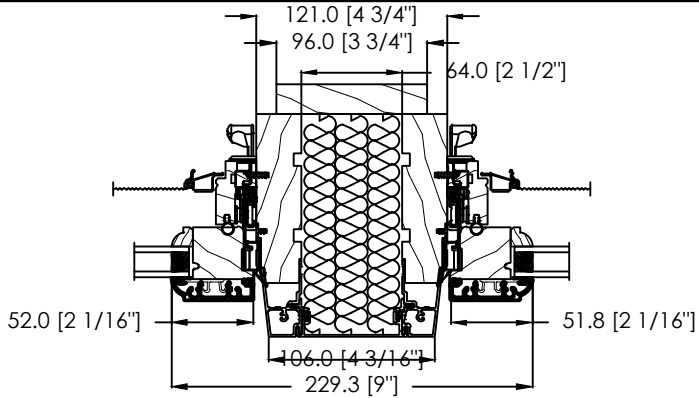


2 1/2" INSULATED SPACE MULL OR STUD POCKET

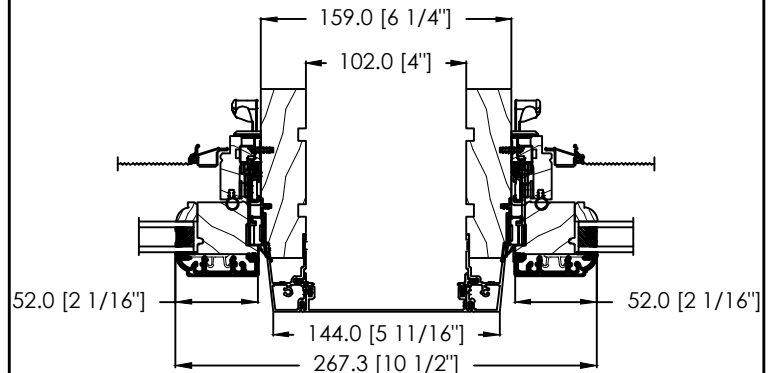

4" SPACE MULL OR STUD POCKET

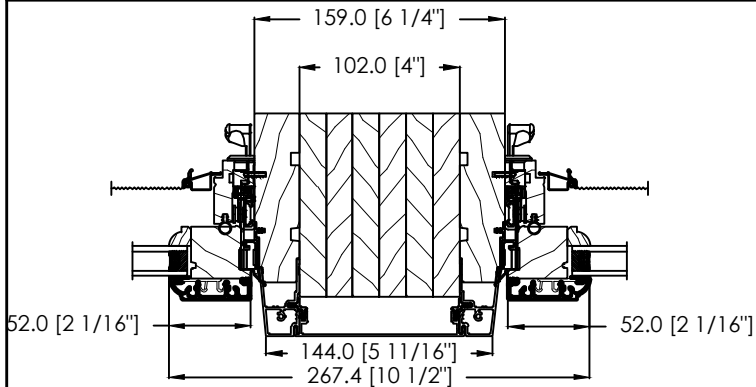


4" SOLID SPACE MULL OR STUD POCKET

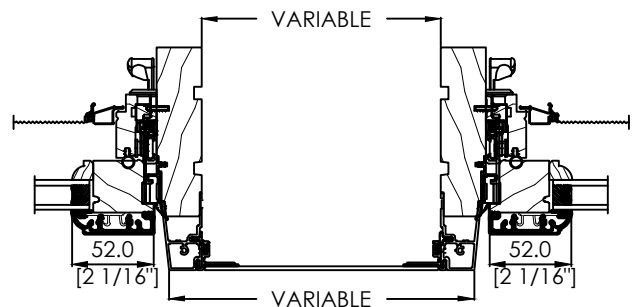


CUSTOM SPACE MULL OR STUD POCKET
8" MAXIMUM


ALUMINIUM CLAD AWNING A-100 WINDOW
BAY AND BOW MULLING OPTIONS

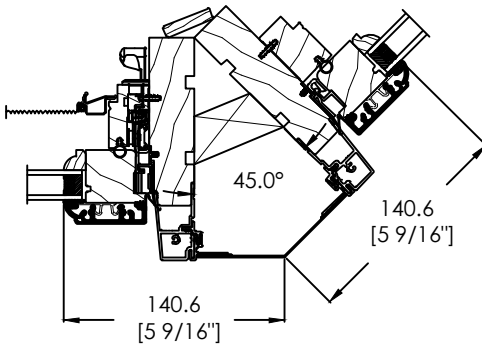


45° BAY STANDARD MULL

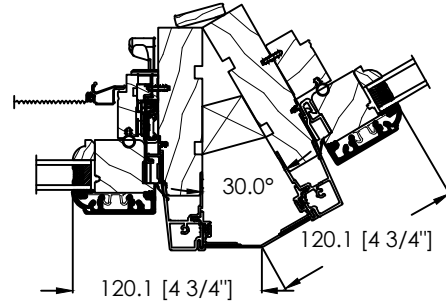

30° BAY STANDARD MULL

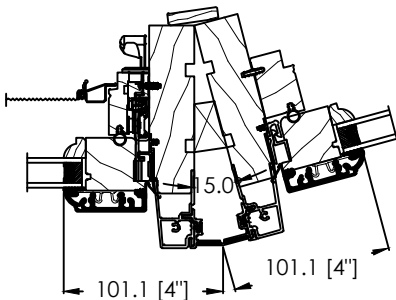

15° BOW STANDARD MULL

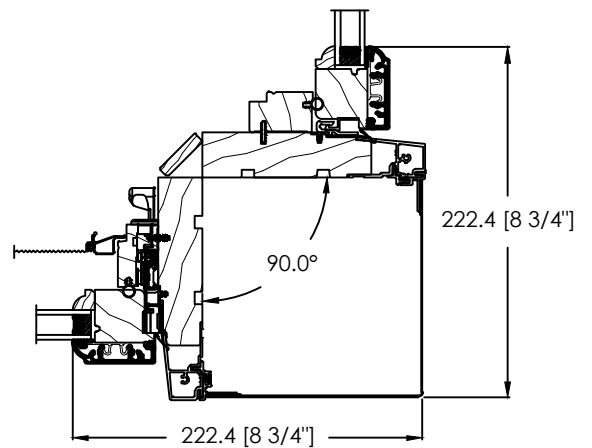

90° BOX BAY STANDARD MULL

ALUMINIUM CLAD AWNING A-100 WINDOW
GRIDS OPTIONS

SEE LINK BELOW FOR GRIDS :

CAD FILE http://www.lepagemillwork.com/download/Info-Tech_Grid_Options.dwg

PDF FILE http://www.lepagemillwork.com/download/Info-Tech_Grid_Options.pdf